




PhoneEasy 311C

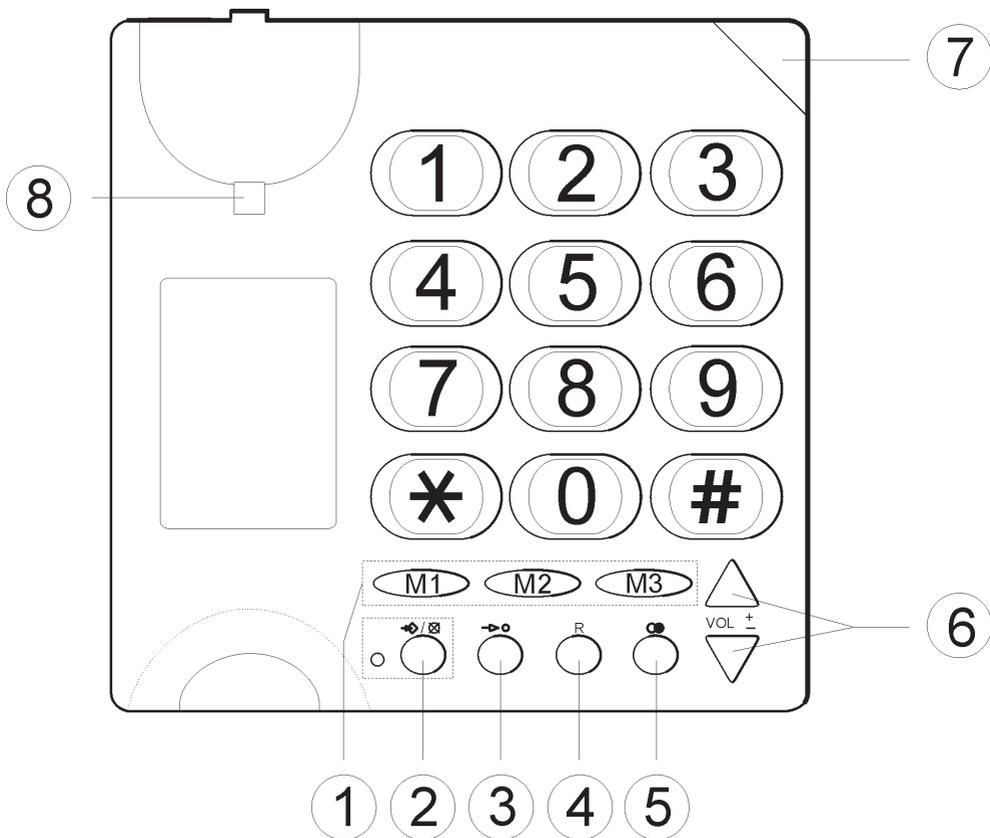

English

- | | | | |
|---|---------------------------------------|---|-------------------------|
| 1 | One Touch (Direct) Memories | 4 | Recall button |
| 2 | Store/Mute button and indicator light | 5 | Redial button |
| 3 | Memory button | 6 | Earpiece Volume control |
| | | 7 | Visual Ring indicator |
| | | 8 | Handset hanger hook |

This device is intended for the analogue telephone network lines in AT, BE, BG, CH, CY, CZ, DE, DK, EE, ES, FI, FR, GB, GR, HU, IE, IS, IT, LV, LT, LU, MT, NL, NO, PL, PT, RO, SI, SK, SE.

Connection

1. Connect the handset curly cord to the handset and the socket on the left-hand side of the telephone.
2. Connect the telephone line cord to the socket at the rear of the telephone, and to a telephone network wall socket.
3. You will hear a click when the modular plug is correctly in place.
4. Lift the handset and listen for the dial tone. Your telephone is now operational.

Wall mounting

The telephone can be wall mounted using two screws positioned vertically at a distance of 100 mm, the screws should fit into the 'keyholes' on the back of the telephone. Remove the hanger hook (please refer to diagram on page 2) by pushing it upwards, then rotate it 180 degrees and replace it.

Hearing Aid compatible

This telephone is hearing aid compatible. Select the 'T' mode on your hearing aid to enable this feature.

Mute button

Press and release  to mute the handset microphone during a call, the light next to the button will flash while the microphone is muted. Press and release  again to continue with your telephone conversation.

Redial button

If the number dialled is engaged or you wish to dial the last number called lift the handset and press and release . Redial will not work if the number dialled was from memory (i.e. M1, M2, M3 or 0-9).

Memory

The telephone has 3 one-touch and 10 two-touch memories. One-touch memories are stored in M1, M2 & M3, two touch memories are stored using the telephone keypad digits 0-9.

Storing One-touch Memories

1. Lift the handset, press and release  (ignore anything you hear in the earpiece).
2. Select a memory location M1, M2 or M3 by pressing the corresponding button.
3. Enter the telephone number to be stored (up to 21 digits).
4. Press and release  again.
5. Replace the handset. The number is now stored.

Dialling using One-touch Memories

1. Lift the handset and wait for a dialling tone.
2. Select a memory location by pressing the corresponding memory button (M1, M2 or M3). The stored number will now be dialled.

Storing Two-touch Memories

1. Lift the handset, press and release  (ignore anything you hear in the earpiece).
2. Press and release  .
3. Select a memory location by pressing one of the keypad number buttons **0** - **9**.
4. Enter the telephone number to be stored (up to 21 digits).
5. Press and release  again.
6. Replace the handset. The number is now stored.

Dialling using Two-touch Memories

1. Lift the handset and wait for a dialling tone.
2. Press and release  .
3. Select a memory location by pressing the relevant keypad number **0** - **9**. The stored number will now be dialled.

Press and release  if you need to insert a pause in a telephone number. The name or number stored in memory can then be entered on the memo list if wished. If a stored number changes, follow the procedures above entering the new number in the same location as the old one.

Earpiece Volume control

During a conversation press and release either  to increase or  to decrease the earpiece volume.

Ringer

1. Lift the handset (ignore anything you hear in the earpiece). Press and release .
2. Press and release **#**.
3. Select a ringer and melody by pressing the number keys **0-9** (please refer to the table below).
4. Press and release . Replace the handset.

Key/setting	Melody type	Ringer volume
1	Melody A	Low
2	Melody A	Normal
3	Melody A	High
4	Melody B	Low
5	Melody B	Normal
6 (factory setting)	Melody B	High
7	Melody C	Low
8	Melody C	Normal
9	Melody C	High
0	Off *	-

** If you select 0 the ringer will be turned off until the handset is lifted. After that, the ringer will revert to the previous setting.*

Guarantee

This product is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a fault occurring during this period, please return the item with a copy of the purchase receipt to the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee shall not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the users' part. Furthermore, this guarantee shall not apply to a fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the telephone during a thunderstorm.

Batteries are consumables and are not included in any guarantee.

This guarantee does not apply if other batteries than DORO original batteries have been used.

Declaration of conformity

Doro hereby declares that the product Doro PhoneEasy 311C conforms to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC and 2002/95/EC. A copy of the manufacturer's declaration is available at www.doro.com/dofc

English

Version 3.0

www.doro.com

