

Gate View OpenStage Gate View

Quick Reference Guide

UNIFY

Copyright © Unify Software and Solutions GmbH & Co.
Mies-van-der-Rohe-Str. 6, 80807 Munich/Germany
All rights reserved.
Reference No.: A31003-P1120-U100-4-7619

unify.com

Presentation on an OpenStage 60

Setup

- Contact your administrator for any required software updates and to program keys on the phone. He or she can set up keys for displaying and receiving the video image.



Usage

- Press the **Video On** key. The image of the camera is displayed.



- On receiving a call, the camera image is hidden.



- Press the **Permanent Video** key to continue showing the camera image even during incoming calls.



- Press the **Record Start** key. The current camera video is recorded. (The ability to record must be set up in the system.)

- Record Stop** ends the recording.

- Press the **Video Off** key. The idle display of the phone is shown.



Presentation on an iPhone

Setup

- In order to use OpenStage Gate View on an iPhone, you will need to install the **OpenStage Gate View** App on your iPhone.
- Start the **OpenStage Gate View** App.
- Click **Setup** and then **Edit**.
- Under **Account**, enter the IP address, user name and password for accessing the OpenStage Gate View server. These details will be provided to you by your administrator.



If the status "**connected**" appears under **Info**, the setup has completed successfully.

Alternatively, you can also set up the App on an iPad.

Usage


- Start the **OpenStage Gate View** App.



- Click **Video**. You will see all available cameras with their thumbnails in an overview.



- Click on one of the camera images. The image of the selected camera is displayed.
- Click on **Gate View** to exit the live image and return to the overview.

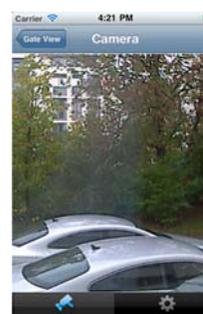

Presentation on the Web Client

Setup

No setup is needed to use OpenStage Gate View on the web client.

Usage

- Enter the IP address of the OpenStage Gate View server using the following URL:
http://<IP address>:8008 or **https://<IP address>:8009**
- If you are using the plug-PC variant, open the following URL:
http://<IP address> or **https://<IP address>**
- Enter the user name and password required to access the OpenStage Gate View Server and click **Login**. These details will be provided to you by your administrator.
- You see all available cameras, with their names in a list.
- Click on one of the camera names.



- The image of the selected camera is displayed.
- Click **Back** to exit the live image and return to the list.
- Click **Logout** to exit OpenStage Gate View.

