 


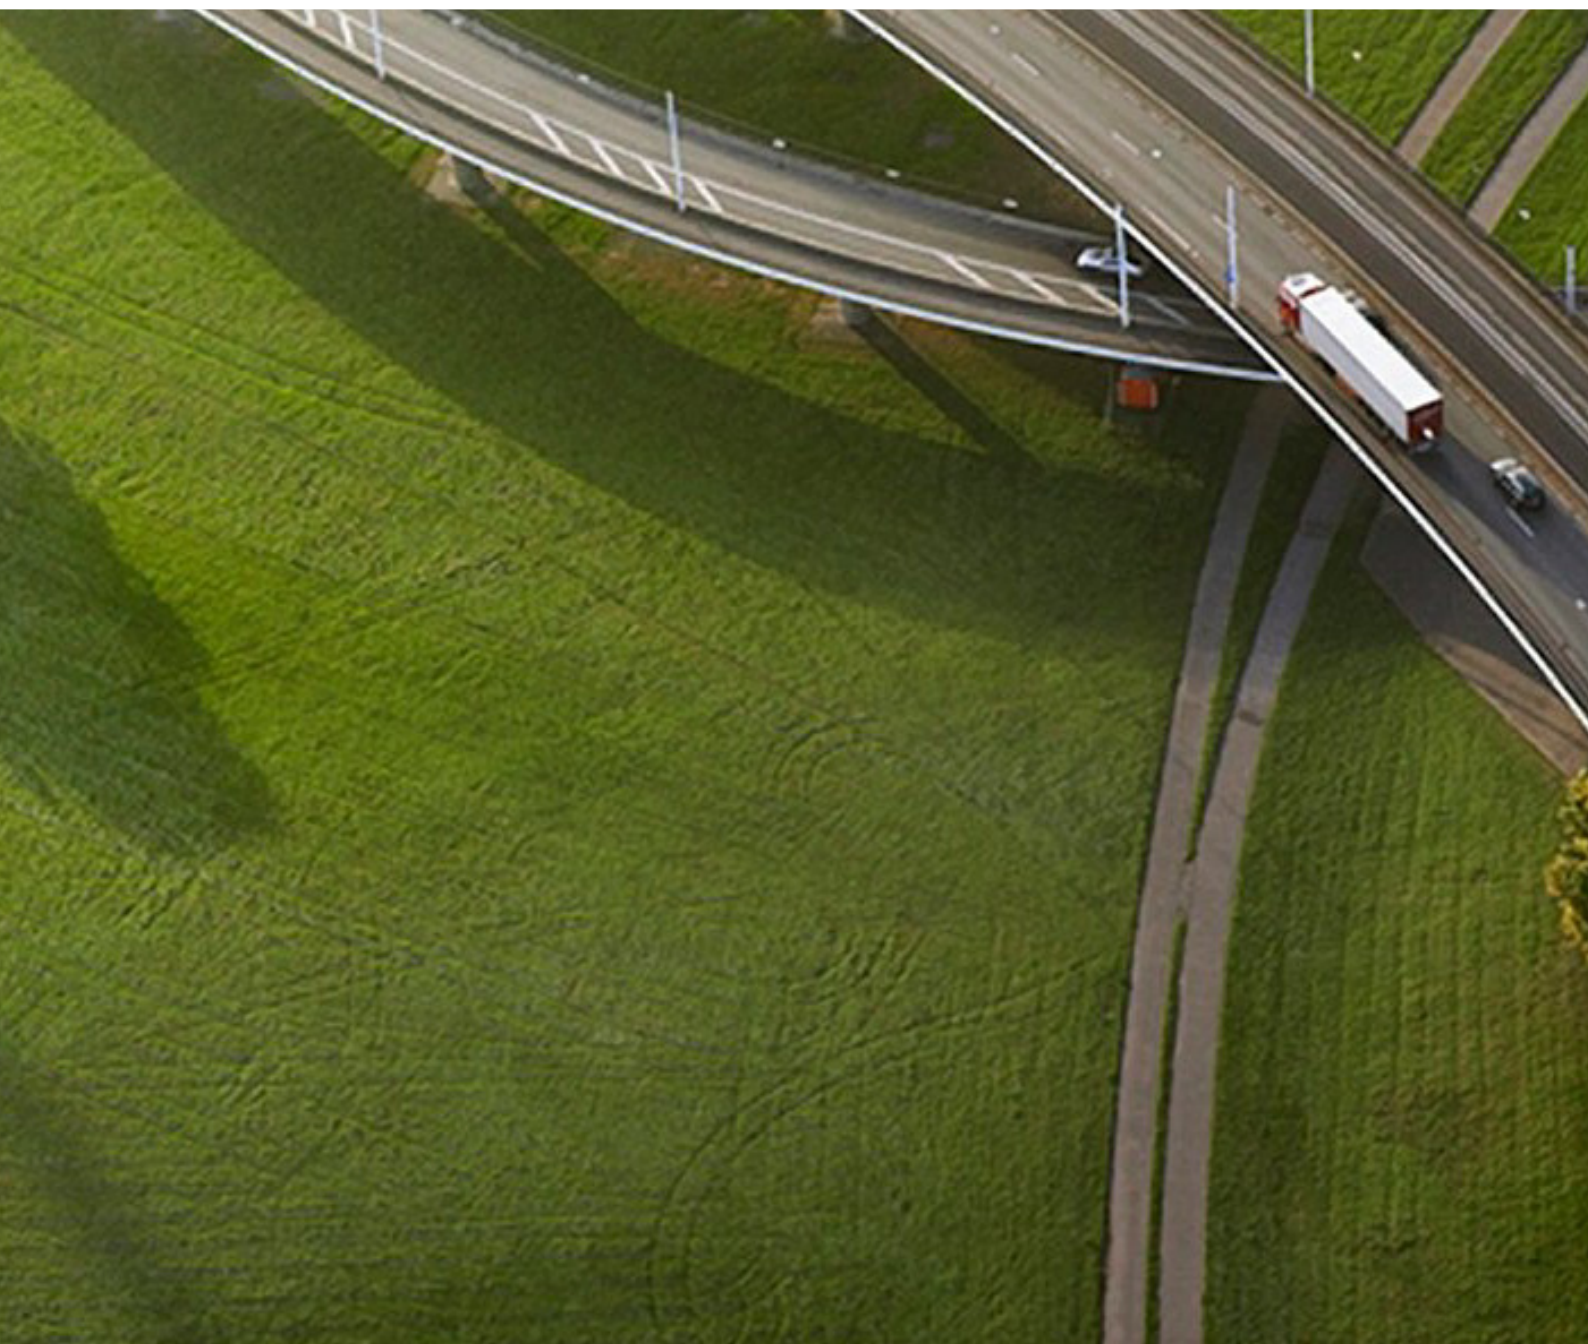

OpenScape Desk Phone CP200T OpenScape Business

User & Administrator Guide

A31003-C1010-U100-1-7619

Provide feedback to further optimize this document to edoku@unify.com.

As reseller please address further presales related questions to the responsible presales organization at Unify or at your distributor. For specific technical inquiries you may use the support knowledgebase, raise - if a software support contract is in place - a ticket via our partner portal or contact your distributor.

Our Quality and Environmental Management Systems are implemented according to the requirements of the ISO9001 and ISO14001 standards and are certified by an external certification company.

Copyright © Unify Software and Solutions GmbH & Co. KG 09/2019

All rights reserved.

Reference No.: A31003-C1010-U100-1-7619

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products. An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract.

Availability and technical specifications are subject to change without notice.

Unify, OpenScape, OpenStage and HiPath are registered trademarks of Unify Software and Solutions GmbH & Co. KG. All other company, brand, product and service names are trademarks or registered trademarks of their respective holders.

Important information

	Never open the telephone. Should you encounter any problems, consult your administrator.
	Use only original accessories. The use of other accessories is hazardous and will render the warranty, extended manufacturer's liability and the CE and other markings invalid.

Trademarks

 The device conforms to the EU Directive as attested by the CE marking. The CE Declaration of Conformity and, where applicable, other existing declarations of conformity as well as further information on regulations that restrict the usage of substances in products or affect the declaration of substances used in products can be found in the Unify Expert WIKI at <http://wiki.unify.com/> http://wiki.unify.com in the section "Declarations of Conformity".



The adjacent symbol indicates that any electrical and electronic products installed and sold in countries of the European Union to which the WEEE2 Directive 2012/19/EU applies should be disposed of separately from the municipal waste stream in appropriate collection systems.

Information concerning the proper disposal of your Unify product in the business-to-business market segment is available from your local sales representative in Unify or partner sales.

Care and cleaning instructions

- Never spray the phone with liquids as the penetrating fluids can lead to malfunctions or may damage the device.
- Do not use substances such as alcohol, chemicals, solvents or scouring agents, as these substances can lead to surface damage.
- Clean the phone with a soft and slightly damp cloth.

Product support on the Internet

This document along with additional information is available online at: <http://www.unify.com/> → Support.

Technical notes, current information about firmware updates, frequently asked questions and lots more can be found on the Internet at: <http://wiki.unify.com/>.

Software update

During a software update, the phone must not be disconnected from the power supply unit or the phone line. An update action is indicated by messages on the display and/or by flashing LEDs.

Location of the telephone

- The telephone is designed for operation in a protected environment within a temperature range of 5 °C to 40 °C.
- To ensure good speakerphone quality, the area in front of the microphone (front right) should be kept clear. The optimum speakerphone distance is 50 cm.
- Do not install the telephone in a room where large quantities of dust accumulate; this can considerably reduce the service life of the telephone.
- Do not expose the telephone to direct sunlight or any other source of heat, as this is liable to damage the electronic components and the casing.
- Do not install the telephone in bathrooms or shower rooms.

Contents

Important information 3

Trademarks	3
Care and cleaning instructions	3
Product support on the Internet	3
Software update	3
Location of the telephone	4

General information 10

About this manual	10
Service	11
Intended use	11
Telephone type	11
Speakerphone quality and display legibility	11
Single-line telephone/multi-line telephone	11
Team functions	12

Getting to know the OpenScape Desk Phone CP200T 13

Assembling and Installing the Phone	13
Shipment	13
Assembly	13
Connecting the Phone	13
The user interface of your telephone	14
Navigation keys	17
Programmable function keys	18
Keypad	19
Display	21
Idle mode	21
Mailbox	23
Messages	23
Voicemail	23
Call log	24
Program/Service menu	24

Basic functions 26

Answering a call	26
Answering a call via the handset	26
Answering a call via the loudspeaker (speakerphone mode)	27
Accepting a call via the headset	27
Switching to speakerphone mode	28
Switching to the handset	28
Open listening in a room during a call	29
Turning the microphone on and off	29
Ending a call	29
Making calls	30
Off-hook dialing	30
On-hook dialing	30
Dialing with the headset connected	31

Dialing with DDS keys	31
Redialing a number	31
End call	31
Reject calls	32
Turning the microphone on and off	32
Calling a second party (consultation)	33
Switching to the held party (alternating)	33
Transferring a call	33
Call forwarding	34
Using variable call forwarding	34
Using call forwarding no reply (CFNR)	35
Call forwarding in the carrier network and forwarding multiple subscriber numbers (MSN) (not for U.S.)	36
Using callback	37
Storing a callback	37
Accepting a callback	37
Viewing and deleting a stored callback	38

Enhanced phone functions 39

Answering calls	39
Accepting a specific call for your colleague	39
Using the speakerphone	39
Answering calls from the entrance telephone and opening the door	40
Making calls	42
En-bloc sending/correcting numbers	42
Using the caller list	43
Dialing a number from the internal directory	44
Using the LDAP directory	45
Making calls using system speed-dial numbers	47
Dialing with speed-dial keys	47
Talking to your colleague with a speaker call	48
Talking to your colleague with discreet calling	48
Automatic connection setup (hotline)	49
Reserving a trunk	49
Assigning a station number (not for U.S.)	49
Associated dialing/dialing aid	50
During a call	51
Using call waiting (second call)	51
Preventing and allowing call waiting (automatic camp-on)	52
Turning the call waiting tone on and off	52
Saving a number	52
Parking a call	53
Holding external calls	54
Conducting a conference	55
Activating tone dialing/DTMF suffix-dialing	56
Recording a call	56
Transferring a call after a speaker call announcement in a group	57
Send trunk flash	57
If you cannot reach a destination	58
Call waiting (camp-on)	58
Busy override – joining a call in progress	58
Using night answer	59

Programming function keys 61

List of available functions	61
Programming a key	62
Initiating programming	62
Programming second layer function	63
Configuring a fixed forwarding key	64
Configuring a variable call forwarding key	65
Using programmed keys	66
Example 1: Calling saved number	66
Example 2: Activating/deactivating Call waiting	66
Example 3: Immediate ring	66
Resetting programmed keys	67

Privacy/security 68

Turning ringer cutoff on and off	68
Activating/deactivating "Do not disturb"	68
Caller ID suppression	69
Silent Monitoring/Secret busy override	69
Monitoring a room	70
Trace call: identifying anonymous callers (not for U.S.)	70
Locking the telephone to prevent unauthorized use	71
Locking another telephone to prevent unauthorized use	72
Saving your PIN	72

More functions/services 74

Appointments function	74
Saving appointments	74
Using timed reminders	74
Sending a message	75
Creating and sending a message	75
Viewing and editing incoming messages	75
Leaving an advisory message	76
Deleting advisory messages	76
Displaying the number of waiting calls/overload display	77
Using another telephone like your own for a call	77
Fax details and message on answering machine	77
Changing a number (after exchanging/moving/relocating a phone)	78
Resetting services and functions (system-wide cancellation for a telephone)	78
Activating functions for another telephone	79
Using system functions from outside	
DISA (direct inward system access)	80
Using functions in ISDN via code dialing (keypad dialing)	81
Controlling connected computers/programs/telephone data service	81
Communicating with PC applications over a CSTA interface	82
Controlling relays (OpenScape Business)	83
Sensors (OpenScape Business X3/XS only)	83
Paging persons (not for U.S.)	83

Making calls in the team/executive/secretary configuration . . . 84

Lines	84
-----------------	----

Line utilization	84
Line seizure	84
Trunk keys.	85
Answering calls with the trunk keys	85
Dialing with trunk keys	85
Placing a call on hold on a trunk key and retrieving the held call.	86
Making calls on multiple lines alternately.	86
MULAP conference release	86
Direct station selection key	87
Using DSS keys to answer calls	87
Calling a team member directly	87
Transferring a call in progress	88
Accepting a call for another team member	88
Forwarding calls on trunks	88
Transferring calls directly to the executive phone.	90
Using team functions	91
Activating/deactivating a group call.	91
Accepting a call for another member of your team	92
Ringing group	92
Uniform Call Distribution (UCD)	93
Individual phone configuration	95
Setting contrast	95
Adjusting audio settings	95
Adjusting the receiving volume during a call	95
Adjusting the ring volume.	95
Adjust ring tone	95
Adjusting the attention ring volume	96
Adjusting the speakerphone to the room acoustics	96
Language for system functions	96
Testing the phone	97
Testing functionality	97
Checking the key assignment.	97
Fixing problems	98
Caring for your telephone	98
Troubleshooting	98
Contact partner in case of problems	98
Repair and recycling concept, extending performance capability	
99	
Recycling and disposal of equipment in the OpenScape Desk Phone family.	99
Repair reliability and spare part supply.	99

Extending performance capability 99

Index 102

General information

About this manual

This document contains general descriptions of the technical options, which may not always be available in individual cases. The required features must therefore be individually defined in the terms of the contract.

If a particular function on your phone is not available to you as described, this may be due to one of the following reasons:

- The function is not configured for you and your telephone. Please contact your system administrator.
- Your communication platform does not feature this function. Please contact your Unify sales partner for information on how to upgrade.

Your telephone can be operated on an OpenScape Business telephone system. Individual telephone features may deviate on an OpenScape Business from those described.

This User & Administrator Guide is intended to help you familiarize yourself with the OpenScape Desk Phone CP200T and all of its functions. It contains important information on the safe and proper operation of the OpenScape Desk Phone CP200T. These instructions should be strictly complied with to avoid operating errors and ensure optimum use of your multifunctional telephone in the network.

This User & Administrator Guide should be read and followed by every person (simple user or administrator) installing, operating or programming the OpenScape Desk Phone CP200T.



For your own protection, please read the section dealing with safety in detail. Follow the safety instructions carefully in order to avoid endangering yourself or other persons and to prevent damage to the unit.

This User Guide is designed to be simple and easy to understand, providing clear step-by-step instructions for operating the OpenScape Desk Phone CP200T.

Service

The service department of Unify Software and Solutions GmbH & Co. KG can only help you if you experience problems or defects with the phone itself. Should you have any questions regarding operation, your specialist retailer or network administrator will gladly help you.

For queries regarding connection of the telephone, please contact your network provider.

If you experience problems or defects with the phone, please dial the service number for your country.

Intended use

The OpenScape Desk Phone CP200T phone is a desktop unit designed for voice transmission. Any other use is regarded as unintended.

Telephone type

The identification details (exact product designation and serial number) of your telephone can be found on the nameplate on the underside of the base unit. Specific details concerning your communication platform can be obtained from your administrator.

Please have this information ready when you contact our service department regarding faults or problems with the product.

Speakerphone quality and display legibility

- To ensure good speakerphone quality, the area in front of the telephone (front right) should be kept clear. The optimum distance is approx. 50 cm.
- Proceed as follows to optimize display legibility:
 - Turn the phone to tilt the display to ensure you have a frontal view of the display and avoid light reflections.
 - Adjust the contrast as required → page 21.

Single-line telephone/multi-line telephone

Your OpenScape Desk Phone CP200T is a "multi-line telephone". This means that your service personnel can configure multiple lines on your phone, which is not the case with single-line phones. Each line is assigned an individual phone number which you can use to make and receive calls.

The programmable keys function as line keys on multi-line phones.

When using a multi-line phone to make and receive calls, certain particulars must be taken into account.

The executive-secretary configuration is a special case. This is a multi-line telephone with special features (e.g., "Ring Transfer" and "Accept call"), configured especially for executive/secretary use → page 84.

Team functions

To increase the efficiency of telephony, your service personnel can configure various Team functions such as pickup groups, hunt groups, and call distribution groups.

Getting to know the OpenScape Desk Phone CP200T

The following sections describe the most frequently used controls and displays.

Assembling and Installing the Phone

Shipment

- Telephone
- Handset
- Handset cable
- Telephone stand foot
- Subpackage:
 - Document "Installation and Quick Reference Guide"

Assembly

Handset: Insert the plug on the long end of the handset cable into the jack  on the base of the telephone and press the cable into the groove provided for it. Next, insert the plug on the short end of the handset cable into the jack on the handset.

Connecting the Phone

OpenScape Desk Phone CP200T:

- Insert the U_{P0/E} cable into the jack  on the base of the telephone.

OpenScape Desk Phone CP200T:

If applicable, connect the following optional jacks:


-  Headset (accessory)
-  USB slave for connection to PC

 Do not connect a USB hub to the phone's USB port, as this may lead to stability problems.

The user interface of your telephone



1	You can make and receive calls as normal using the handset .
2	The display provides intuitive support for telephone operation (two lines with up to 33 characters each).
3	The function keys (cannot be reprogrammed) allow you to call up the following frequently used functions during a call:  : Allows voicemails to be managed.  : Use this function key to open the Program/Service menu.  : Activates/deactivates the speakerphone function.  : Activates/deactivates the headset function.  : Increases/decreases the speaker/headset volume.  : Activates/deactivates the microphone. This function is useful to prevent the other party from listening in under certain circumstances, for example when consulting with someone else in the room or in case of annoying background noise.
4	You can use the navigation keys to navigate conveniently through the various phone functions, applications and configuration menus.
5	The function keys allow you to call up the following frequently used functions during a call:  : Transfer a call to another subscriber.  : Enable access to the conference functions.  : Hold or retrieve the active call.
6	The dialpad can be used to enter phone numbers and write text.
7	You can customize your telephone by assigning phone numbers and functions to the programmable keys. Preset default values: • Caller list • Phonebook • Forwarding • Redial
8	Incoming calls and new voicemails are visually signaled via the Signaling LED.

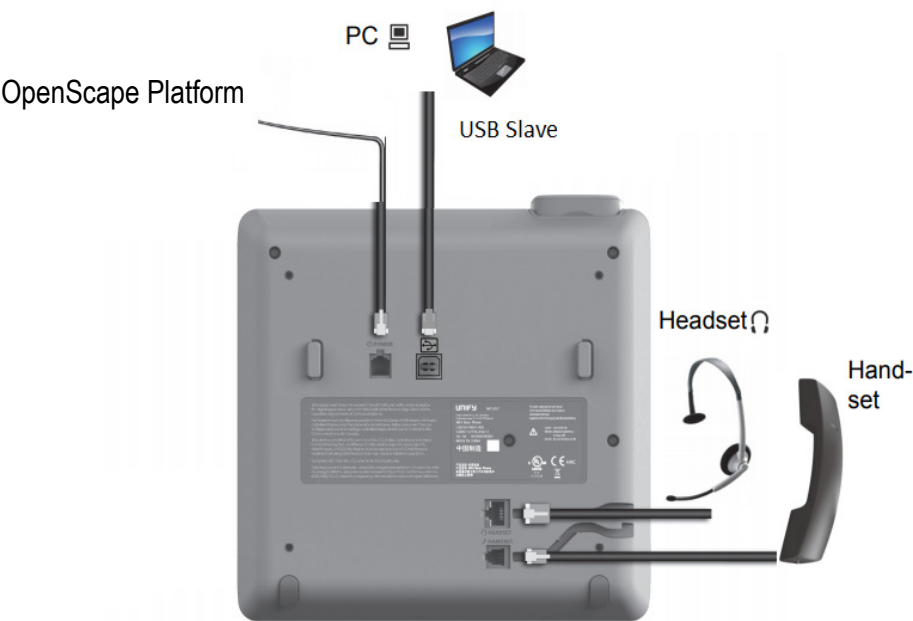 

Properties of your OpenScape Desk Phone CP200T

Display type	Grayscales Display 192*48 pixel
Illuminated display	✓
Full-duplex speakerphone function	✓
Headset	✓
USB	✓
Wall mountable	✓
Signaling LED (red/green/orange)	✓

Navigation keys

This control allows you to move between input fields and navigate in lists and menus. You use the  button to confirm options and launch functions:



Key	Functions when key is pressed
	In lists and menus: • One level back Entry selected: • Cancel action In input fields: • Delete character to the left of the cursor
	In lists and menus: • Scroll up
	In lists and menus: • Scroll down
	Entry selected: • Perform action • Confirm your selection

Programmable function keys

Your OpenScape Desk Phone CP200T has four function keys (with LED), which you can reprogram with different functions or phone numbers at any time.



The icons represent the following functions:

- Caller list
- Phonebook
- Forwarding
- Redial

Depending on how they are programmed, you can use the keys as follows:

- Function keys → page 18
- Selected dialing keys → page 19

A function can be programmed for each key as well as a phone number at the second level.

The status of a function is shown by the LED display for the corresponding function key.

Meaning of LED displays on function keys

LED		Meaning of function key
	Off	The function is deactivated.
	Lights up green	The function is activated.

 Some of the programmable keys on multi-line phones can be set up as trunk or line keys → page 61.

Keypad



In cases where text input is possible, you can use the keypad to input text, punctuation and special characters in addition to the digits 0 to 9 and the hash and asterisk symbols. To do this, press the numerical keys repeatedly.

Example: To enter the letter "h", press the number **4** GHI key on the keypad twice.

 To enter a digit in an alphanumeric input field, hold down the relevant key.

Alphabetic labeling of dial keys is also useful when entering vanity numbers (letters associated with the phone number's digits as indicated on the telephone spell a name, e.g. 0700 - PATTERN = 0700 - 7288376).

Multi-function keys

Function		
Long press (key held down)	Turn ringtone on/off.	
Text input	Next letter in upper case.	Delete character.

Character overview (depends on the current language setting)

Key	1x	2x	3x	4x	5x
	1	1			
	a	b	c	2	
	d	e	f	3	
	g	h	i	4	
	j	k	l	5	
	m	n	o	6	
	p	q	r	s	7
	t	u	v	8	
	w	x	y	z	9
	+	.	-	0	
	2				

Key	1x	2x	3x	4x	5x
	3				

- 1 Space
- 2 Next letter in upper case
- 3 Delete character

Display

 
Your OpenScape Desk Phone CP200T comes with a black-and-white LCD display. Adjust the contrast to suit your needs (→ page 95).

Idle mode

If there are no calls taking place or settings being made, your OpenScape Desk Phone CP200T is in idle mode.

 Press the  button to go back, for example, to the idle display from a call list. The idle display can be accessed again from the Program/Service menu with the  key.

Example:

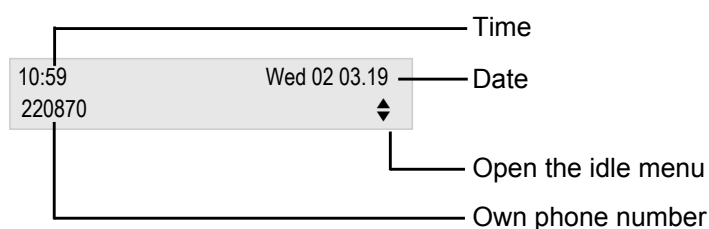

Idle menu

The idle menu opens when you press  or  Navigation keys → page 17 in idle mode. You can call up various functions here. The idle menu includes selected functions from the Program/Service menu → page 24

The idle menu may contain the following entries:

- Caller list
- Forwarding on
- Lock phone
- DND on¹
- Advisory msg. on
- Ringer cutoff on
- Send message
- View sent message²
- View callbacks³
- Directory
- HF answerback on
- Suppress call ID
- Waiting tone off
- DISA intern

1. Must be activated by service personnel.

2. Only appears when there are messages that the recipient has not yet viewed

3. Only appears if callback requests are saved

Icons in the idle display

In the first line, the time, weekday and date are displayed in addition to icons for different situations and options:

Icon	Meaning
	The ringer is deactivated.
	The phone lock is activated.
	The "Do not disturb" function is activated.

Your attention will be drawn to events in the second line:

Icon	Meaning
	You received new voice messages.
	New entries have been added to the call lists.
	Local call forwarding is active.

Mailbox

Depending on the type and configuration of your communications platform (contact the relevant service personnel), messages from services, such as HiPath Xpressions are displayed in this application in addition to messages received.

Messages

You can send short text messages to individual internal stations or groups, as well as read messages that have been sent to you.

In idle mode (→ page 21) the following signals alert you to the presence of new messages:

- The  key LED lights up
- Displays "Messages received".

Press the mailbox key .

Voicemail

If your telephone is connected to a voicemail system (such as Entry Voice Mail), the Mailbox key will also light up to alert you to any messages that have arrived.

An appropriate message also appears on the display (for instance, in Entry Voice Mail: "<x> new messages"). To play back your voicemail, follow the instructions on the display.

Call log

If you are unable to accept an external or internal call, the call attempt is stored in the caller list. Answered calls can also be saved (contact your service personnel).

 
Your telephone stores up to ten calls in chronological order. Each call is assigned a time stamp. The most recent entry not yet answered in the list is displayed first. Multiple calls from the same caller do not automatically generate new entries in the caller list. Instead, only the most recent time stamp for this caller is updated and its number incremented.

The caller list is automatically displayed in the idle menu → page 21.

 Callers with suppressed numbers cannot be saved in the call log.

Information is displayed regarding the caller and the time at which the call was placed.

Example:

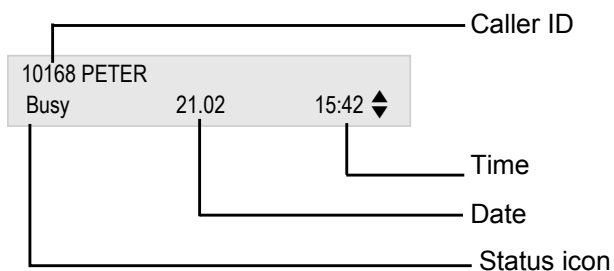


Program/Service menu


Use the  menu key to reach the Program/Service menu for your communication system.

The menu key LED remains red as long as you are in this menu.

 Example:

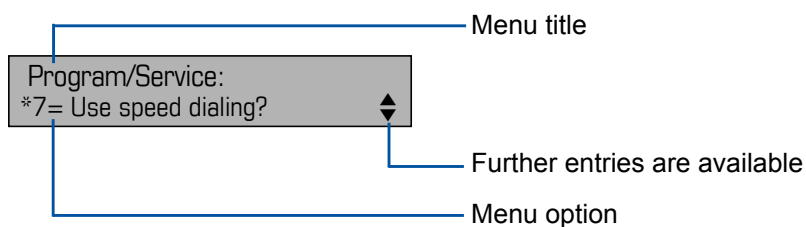

 The menu structure comprises several levels. The first line in this structure shows the menu currently selected while the second line shows an option from this menu.



Basic functions



Please read the introductory chapter “[Getting to know the OpenScape Desk Phone CP200T](#)” page 13 carefully before performing any of the steps described here on your phone.

Answering a call

Special default ring signaling is set for your telephone:

- When you receive an internal call, your telephone rings once every four seconds (single-tone sequence).
- When you receive an external call, your telephone rings twice in rapid succession every four seconds (dual-tone sequence).
- When you receive a call from the entrance telephone, your telephone rings three times in rapid succession every four seconds (triple-tone sequence).
- If a call is waiting, you hear a short tone (beep) every six seconds.



Your service personnel can adjust the ring cadence for external and internal calls for you. In other words, different ring cadences can be set for different internal callers.

The number or the name of the caller appears on the display.

Answering a call via the handset

The phone rings. The caller is displayed.

Lift the handset.

Set the call volume.

if nec.

 


Answering a call via the loudspeaker (speakerphone mode)

Suggestions for using speakerphone mode:

- Tell the other party that you are using speakerphone mode.
- The speakerphone works best at a low receiving volume.
- The ideal distance between the user and the telephone set in speakerphone mode is about 50 cm (approx. 20 inches).

The phone rings. The caller appears on the screen.



Press the key shown. The LED lights up.

Raise or lower the volume. Keep pressing the key until the desired volume is set.

Ending a call

 


Press the key shown. The LED goes out.

Accepting a call via the headset

Prerequisite: A headset is connected.

The phone rings. The  key flashes.



Press the key shown.

Set the call volume.



The headset port on the phone is preset for a corded device and is automatically switched when you use a cordless headset. You must however use the "call answer" function of the headset at least once so that the telephone can make the corresponding setting.

Switching to speakerphone mode

People present in the room can participate in your call.

Prerequisite: You are conducting a call via the handset.

Hold down the key and replace the handset. Then release the key and proceed with your call.

Set the call volume.

U.S. mode

If your communication system is set to US mode (contact your service personnel), you do not have to hold down the speaker key when replacing the handset when switching to speakerphone mode.

Press the key shown.

Replace the handset. Proceed with your call.

Set the call volume.

Switching to the handset

Prerequisite: You are conducting a call in speakerphone mode.

Lift the handset.

The key shown goes out.

Open listening in a room during a call

People present in the room can silently monitor your call. Let the other party know that you have turned on the speaker.

Prerequisite: You are conducting a call via the handset.

Activating



Press the key shown.

Deactivating



Press the lit key.

Turning the microphone on and off

To prevent the other party from listening in while you consult with someone in your office, you can temporarily switch off the handset microphone or the hands-free microphone.

Prerequisite: You are conducting a call.

Deactivating the microphone



Press the key shown.

Activating the microphone



Press the lit key.

Ending a call



Press the lit key. (If in speakerphone mode)

or



Replace the handset.

Making calls

Off-hook dialing



Lift the handset.

internal: Enter the station number.

External calls: Enter the external code and the station number.

The connection is established as soon as your input is complete.

On-hook dialing



internal: Enter the station number.

External calls: Enter the external code and the station number.

The party you are calling answers via loudspeaker.



Your system may also be programmed so that you have to press the "internal" key before you dial an internal number.

To call an external party, you have to enter an external code before dialing the party's telephone number (Prime Line is not active; contact your service personnel).

The other party answers with speaker:



Lift the handset.

 
or

On-hook dialing: Speakerphone mode.

The called party does not answer or is busy:



Press the key shown. The LED goes out.

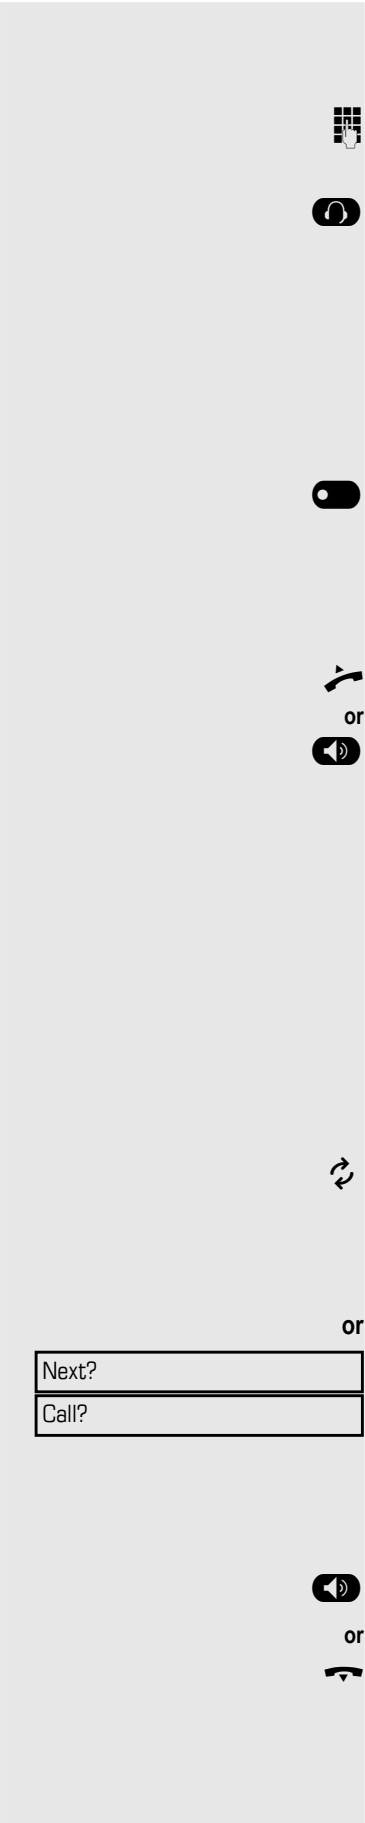

Dialing with the headset connected

Prerequisite: The headset is connected.

internal: Enter the station number.
External calls: Enter the external code and the station number.

The headset key lights up.
The connection is established as soon as your input is complete.

Dialing with DDS keys

Prerequisite: You have saved a number on a DDS key page 66.

Press the key with a saved number.
If the number is saved on the second layer, press the shift key first.

 You can press the DDS key during a call and automatically initiate a call-back  Page 33.

Lift the handset.
or
Press the key shown.

Redialing a number

The last ten external telephone numbers dialed are stored automatically.

 If this feature is configured (contact your service personnel), account codes entered are also saved.

You can redial them simply by pressing a key.

Displaying and dialing saved station numbers

Press the "Redial" key to dial the last number dialed.
Press the key twice to dial the next to the last number dialed.
Press the key three times to dial the third-to-the-last number dialed.

Keep confirming until the phone number you want appears.
Select and confirm the option shown.

End call

Press the lit key.
or
Replace the handset.

Reject calls

You can reject calls which you do not wish to take.

Prerequisite: You have an incoming call and your phone is ringing.

You see in your screen the Caller's name and the following indication.

Reject call?

OK

Press **OK** to confirm

If a call cannot be rejected, your telephone will continue to ring.

The message "Currently not possible" is displayed (e.g. in the case of recalls).

Turning the microphone on and off

To prevent the other party from listening in while you consult with someone in your office, you can temporarily switch off the handset microphone or the hands-free microphone. You can also switch on the handsfree microphone to answer an announcement via the telephone speaker (speaker call, □ Page 48).

Prerequisite: A connection is set up, the microphone is activated.



Press the "microphone" key. The microphone is deactivated.

or



Press the illuminated "microphone" key. The microphone is activated.

Calling a second party (consultation)

You can call a second party while a call is in progress. The first party is placed on hold.

While on a call the following is displayed:

Consultation?

OK



Return to held call?

or

Quit and return?

Toggle/Connect?

Conference?

Leave conference?

Press **OK** to confirm

Dial the number of the second party

The call will be forwarded to the second party.

Return to the first party:

Confirm

select and confirm the option shown.

Switching to the held party (alternating)

Select and confirm the option shown.

Combine the calling parties into a three-party conference

Select and confirm the option shown.

Allowing call partners to continue a conference after you exit

Select and confirm the option shown.

 For more information on conferences, see □ Page 55.

Transferring a call

If the person you are speaking to wants to talk to another colleague of yours, you can transfer the call to that colleague.

Confirm.

Enter the number of the party to which you want to transfer the call.

Announce the call, if necessary.

Replace the handset.

Consultation?



or

Transfer?

Select and confirm the option shown¹.

1.

Call forwarding

Using variable call forwarding

You can immediately forward internal or external calls to different internal or external telephones (destinations). (External destinations require special configuration in the system.)



 
When call forwarding is active, a special dial tone sounds when you lift the handset.

If DID DTMF is active (contact your service personnel), you can also forward calls to this destination. Destinations: Fax = 870, DID = 871, Fax-DID = 872.

If you are a call forwarding destination, your display will show the number or the name of the originator on the upper line and that of the caller on the lower line.



or



or

Forwarding on?

1=all calls?

or

2=external calls only?

or

3=internal calls only?



Save?

Forwarding off

or



Press the forwarding key.

Open the idle menu.

Select and confirm the option shown.

Confirm

select and confirm the option shown

select and confirm the option shown.

 
Enter the destination number.

Confirm.

Deactivating call forwarding

Select and confirm the option shown.

Press the forwarding key.

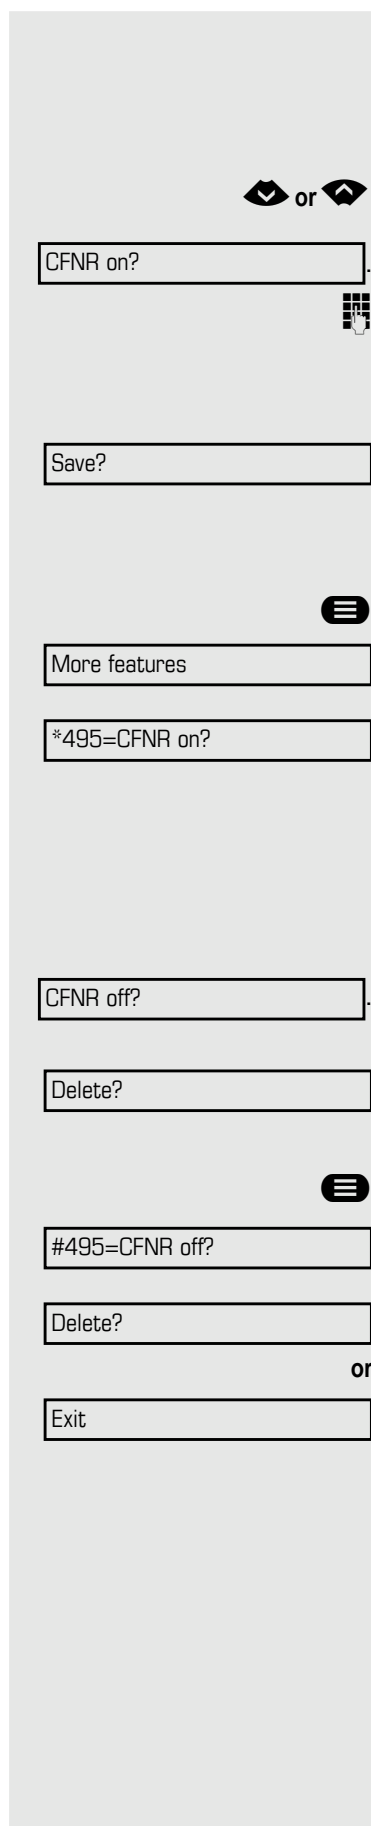

Using call forwarding no reply (CFNR)

Calls that are not answered after three rings (=default, can be adjusted by service personnel) or that are received while another call is ongoing can be automatically forwarded to a specified telephone.

Open the idle menu.

Select and confirm the option shown.

Enter the destination number.

- Enter the internal station number for internal destinations
- Enter the external code and the external station number for external destinations

Press  to confirm.

or alternatively:

Press the key shown.

Select and confirm the option shown.

Then select and confirm the option shown.

and then enter destination number as shown above.

Deactivating call forwarding no reply

Open the idle menu.

Select and confirm the option shown.

Press  to confirm.

or alternatively:

Press the key shown.

Select and confirm the option shown.

Press  to confirm.

Select and confirm to deactivate but not delete the forwarding destination.



If CFNR is activated, when you hang up, "CFNR to:" appears briefly on the display: ... " .

Call forwarding in the carrier network and forwarding multiple subscriber numbers (MSN) (not for U.S.)

If this function has been configured (contact your service personnel), you can forward calls to your assigned multiple subscriber number (MSN) (DID number) directly within the carrier network.

For example, you can forward your phone line to your home phone after business hours.



Trunk FWD on?

Press the key shown.

Select and confirm the option shown.

1=immediate?

Select and confirm the required type of call forwarding

or

2=on no answer?

select and confirm the option shown.

or

3=on busy?

select and confirm the option shown.



Enter your DID number.



Enter the destination number (without the external code).

Save?

Confirm.

Deactivating call forwarding

Trunk FWD off?

Select and confirm the option shown.

Confirm the displayed call forwarding type.



Enter your DID number.

Using callback

You can request a callback if the internal station called is busy or if nobody answers. This also applies for external calls via ISDN exchanges. This feature saves you from having to make repeated attempts to reach the user.

You receive a callback

- When the other party is no longer busy,
- When the user who did not answer has conducted another call.



When configured (contact your service personnel), all callback requests are automatically deleted over night.

Storing a callback

Prerequisite: You have reached a busy line or no one answers.

Press  to confirm.

Accepting a callback

Prerequisite: A callback was saved. Your telephone rings. "Callback: ..." appears on the display.

Lift the handset.



or



Press the key shown. The LED lights up.

You hear a ring tone.

Callback?

Viewing and deleting a stored callback

Open the idle menu.

Select and confirm the option shown.

 
Select and confirm to display additional entries.

Deleting a displayed entry

Confirm.

Ending retrieval

Select and confirm the option shown.



View callbacks?

Next callback?

Delete?

Exit?

or



Press the key shown. The LED goes out.

or



Press the key shown. The LED goes out.

Enhanced phone functions

Answering calls

Accepting a specific call for your colleague

You hear another telephone ring.

Open the idle menu.

Select and confirm the option shown.

Select and confirm until the name/number of the required subscriber is displayed.

Confirm.

If you know the number of the telephone that is ringing, enter it directly.

Using the speakerphone

A colleague addresses you directly over the speaker with a speaker call. You hear a tone before the announcement. The other party's name or station number appears on the screen.

You can conduct the call with the handset or in speakerphone mode.

Lift the handset and answer the call.

Press the "OK" key to confirm your selection and answer the call.



If handsfree answerback is enabled (see below), you do not need to switch on the microphone - you can answer directly. You can answer immediately in speakerphone mode.

If handsfree answerback is disabled (default setting), follow the procedure described above.

 
Placing a speaker call to a colleague □ Page 48.

Enabling and disabling handsfree answerback

Open the idle menu.

Select and confirm the option shown.

Select and confirm the option shown.




if nec.

or



 or



or

Answering calls from the entrance telephone and opening the door

If an entrance telephone has been programmed, you can use your telephone to speak to someone at the entrance telephone and to activate a door opener. If you have the proper authorization (contact your service personnel), you can activate the **door opener**, enabling visitors to open the door themselves by entering a 5-digit code (using a DTMF transmitter or the keypad installed).

Speaking to visitors via the entrance telephone

Prerequisite: Your telephone rings.

Lift the handset within thirty seconds. You are connected to the entrance telephone immediately.

Lift the handset after more than thirty seconds.

Dial the entrance telephone number.

Opening the door from your telephone during a call from the entrance telephone

Confirm.

Opening the door from your telephone without calling the entrance telephone

Press the key shown.

Select and confirm the option shown.

Dial the entrance telephone number.

Opening the door with a code (at the door)

After ringing the bell, enter the five-digit code (using the keypad or a DTMF transmitter). Depending on how the door opener has been programmed, a door-bell call signal may or may not be forwarded.



or

 


Open door?



*61=Open door?



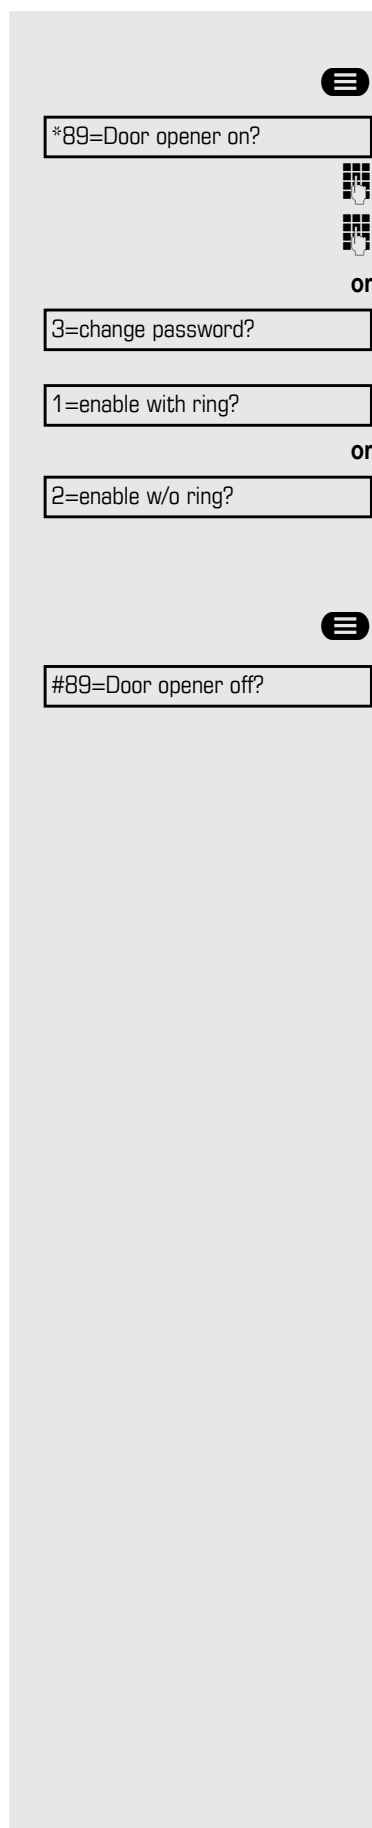

Activating the door opener

Press the key shown.

Select and confirm the option shown.

Dial the entrance telephone number.

Enter the five-digit code. Default code = "00000".

Select the displayed function and press the "OK" dialog key to change the code.

Select and confirm the option shown.

You can also open the door without a doorbell ring.

Deactivating the door opener

Press the key shown.

Select and confirm the option shown.

Making calls

En-bloc sending/correcting numbers

If this feature is configured (contact your service personnel), a connection is not attempted immediately when a station number is entered. This means that you can correct the number if necessary.

The station number is only dialed at your specific request.



internal: Enter the station number.

External calls: Enter the external code and the station number.

Dialing entered/displayed numbers



Lift the handset.

Dial?

Start dialing  a number or select and confirm the option shown.

Correcting numbers entered



A station number can only be corrected as it is being entered. Station numbers stored for number redial, for example, cannot be corrected.

Delete number?

Select and confirm the option shown.

The last digit entered in each case is deleted.



Enter the required digit(s).

Canceling en-bloc sending

Cancel?

Select and confirm the option shown.

or



Press the key shown. The LED goes out.

Using the caller list

Detailed information, as well as a sample display entry are provided on page 24.

Retrieving the caller list

Prerequisite: Service personnel has set up a caller list for your telephone.

Open the idle menu.

Confirm¹.

The latest entry is displayed.

To view other calls, confirm each subsequent display.

Ending retrieval

Select and confirm the option shown.

Press the key shown. The LED goes out.

Press the key shown. The LED goes out.

Displaying the call time

Prerequisite: You have retrieved the caller list and the selected call is displayed page 24.

Select and confirm the option shown.

Dialing a station number from the caller list

Prerequisite: You have retrieved the caller list and the selected call is displayed.

Select and confirm the option shown.

 


The caller is automatically deleted from the caller list when a connection is finally set up.

Removing an entry from the caller list

Prerequisite: You have retrieved the caller list and the selected call is displayed.

Confirm.

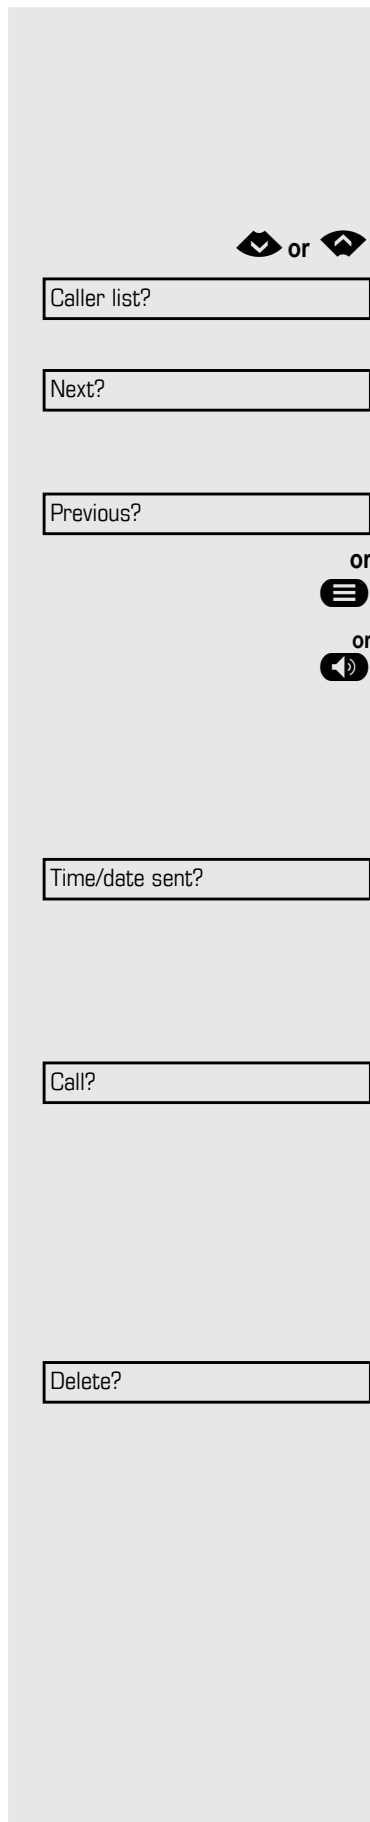

1.

Dialing a number from the internal directory

The internal directory contains all station numbers and system speed-dial numbers assigned to a name. Contact your service personnel to find out if one was configured for your system.

Prerequisite: Names have been assigned to the station numbers stored in the system.

Lift the handset.

Press the key shown. The LED lights up.

Confirm.

If several directories have been configured:

Confirm.

The first entry is displayed on the screen.

Scroll to next or previous entry.

 
Enter the name you want to find, or just the first few letters, using the alphanumeric keypad page 19.

Select and confirm each letter to be deleted. The last letter entered is deleted. If all letters are deleted, the first entry in the directory will be displayed again.

Select and confirm the option shown. All entered letters are deleted, and the first entry in the internal directory is displayed again.

The entry you wish to dial appears on the screen

Select and confirm the option shown.

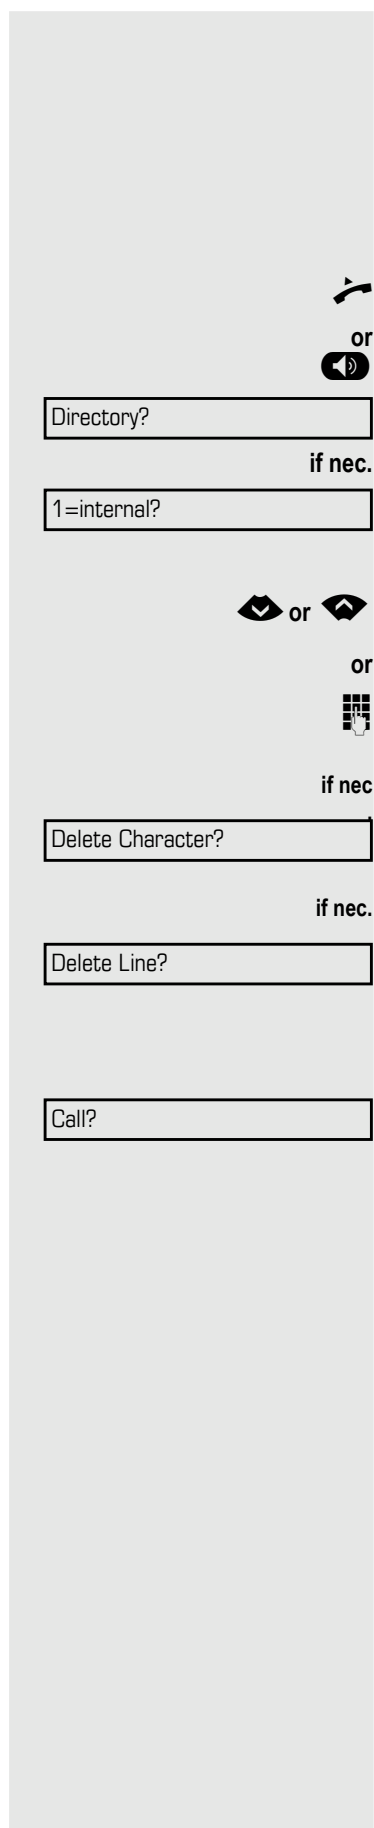

Using the LDAP directory

If configured (ask your service personnel), you can search for directory data in the LDAP database and dial the number of any subscriber you find there.

Prerequisite: The LDAP search feature has been configured in the system.

Lift the handset.

Press the key shown. The LED lights up.

Confirm.

If several directories have been configured:

Select and confirm the option shown.

Enter the name you wish to search for using the keypad (max. 16 characters) page 19.

You can enter an incomplete name, e.g. "mei" for "Meier".

If configured (ask your service personnel), you can also search for surname and first name. To separate surname and first name by a space, enter "0". You can enter incomplete names, e.g. "mei p" for "Meier Peter".

Select and confirm each letter to be deleted. The last letter entered is deleted.



In large databases, the results of the search may be incomplete if too few characters are entered □ Page 46.

Confirm.

The name is searched for. This may take a few seconds.

The result is displayed

If only one name is found, it is displayed.

Confirm.

If several names are found (max. 50), the first name is displayed.

Scroll to next or previous entry,

confirm,

select and confirm the option shown.

 
Select and confirm the option shown.

If no name is found

If your search does not yield any name corresponding to your query, you can extend the range of the search, e.g. by deleting characters.

Select and confirm the option shown.

For further procedure, see above.

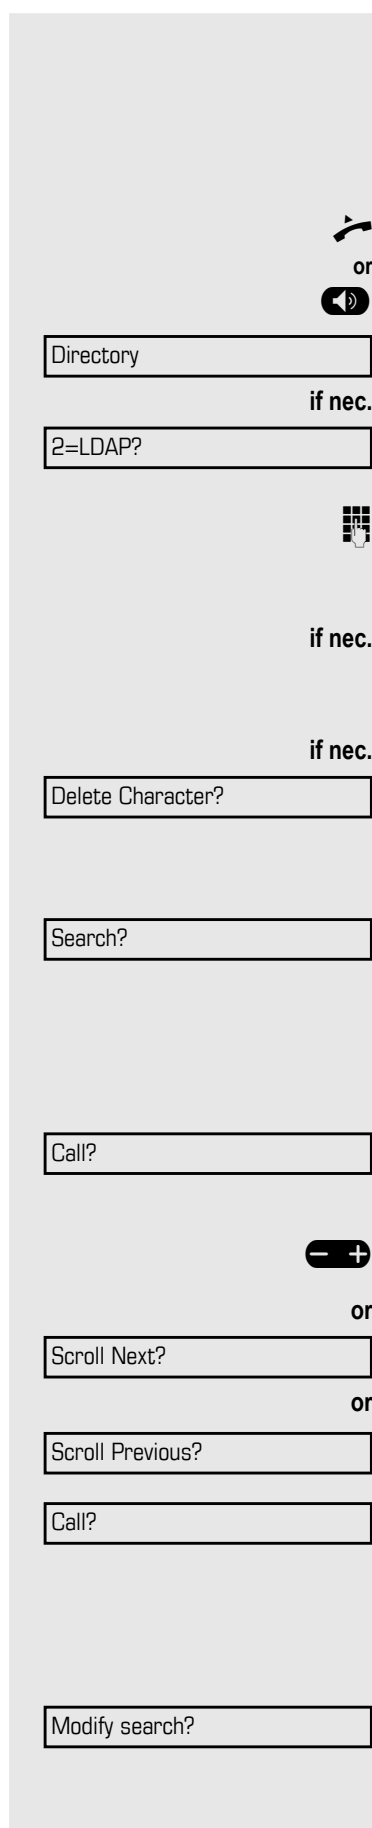

If too many names are found

If more than the maximum of 50 names are found corresponding to your query, only an incomplete list of results can be displayed.

You can view these results, select any of the names, or change the search string (e.g. narrow the search by entering more characters).



In this case it is advisable to narrow down the search so that all corresponding names can be displayed.

Show matches?

Confirm, to view the incomplete list.
For further procedure, see above.

or

Modify search?

Narrow the search down.

Select and confirm, in order to change the search string.
For further procedure, see above.

Making calls using system speed-dial numbers

Prerequisite: You know the system speed-dial numbers (consult your service personnel).

Press the key shown.

Select and confirm the option shown¹.

Enter a three-digit speed-dial number.

Suffix-dialing

If necessary, you can suffix-dial additional digits (for example, the user's extension) at the end of the saved station number.

If this feature is configured, a suffix is automatically dialed (for example, "0" for the exchange) if no entries are made within 4 or 5 seconds.

Dialing with speed-dial keys

Prerequisite: You have configured speed-dial keys page 47.

Press the key shown.

Select and confirm the option shown^[1].

Press the key shown.

Press the required speed-dial key.

Configure a speed-dial key

You can program the keys to with ten frequently used phone numbers.

Press the key shown.

Select and confirm the option shown^[1].

Confirm.

Press the key shown.

 
Press the required speed-dial key. If the key is already in use, the programmed phone number appears on the screen.

Confirm.

First enter the external code and then the external station number.

Confirm.

1.

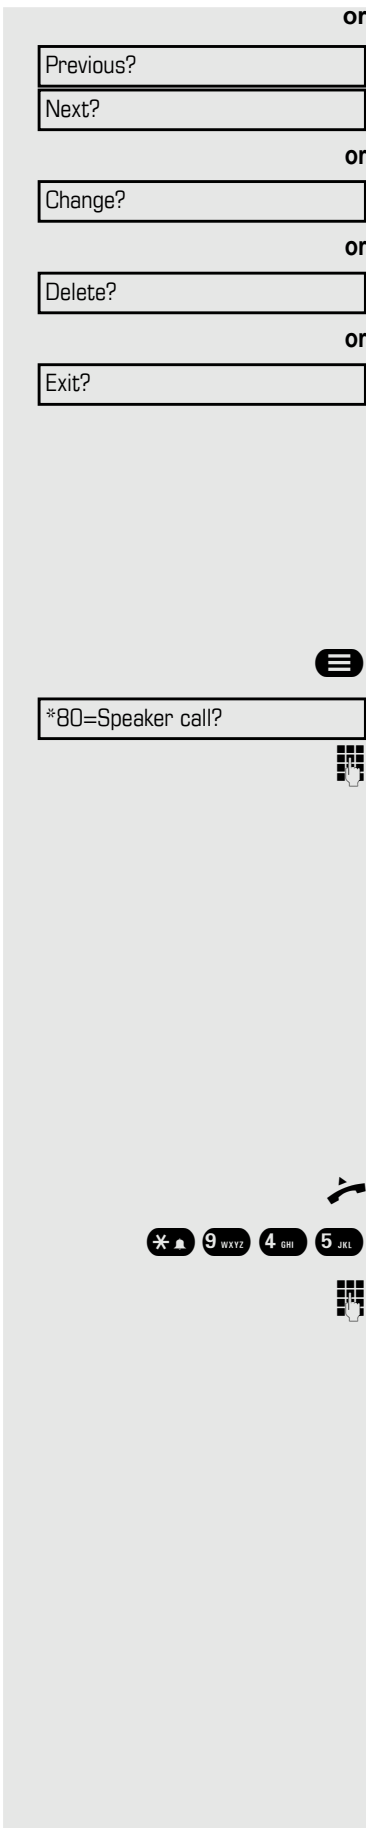

If you make a mistake:

Select and confirm the option shown. This deletes all entered digits.
Confirm.

Select and confirm the option shown.

select and confirm the option shown

select and confirm the option shown.

Talking to your colleague with a speaker call

You can make a loudspeaker announcement through a loudspeaker if connect-
ed (ask your service personnel), or to an internal user with a system telephone
without any action on their part.

Press the key shown.

Select and confirm the option shown.

Enter the station number.

➡ Responding to a speaker call page 48.

Talking to your colleague with discreet calling

If this function has been configured (ask your service personnel), you can join
an ongoing call conducted by an internal user at a system telephone with dis-
play.

You can listen in unnoticed and speak to the internal user without being over-
heard by the other party (discreet calling).

Lift the handset.

Enter the code.

Enter your internal station number.

➡ Your service personnel can protect your telephone against discreet call-
ing.

Automatic connection setup (hotline)

If this function is configured (contact your service personnel), the system automatically sets up a connection to a preset internal or external destination.

Lift the handset.

Depending on the setting, the connection is either set up **immediately** or only **after** a preset **period of time** (hotline after a timeout).

Reserving a trunk

If configured (ask your service personnel), you can reserve an occupied trunk for yourself. When the line is free, you receive a call and a note on the display.

Prerequisite: "Currently busy" appears on the display.

Confirm.

Reserved line is free:

Your telephone rings and the display shows "Trunk is free".

Lift the handset. You will hear the dial tone.

Enter the external phone number.

Assigning a station number (not for U.S.)

If this function has been configured (contact your service personnel), you can selectively assign a specific number (DID number) to your telephone before making an external call. The assigned number then appears on the called party's display.

Press the key shown.

Select and confirm the option shown.

Enter the DID number you wish to use.

Dial the external number.



Reserve trunk



*41=Temporary MSN?



Associated dialing/dialing aid

If this function has been configured (contact your service personnel), you can use a dialing aid to dial numbers and set up calls for your telephone. The operating procedure depends on whether the dialing aid is connected to the **S₀ bus** or the **a/b (T/R) port**.

You can also use your system telephone as a dialing aid for other telephones.

Dialing aid on the S0 bus

On the PC, select a destination and start dialing.

The speaker on your telephone is switched on. Lift the handset when the other party answers.

Dialing aid at the a/b (T/R) port

On the PC, select a destination and start dialing.

"Lift the handset" appears on the PC screen.

Lift the handset.

Dialing aid from your telephone for another telephone

Press the key shown.

Select and confirm the option shown.

Enter the internal station number ("Dial for:").

Enter the number you wish to dial.



*67=Associated dial?



During a call

Using call waiting (second call)

Callers can still reach you while you are engaged in another call. A signal alerts you to the waiting call. You can ignore or accept the second call.

When you accept the waiting call, you can either end the first call or place it on hold and resume the call later on.

You can block the second call or the signal tone (page 52).

Prerequisite: You are engaged in a phone call and hear a tone (every six seconds).

Ending the first call and answering the waiting call:

Replace the handset. Your telephone rings.

Answer the second call. Lift the handset.

Placing the first call on hold and answering the second call:

Select and confirm the option shown.

You are immediately connected to the second caller. The first party is placed on hold.

Ending the second call and resuming the first one:

Confirm.

or

Replace the handset. "Recall appears on the display: ..." appears on the screen.

Lift the handset.

Call waiting?

Quit and return?

Preventing and allowing call waiting (automatic camp-on)

If this function has been configured (ask your service personnel), you can prevent or allow a second call page 51 from being signaled by automatic camp-on during an ongoing call.

Open the idle menu.

Select and press  to confirm the option shown¹,

Select and press confirm the option shown.

Turning the call waiting tone on and off

You can suppress the call waiting tone (every six seconds) for external calls. A one-time special dial tone then alerts you to the waiting call.

Activating

Open the idle menu .

Select and press  to confirm the option shown.

Deactivating

Open the idle menu .

 
Select and press  to confirm the option shown.

Saving a number

You can save your call partner's station number for subsequent redialing from the caller list page 43.

Prerequisite: You are conducting a call.

Select and press  to confirm the option shown.

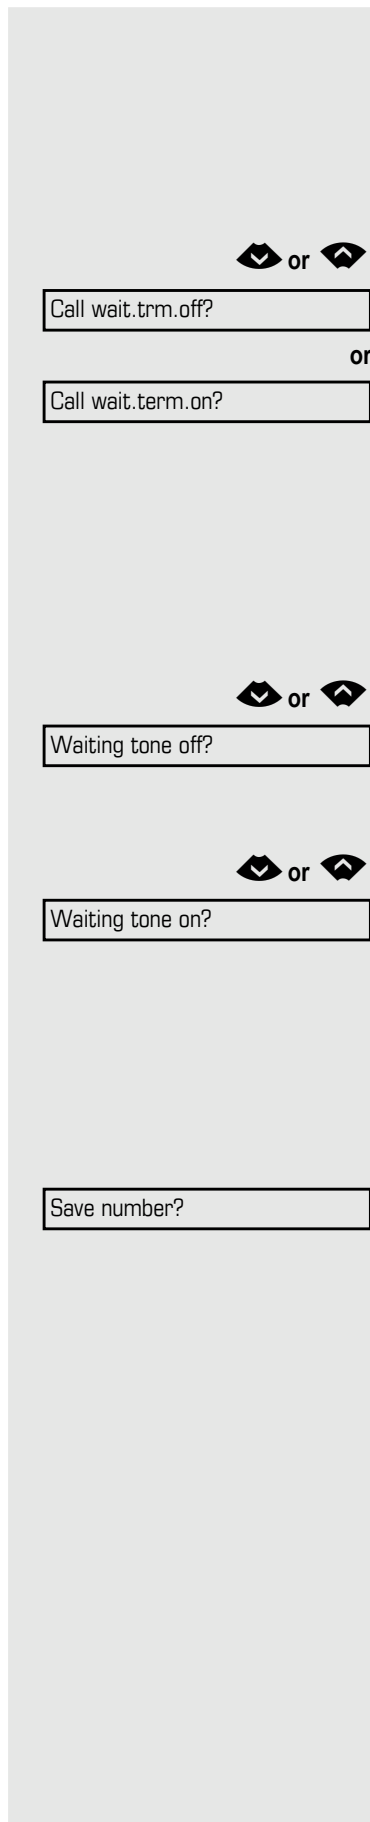

1.

Parking a call

You can park up to ten calls, either internal, external, or both. Parked calls can be displayed on and picked up from another telephone. This feature is useful if you want to continue a call at another phone.

Prerequisite: You are conducting a call.

Press the key shown.

Select and confirm the option shown.

Enter the number of the park slot (0 - 9) and make a note of it. If the park slot number you entered is not displayed, it is already in use; enter another one.

The message shown will be displayed on the screen.

Retrieving a parked call

Prerequisite: One or more calls have been parked. The phone is idle.

Press the key shown.

 
Select and confirm the option shown¹.

Enter the park slot number you noted earlier.

If the park slot number you enter is not in use, you cannot retrieve the call.



If a parked call is not picked up, after a specific period of time the call is returned to the telephone from where it was parked (recall).

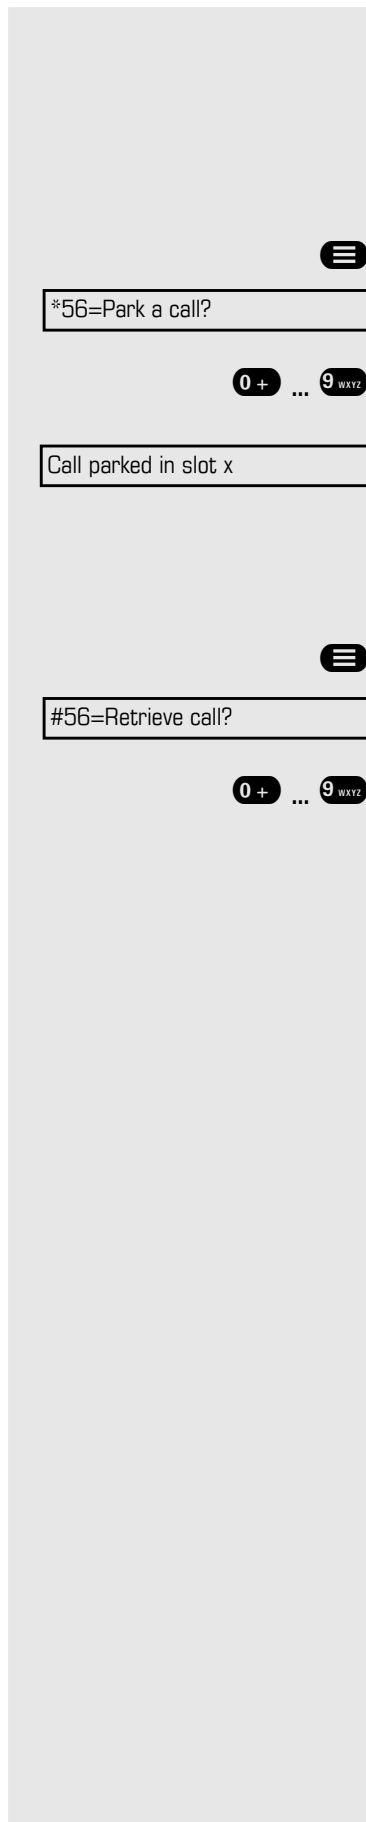

1.

Holding external calls

If you have programmed a hold key on your phone page 66, you can put external calls on hold.

Then all other stations can accept the call on the assigned trunk.

Press the "Hold" key.

The message of the relevant trunk appears (e.g. 801) and note the trunk number.

If available, the LED of the assigned trunk key flashes slowly.

Replace the handset.

Depending on the configuration, this may be necessary so other members can also pick up the call on hold.

Accepting call on hold

Prerequisite: One or more calls are on hold. The phone is idle.

 
Press the key shown.

Select and confirm the option shown.

If the "Retrieve" key is available page 61, press it.

Enter the noted trunk number.

If there is a "Line:" key available for the relevant trunk, it flashes slowly. Press the key.

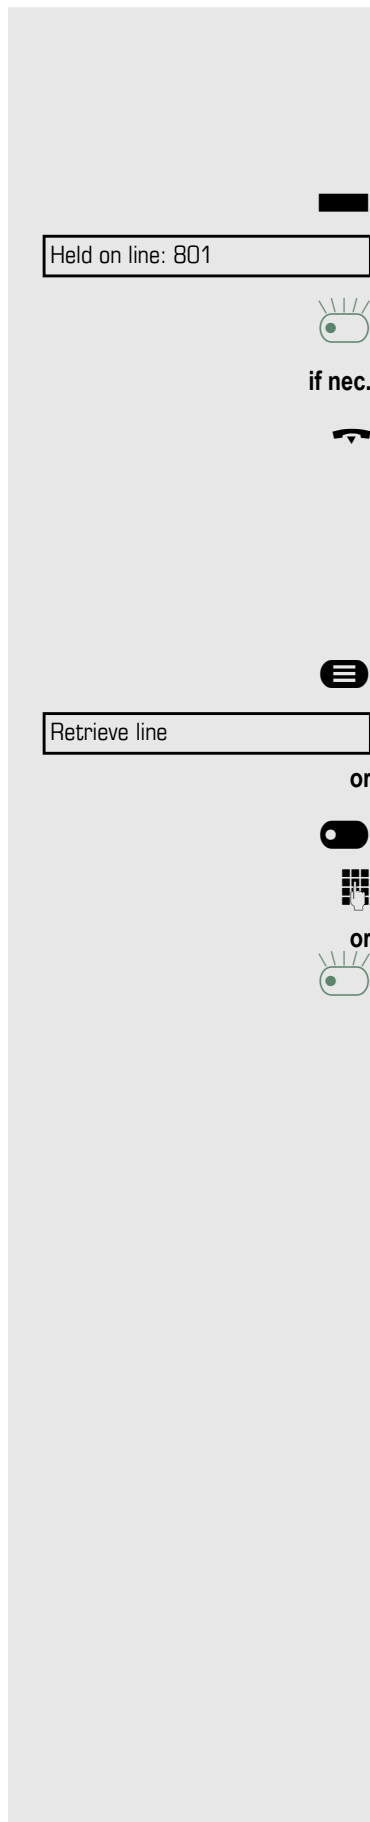

Conducting a conference

In a conference call, you can talk to as many as four other parties at the same time. These may be internal or external users.



You can only add parties to or remove them from a conference if you initiated the conference.

Call the first party.

Select and confirm the option shown.

Call the second party. Announce the conference.

Select and confirm the option shown.

A tone sounds every 30 seconds to indicate that a conference is in progress.

If the second party does not answer

Confirm.

Adding up to five parties to a conference

Confirm.

Call the new party. Announce the conference.

Select and confirm the option shown.

Viewing the conference parties

Select and confirm the option shown. The first party is displayed.

To display other parties, confirm each subsequent display.

To exit the list: Select and confirm the option shown.

Removing parties from the conference

Select and confirm the option shown. The first party is displayed.

Confirm as often as required until the desired party appears.

Select and confirm the option shown.

Leaving a conference

Select and confirm the option shown.

Replace the handset, if this feature is configured (contact your service personnel).

Ending a conference

Select and confirm the option shown.

Replace the handset, if this feature is configured (contact your service personnel).

Removing the ISDN central office party from the conference

Select and confirm the option shown.

Start conference?

Conference?

Return to held call?

Add party?

Conference?

View conf parties?

Next?

Exit list?

View conf parties?

Next?

Remove party?

Leave conference?

End conference?

Drop last conf. party?

Activating tone dialing/DTMF suffix-dialing

You can transmit dual-tone multifrequency (**DTMF**) signals to control devices such as an answering machine or automatic information system.

Press the key shown.

Select and confirm the option shown.

You can use the keys through , , and to transmit DTMF signals.



Ending the call also deactivates DTMF suffix dialing.

Your system may be configured so that you can start DTMF suffix-dialing immediately after setting up a connection.

Recording a call

If configured (contact your service personnel for details), you can record an active call.

Prerequisite: You are on a call, the "Recording" key is configured page 66.

Press the "Recording" key. The LED lights up.

You and the other party hear an announcement that recording has started and as long as recording is still running, you hear an acoustic signal approx. every 15 seconds.



 
During recording, it is not possible to add further call parties.

Stopping recording

Press the "Recording" key which lights up. The LED goes out.

Listening to a recording

Playback of the recording depends on the voice recording system used (see the associated user guide).

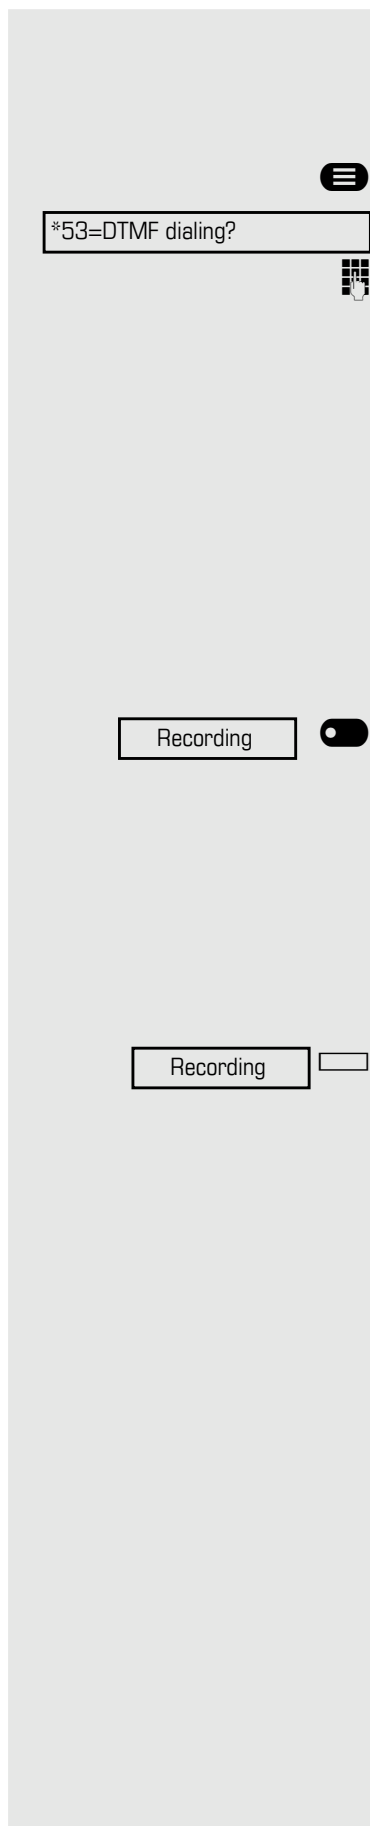

Transferring a call after a speaker call announcement in a group

If this function has been configured (contact your service personnel), you can use a speaker call (announcement, page 91) to announce a call in progress to a group of users page 48.

After a member of the group has accepted the call request, you can transfer the waiting party.

Prerequisite: You are conducting a call.

Confirm. The other party is placed on hold.

Press the key shown.

Select and confirm the option shown.

Enter the group's station number.

Announce the call.

When a member of the group accepts the call □ Page 48, you are connected to this party.

Replace the handset.

Select and confirm the option shown.



If the connection between the two other parties is not established within 45 seconds, the call from the first party returns to you (recall).

Send trunk flash

 
To activate ISDN-type services and features through the network carrier's analog trunks or those of other communications platforms (such as "consultation hold"), you must send a signal to the trunks before dialing the service code or telephone number.

Prerequisite: You have set up an external connection.

Press the key shown.

Select and confirm the option shown.

Enter the service code and/or telephone number.

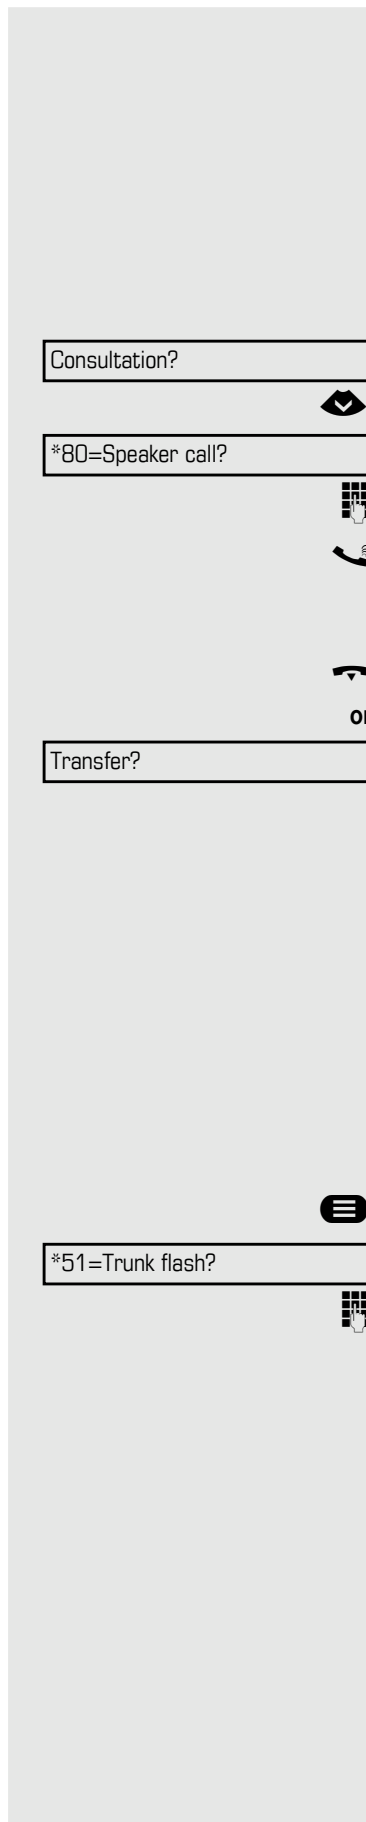

If you cannot reach a destination

Call waiting (camp-on)

Prerequisite: You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

Wait (approx. 5 seconds) until "Camp-on" appears on the display and the busy tone is followed by the ring tone.

The called party can then respond □ Page 51.



The called party can prevent automatic call waiting □ Page 52.

If this feature is configured (contact your service personnel), you will hear the ring tone and the message "Camp-on" is immediately displayed.

Busy override – joining a call in progress

This function is only available if it has been configured by the service technician (contact your service personnel).

Prerequisite: You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

Select and confirm the option shown.

The called party and person to whom this party is talking hear an alerting tone every two seconds.

If the called party has a system telephone with display, the following appears on the screen: "Override: (Number or name)".

You can now start talking.

Camp-on

Override?

Using night answer

When night answer mode is active, for example during a lunch break or after office hours, all external calls are immediately forwarded to a specific internal telephone (night station). The night station can be defined by service personnel (standard night answer service) or by you (temporary night answer service).

Activating

Select and confirm the option shown.

Night answer on?

*=default?

or



or



Save?

Night answer off?

Press the "OK" dialog key to confirm (standard night answer service).

Enter the code (standard night answer service).

 
Enter the destination number (= temporary night answer service).
Confirm.

Deactivating

Select and confirm the option shown.

Service personnel can also configure an "automatic night answer service". The automatic night answer service activates at specific times for your telephone depending on how it is programmed.

You can deactivate the automatic night answer service or replace it with a night answer service you configured (see above).



Programming function keys

The phone features a range of functions that can, if required, be stored on programmable keys.

The phone comes with four programmable keys, all of which can be programmed on two separate levels.

You should assign the "Shift" function to one of these keys to be able to switch between the two key levels.



Previously, you had to have a separate Shift key programmed to access a function on the second level. On the OpenScape Desk Phone CP200T, this means that one of four programmable keys can not be used by the user. With this new feature, it is no longer necessary to program a "Shift key" on the OpenScape Desk Phone CP200T.

Must be activated by the administrator.

The keys are preassigned in the as-delivered state (see → page 18).

List of available functions

- | | |
|-----------------------------|----------------------|
| 1. Unallocated | 22. Conference |
| 2. Selected dialling | 23. DND |
| 3. Repeat dialling | 24. Group pickup |
| 4. CF unconditional | 25. Repertory dial |
| 5. CF no reply | 26. Line |
| 6. CF busy | 27. Feature toggle |
| 7. CF unconditional - any | 28. Mobility |
| 8. CF no reply - any | 29. Directed pickup |
| 9. CF busy - any | 30. Release |
| 10. CF unconditional - ext. | 31. Callback |
| 11. CF unconditional - int. | 32. Cancel callbacks |
| 12. CF no reply - ext. | 33. Consultation |
| 13. CF no reply - int. | 34. DSS |
| 14. CF busy - ext. | 35. Call waiting |
| 15. CF busy - int. | 36. Immediate ring |
| 16. Ringer off | 37. Call recording |
| 17. Hold | 38. AICS Zip tone |
| 18. Alternate | 39. Server feature |
| 19. Blind transfer call | 40. BLF |
| 20. Transfer call | 41. Send URL |
| 21. Deflect | 42. 2nd alert |

Programming a key

Initiating programming

Via the user menu

You can program keys via the user menu.

Press the key shown.

Select and confirm.

Press one of the four  keys you want to program with a function.

On the top left to side of your screen you can see the feature key (if any) assigned already to the selected key.

Use the navigation keys to select and select one of the available actions below to perform to your selected key: confirm the function you want to assign Use the navigation keys to select one of the available options:

- "Change key?"
- "Clear key?"
- "+=Next layer?"
- "Another key?"
- "Exit?"

Select and confirm the function you want to assign. See the full list of available functions at → page 61.

Once you have selected a function for your programmable key select one of the following options:

- "Another key?"
- "+=Next layer?"
- "Exit?"

Directly via the function key

 
Must be activated by the administrator.

Hold down one of the four keys to which a function is to be assigned until the programming prompt is displayed.



If the prompt is not displayed, you can only launch key programming via the user menu (consult your administrator about the current setting).

Confirm to begin programming. Follow the same procedure as above.

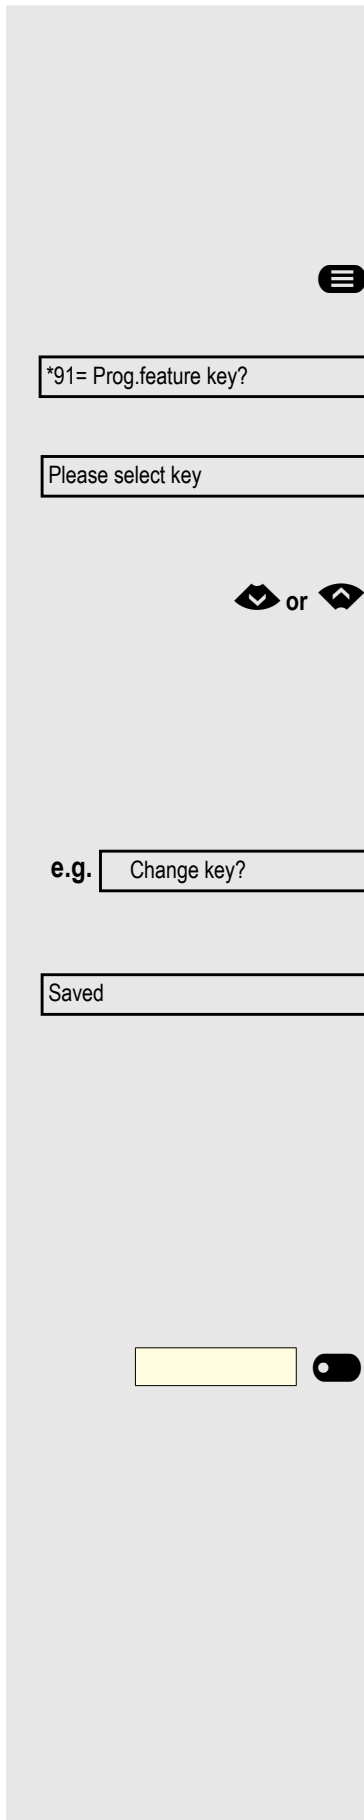

Programming second layer function

This feature enables you to perform a second function in each programmable key by first pressing the shift key to enable second layer functions.



Shift key should be pre-configured.

Following the same steps as → page 62, once you select the  key you want to program with a function.

Select and confirm this option.



The first time you program the second layer of a key it will be vacant.

 
Select and confirm the option shown to program the second level function.

 
Select and confirm the required function.

Depending on the function you may be asked to enter some input.

Once you have selected a function for your programmable key select one of the following options:

- “Another key?”
- “+=Next layer?”
- “Exit?”

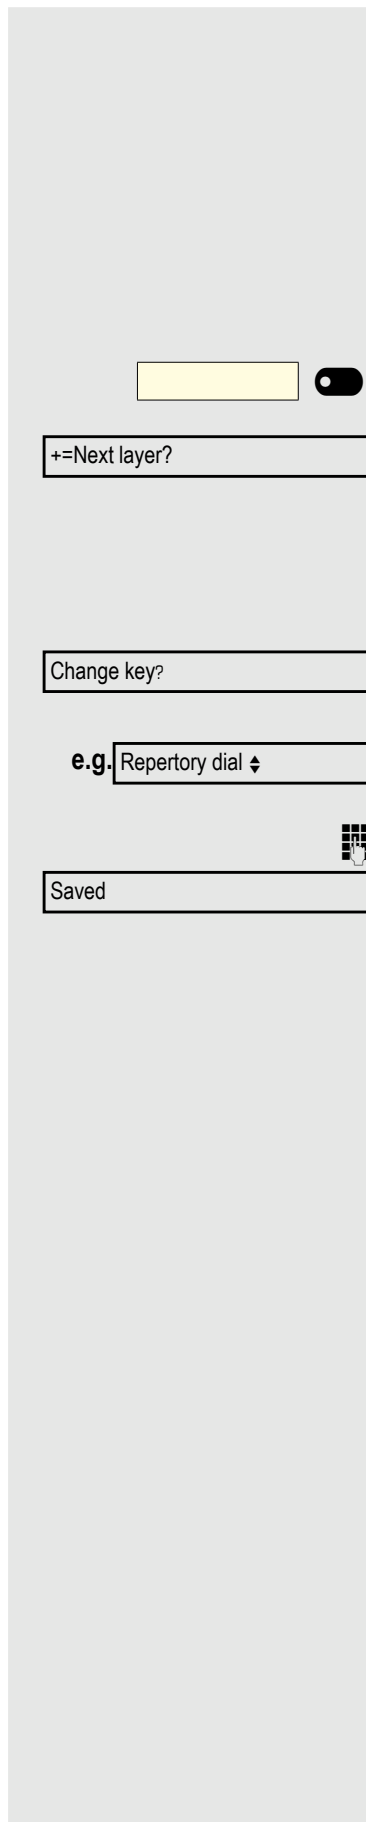

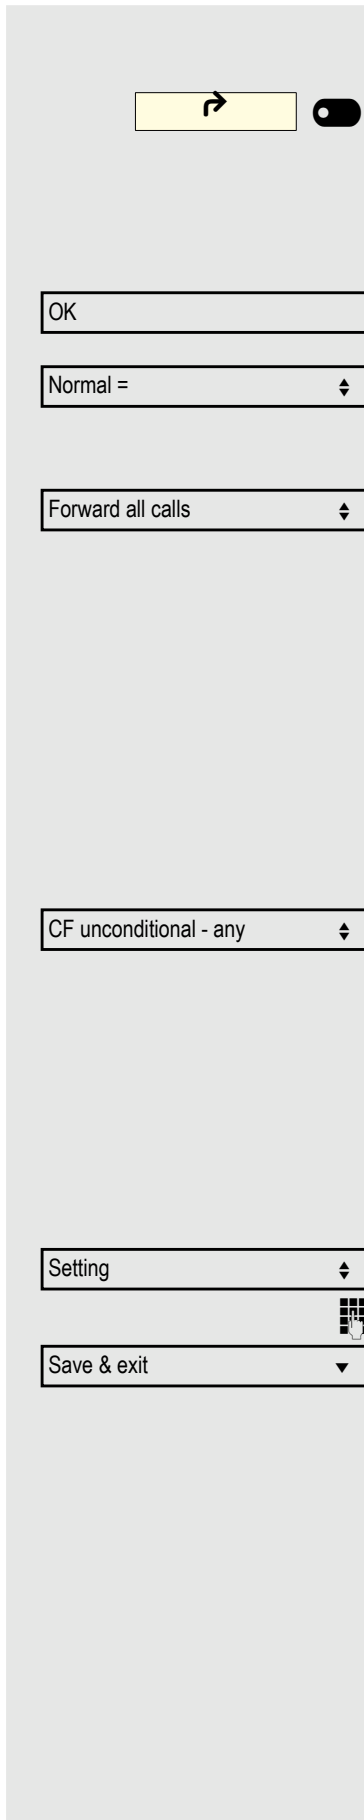

Configuring a fixed forwarding key

Hold down one of the four keys to which a function is to be assigned until the programming prompt is displayed.



If the prompt is not displayed or a programmed function is not executed, you can only launch key programming via the user menu (consult your administrator about the current setting).

Confirm to begin programming. The key illuminates continuously.

Select and confirm the option shown to program the first level for instance.

Call forwarding depending on the forwarding type

Select a forwarding type:

- Forward all calls
- Forward no reply
- Forward busy

Select and confirm the required function.

Call forwarding depending on the call type

If use of system-assisted functions has been enabled by the administrator and the **Forwarding Int/Ext** function activated, call forwarding by call type functionality will be available to you. Forwarding in this case is dependent on the forwarding type and additionally on the call type.

Select a forwarding type:

- CF unconditional - any
- CF unconditional - int.
- CF unconditional - ext.
- CF busy - any
- CF busy - int.
- CF busy - ext.
- CF no reply - any
- CF no reply - int.
- CF no reply - ext.

Select and confirm this option to enter the forwarding destination.

Enter and confirm the phone number of the forwarding destination.

Select and confirm the option shown.

Configuring a variable call forwarding key

With "Variable call forwarding" key you can

- Immediately activate or deactivate the call forwarding for "All calls"
- Edit the call forwarding

Ideally you should use the previously configured forwarding key for forwarding.

 
Hold down one of the four keys to which a function is to be assigned until the programming prompt is displayed.

Confirm to begin programming. The key illuminates continuously.

Select and confirm the option shown to program the first level for instance.

Select and confirm the option shown.

Select and confirm the option shown.



OK

Normal =



Built in fwd



Save & exit



Using programmed keys

The use of programmed functions depends on the phone's status. The relevant display appears once you have pressed a key.

Example 1: Calling saved number

Prerequisite: The idle menu is displayed on the graphic display.

Press one of the four keys with the saved contact. The connection setup is shown on the display.

Example 2: Activating/deactivating Call waiting




You can press a key to activate or deactivate call waiting functionality, even during a call. The prerequisite for this is that a second call is permitted. A second call is allowed by default.

Press one of the four keys with the "Call waiting" function. The key is no longer illuminated. The second call function is deactivated. The call is rejected or forwarded.

Example 3: Immediate ring

This function allows you to switch the preset delay on and off for all line keys. By default the delay is set, the key does not illuminate.

   Press one of the four keys with the "Immediate ring" function. The key illuminates. The delay ringer is disabled. An incoming call rings immediately regardless of what delay time is configured.



Resetting programmed keys

Here you can reset keys you configured back to factory settings.

Press the key shown.

Confirm the option shown.



If activated by the administrator, you may be asked to enter and confirm the User password.

*91= Prog.feature key?

Please select key

Clear key?

Saved

Press one of the four  keys you want to program with a function.

On the top left to side of your screen you can see the feature key (if any) assigned already to the selected key.

Select and confirm to delete the content of this key.

Once you have selected a function for your programmable key select one of the following options:

- "Another key?"
- "+=Next layer?"
- "Exit?"

Privacy/security

Turning ringer cutoff on and off

If you do not wish to take calls, you can activate the ringer cutoff function. Calls are only identified by **one** ring signal, and they are shown on the display.

Activating

Open the idle menu → page 21.

Select and confirm the option shown.

Deactivating

Open the idle menu → page 21.

Select and confirm the option shown.

Activating/deactivating "Do not disturb"

If you do not wish to take calls, you can activate do not disturb. Internal callers hear the busy tone, external callers are connected to another phone, which you can specify (contact your service personnel).

Activating

Open the idle menu → page 21.

Select and confirm the option shown.

Deactivating

 
Open the idle menu → page 21.

Confirm.



When you lift the handset, you will hear a special tone (continuous buzzing) reminding you that "Do not disturb" is activated.

Authorized internal callers automatically override the DND feature after five seconds.

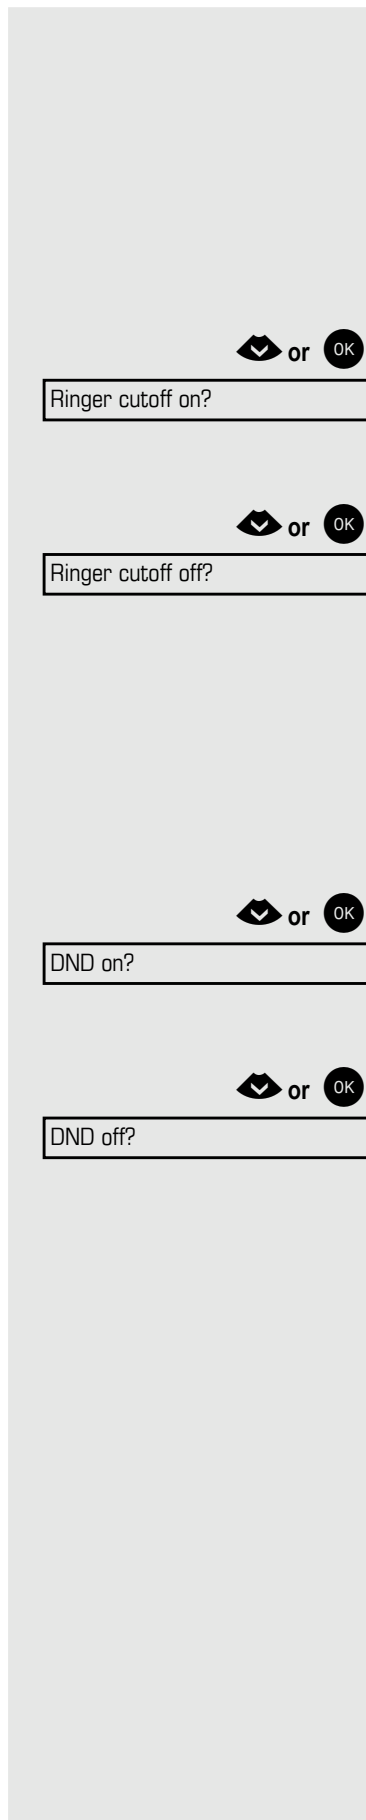

Caller ID suppression

You can prevent your station number or name from appearing on the displays of external parties you call. The feature remains active until you deactivate it.

Activating

Open the idle menu → page 21.

Select and confirm the option shown.

Deactivating

Open the idle menu → page 21.

Select and confirm the option shown.



 
Your service personnel can activate/deactivate caller ID suppression for all phones.

Silent Monitoring/Secret busy override

When configured (ask responsible service personnel), you can join in an on-going call conducted by an internal user and monitor silently and unnoticed.

Enter the code.

Enter your internal station number.

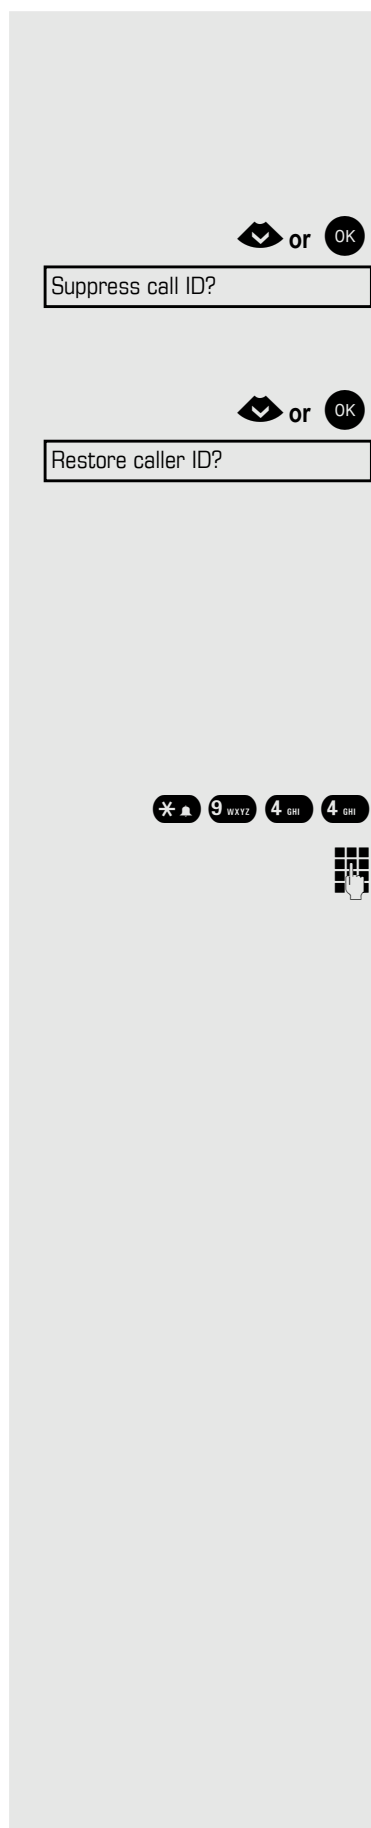

Monitoring a room

You can use a phone to monitor a room. This function must be enabled on the monitoring phone.

When you call this phone, you can immediately hear what is happening in that room.

Activating the telephone to be monitored

Press the key shown.

Select and confirm the option shown.

You can either leave the telephone in speakerphone mode or lift the handset and leave it directed towards the noise source.

Deactivating the telephone to be monitored

Press the lit key. The LED goes out.

Replace the handset.

Monitoring the room

Enter the internal station number of the phone located in the room that you wish to monitor.

Trace call: identifying anonymous callers (not for U.S.)

You can identify malicious external callers. You can record the caller's phone number during a call or up to 30 seconds after a call. In this case, you should not hang up.

Press the key shown.

Select and confirm the option shown.



If the trace is successful, the transmitted data is stored by your network operator. Contact your service personnel.



*88=Room monitor?



or



*84=Trace call?

Locking the telephone to prevent unauthorized use

You can prevent certain unauthorized functions being enabled on your phone during your absence. For example dialing external numbers and access to your mailbox can be prohibited. Ask your service personnel which functions are locked.

Locking the phone

Open the idle menu → page 21.

Select and confirm the option shown.

select and confirm the option shown.

Enter code (telephone lock) → page 72.



When the phone is locked, a special dial tone sounds when the handset is lifted. Within the system, users can make calls as normal.

 
Your phone can also be locked or unlocked by an authorized party → page 72.

Unlocking the phone

Open the idle menu → page 21.

Select and confirm the option shown.

Enter code (telephone lock) → page 72.

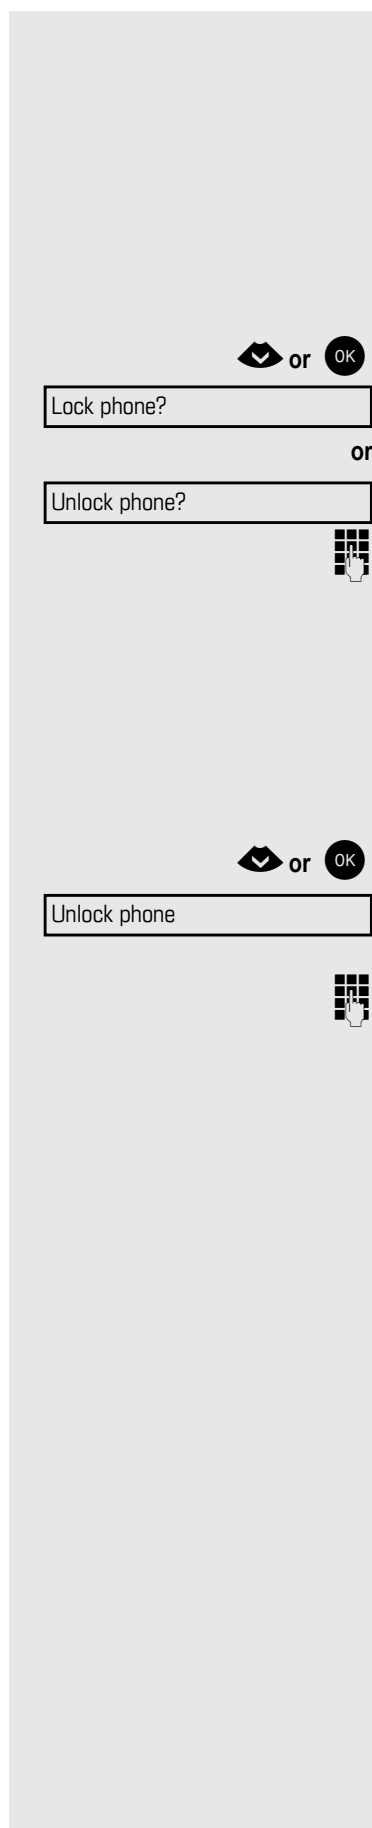

Locking another telephone to prevent unauthorized use

If configured (contact your service personnel), you can lock and unlock other telephones to prevent unauthorized access.

If a phone user locks his or her phone and forgets the personal lock code, you can use this function to unlock the phone.

Press the key shown.

Select and confirm the option shown.

Enter the internal station number of the phone you wish to lock/unlock.

Confirm

select and confirm the option shown.

Saving your PIN

Enter a personal code to use the functions

- Locking the telephone to prevent unauthorized use → page 71
- for using another telephone like your own → page 77
- for changing a number page 78.

You can save this code.

Press the key shown.

Confirm.

Enter the current five-digit PIN.

 
If you have not yet set a PIN, use "00000" the first time.

 
Enter the new PIN.

Re-enter the new PIN.



If you forget your code, contact your service personnel. Your code can be reset to "00000".

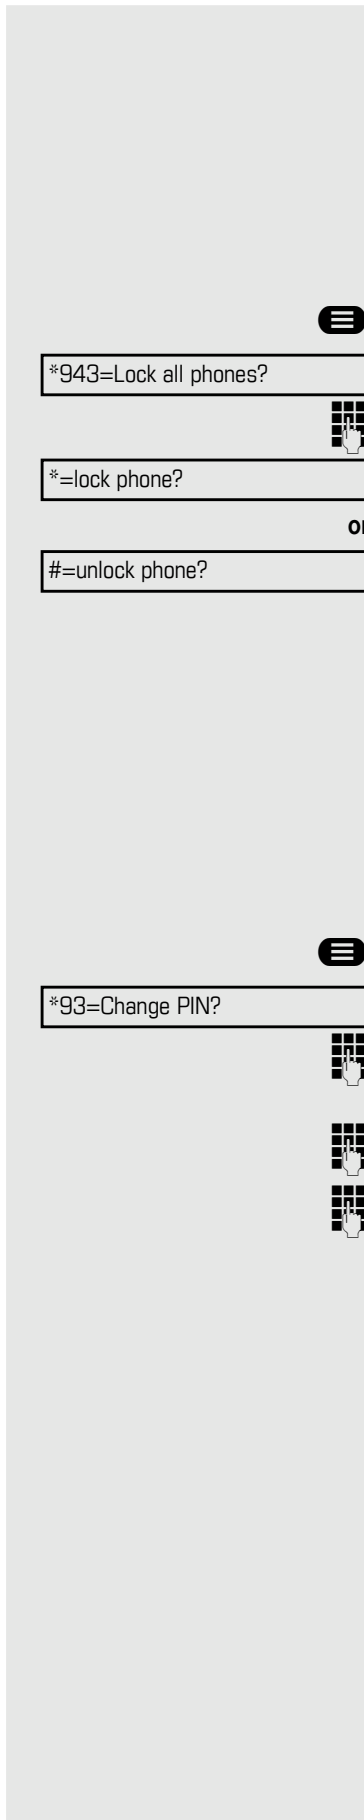



More functions/services

Appointments function

You can configure your phone to call you to remind you about appointments page 74.

You must save the required call times. You can enter a single appointment that will take place in the next twenty-four hours or you can enter a daily recurring appointment.

Saving appointments

Press the key shown.

Confirm.

Enter a 4-digit time such as 0905 for 9.05 (= 9.05 am) or 1430 for 14.30 (= 2.30 pm).

If the selected language is "US English" (configure □ Page 96) you can enter the code 2 for "am" or 7 for "pm" (default = "am").

Confirm.

Select and confirm the option shown.

Confirm.

Deleting and checking a saved appointment

Press the key shown.

Confirm.

Confirm.

Select and confirm the option shown.

Using timed reminders

 
Prerequisite: You have saved a reminder page 74. The saved time arrives.

The phone rings. The appointment time is displayed.

Press key twice.

Lift the handset and replace it again.

 If you do not answer the timed reminder, it is repeated five times and then deleted.

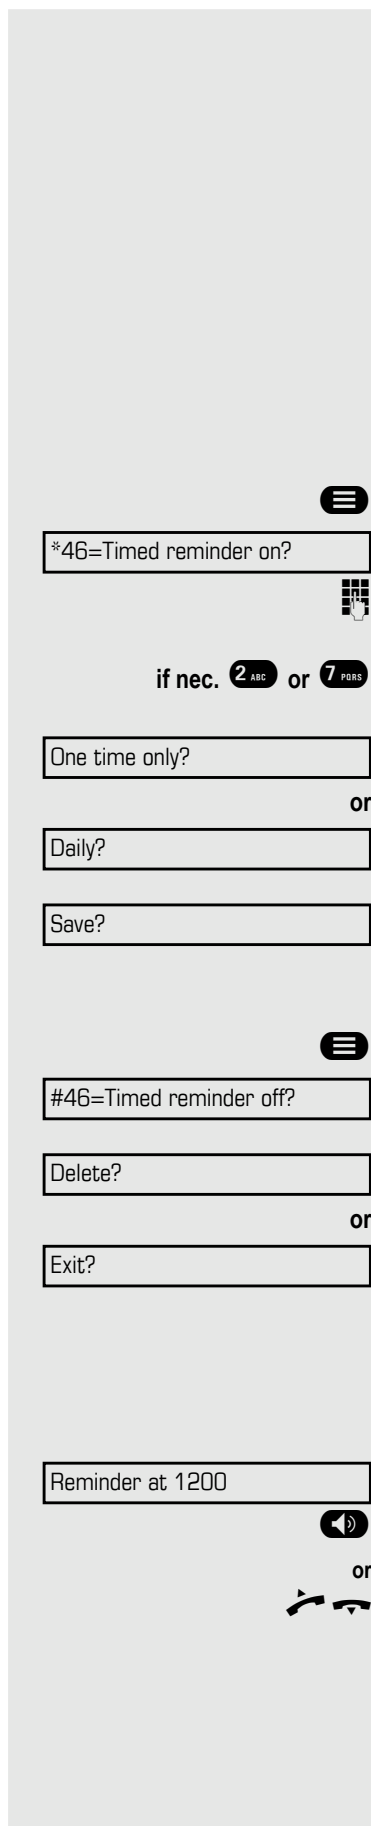

Sending a message

You can send short text messages to individual stations or groups of stations with system telephones.

Creating and sending a message

Open the idle menu page 21.

Select and confirm the option shown.

Enter the internal station number of the recipient or group.

Select predefined text (can be changed by service personnel) and confirm.

Enter the code directly.

The code is shown on your display with the corresponding message.

Select and confirm the option shown.

Text entry (up to 24 characters) .

Confirm.



Transmitted text messages are saved as callback requests on system telephones with no display and on ISDN, pulse or tone dialing telephones.

Displaying and deleting messages you have sent

Prerequisite: The recipient has not yet accepted a sent message.

Open the idle menu page 21.

Select and confirm the option shown.

Confirm.

The text message is displayed.

Select and confirm the option shown.

The message is deleted.

Viewing and editing incoming messages

Pay attention to the notes on page 23.

 
The LED lights up. Press the key shown.

Confirm.

The sender's caller ID appears on the display.

Confirm.


The text message appears on the display.

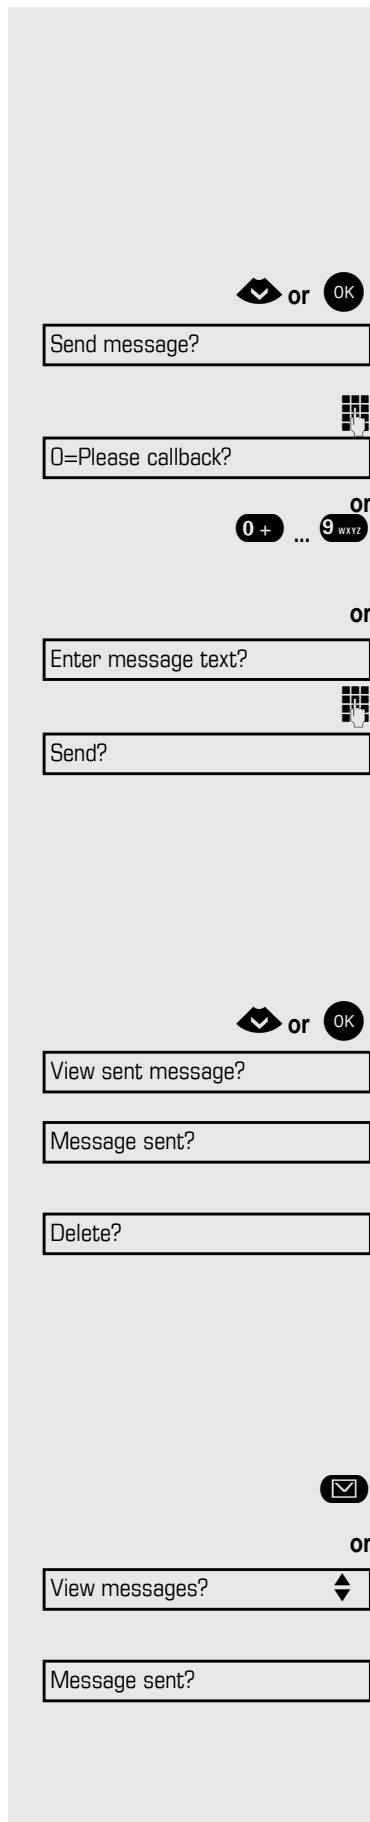

Time/date sent?

Call sender?

 
Delete?



Advisory msg. on

0=Will return at:

 or




or

Enter message text?



 Save?



Advisory msg. off?

Viewing the transmission time

Confirm.

Calling the sender

Select and confirm the option shown.

Deleting messages

Select and confirm the option shown.

Leaving an advisory message

You can leave messages/advisory messages on your phone's display for internal callers that wish to contact you in your absence.

When you receive a call, the message appears on the caller's display.

Open the idle menu ▢ Page 21.

Select and confirm the option shown.

Select predefined text (can be changed by service personnel) and confirm.

Enter the code directly.

The code is shown on your display with the corresponding message.



Predefined messages with a colon can be completed by entering a digit.

Select and confirm the option shown.

Enter message (up to 24 characters) .

Confirm.

Deleting advisory messages

Open the idle menu ▢ Page 21.

Select and confirm the option shown.

Displaying the number of waiting calls/ overload display

You can show the number of external waiting calls on the display if you programmed the "View number of calls" key .

Press the " Calls in Q" key.

If the number of waiting calls exceeds a preset limit while you are engaged in another call (overload), the LED on the key lights up. Contact your service personnel to find out the waiting call limit.

- LED off: There are no waiting calls.
- LED is flashing slowly: The set limit has been reached.
- LED is flashing quickly: The limit has been exceeded (overload).

Using another telephone like your own for a call

Other parties can temporarily use your phone like their own for an outgoing call.

Press the key shown.

Select and confirm the option shown.

Select and confirm the option shown.

Enter the number of the other user.

Enter the other user's code..

If the other user has not set a PIN, he or she is prompted to do so on his or her phone.

Dial the external number.

This state is canceled as soon as the call is ended.

Fax details and message on answering machine

If a fax or answering machine is connected to your system and you have assigned the "Fax details" function to a programmable key , the key lights up when a fax or a message has been received.

Deactivating signaling

Press the flashing "Fax service" key. The LED goes out.



PIN and Authorization?

*508=Temporary Phone?



if nec.

Change PIN?



Changing a number (after exchanging/moving/relocating a phone)

When configured (consult your service personnel), you can move your number to any other phone.

Your phone to date is then assigned the old number of your new phone; the number including phone settings (e. g. programmed keys) are exchanged.

Prerequisite: Your old and new telephone are the first telephones at each connection. The telephones are in idle state.

The following procedure is carried out on the new phone.

Press the key shown.

Select and confirm the option shown.

Enter own station number.

Enter code (telephone lock) .
(Not necessary if you have not set a code.)

Confirm.



If you change numbers of different system phones, programmed keys are replaced with the default assignment.

You can however connect your phone to a different port and then carry out the procedure.

 
Resetting services and functions (system-wide cancellation for a telephone)

A general reset procedure is available for initiated functions. The following functions are deleted, if enabled:

- Forwarding on
- Advisory msg. on
- Ringing group on
- Hunt group off
- Suppress call ID
- Call waiting tone off
- Do not disturb on
- Ringer cutoff on
- Received messages:
- View callbacks

Press the key shown.

Select and confirm the option shown¹.

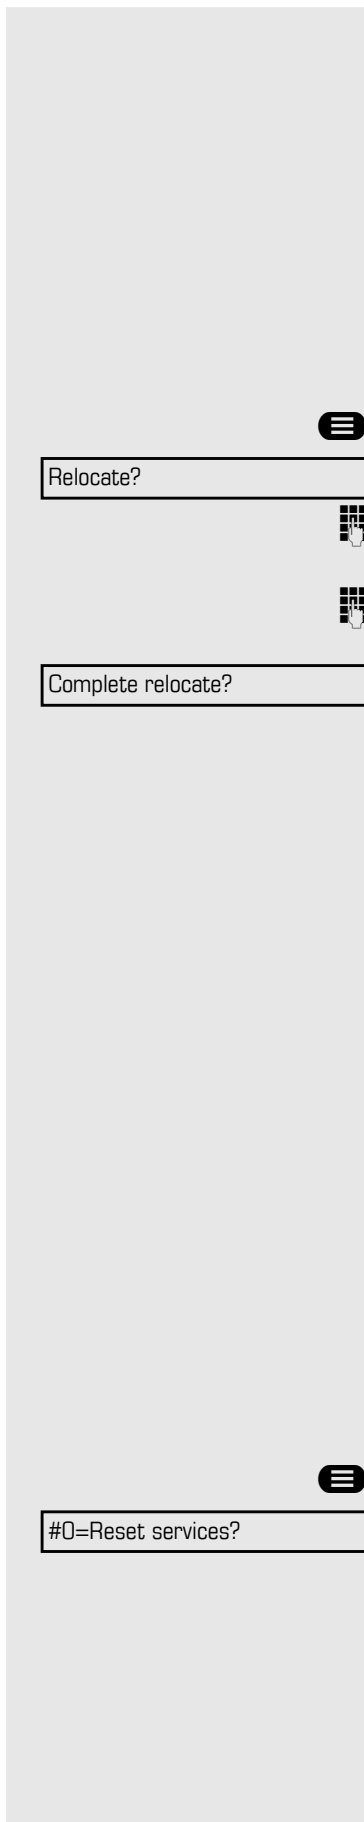

1.

Activating functions for another telephone

If configured (contact your service personnel), you can activate and deactivate the following functions for other phones (associated service):

- Do not disturb,
code: *97/#97
- Call forwarding, code *11, *12, *13/#1
- Lock and unlock phone,
code *66/#66
- Ringing group,
code *81/#81 (page 91)
- Leave an advisory message,
code *69/#69 (page 76)
- Group call,
code *85/#85 (page 91)
- Reset services and functions,
code #0 (page 78)
- Control relays,
code *90/#90 (page 83)
- Night answer,
code *44/#44
- Timed reminders,
code *46/#46 (page 74)

Press the key shown.

Confirm.

Enter the internal station number of the phone where you wish to activate the function.

Enter code (for example, *97 for "Do not disturb on").

For any additional input, follow the instructions on your display.



*83=Associated serv?



Using system functions from outside DISA (direct inward system access)

If configured (contact your service personnel), you can use an external phone like an internal station to set up an outgoing external connection via the system. You can also activate or deactivate the following system functions:

- Reset services and functions, code #0
- Call forwarding, code *1/#1
- Lock and unlock phone, code *66/#66
- Save your PIN, code *93
- Send a message, code *68/#68
- Leave an advisory message, code *69/#69
- Ringing group, code *81/#81
- Group call, code *85/#85
- Caller ID suppression, code *86/#86
- Camp-on tone, code *87/#87
- Open door, code *61
- Release door opener, code *89/#89
- Control relays, code *90/#90
- Do not disturb, code *97/#97
- Ringer cutoff, code *98/#98
- Dial using speed dial, code *7
- Associated service, code *83

Prerequisite: Your phone supports tone dialing (DTMF) or you can switch your phone to tone dialing. The phone is not connected to the system.

Establish a connection to the system. Enter the station number (contact your service personnel).

Wait for the continuous tone (if necessary, switch phone to tone dialing) and enter the internal number assigned to you and the corresponding PIN.

Enter the code (only required if programmed in the system).

Wait for the dial tone and enter the code for example, *97 for Do not disturb on. If necessary, make further entries; refer also to the user guide for dial pulse/DTMF phones.



or



Dial the external number.



You can only perform one function/establish one outgoing connection at a time.

The connection is cleared as soon as the function is successfully activated.

In the case of an external call, the connection is cleared as soon as one of the call partners hangs up.

Using functions in ISDN via code dialing (keypad dialing)

If authorized (contact your service personnel), you can access ISDN functions in some regions using codes.

Press the key shown.

Confirm.

Enter the required trunk number (contact your service personnel).

Entering a code for required ISDN function (contact your service personnel).



Contact your network provider to find out which ISDN functions can be code-operated in your country.

Unify Software and Solutions GmbH & Co shall not be liable for damages/costs which may be incurred by fraudulent activities or remote operation (such as toll fraud).

Controlling connected computers/programs/telephone data service

If this function has been configured (contact your service personnel), you can control connected computers or programs running on them, such as hotel services or information systems, from your telephone.

Prerequisite: You have set up a connection.

Press the key shown.

Confirm.

For entering data, you are guided by the connected computer. However, depending on configuration (contact your service personnel), you must activate your entries in one of the following ways:

Inputs in en-bloc mode:

Enter data.

Complete entry.

 
Confirm.

Inputs in online mode:

The connected computer processes your entries directly.

Enter the code.

Enter data.

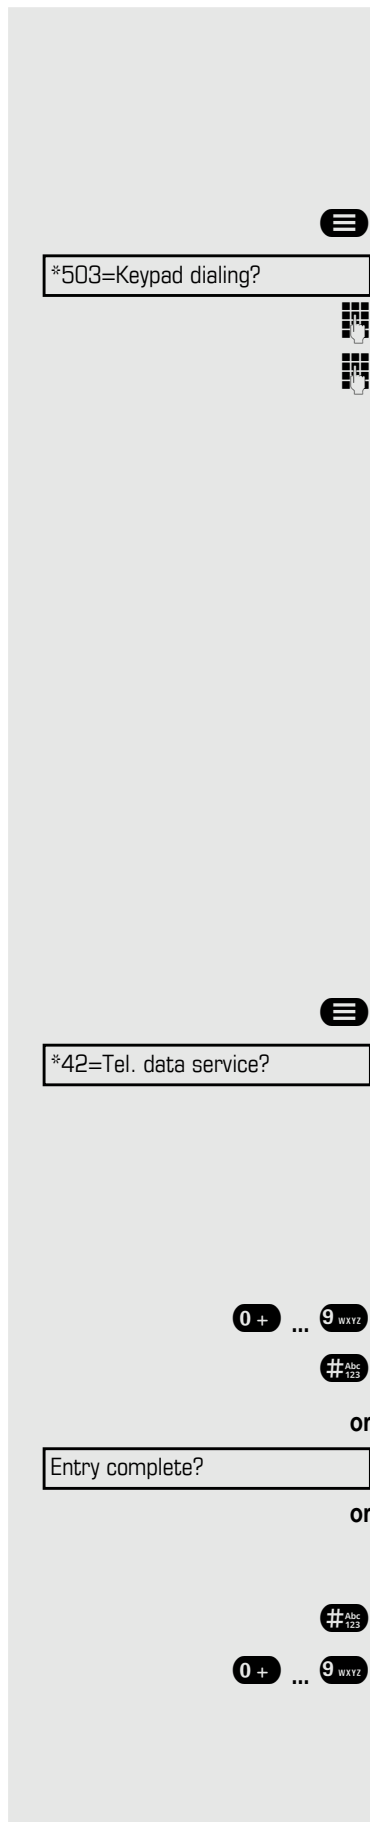

Communicating with PC applications over a CSTA interface

If configured (contact your service personnel), you can use your phone to communicate with PC applications (CSTA = **C**omputer **S**upported **T**elecommunications **A**pplications). You send information to the application and receive information from the application, for example, via your phone display.

Enter the code.

Enter the three-digit ID for the application you wish to control.

Use the relevant keys to communicate with the application.

Temporarily interrupting communication with the application

The phone rings. You answer the call.

The "Data I/O" key flashes: Communication to the application is automatically interrupted.

 
Resuming communication with the application

Press the flashing "Data I/O" key. The LED lights up.

Ending communication with the application

Select and confirm the relevant CSTA message.

Lift the handset and replace it again.

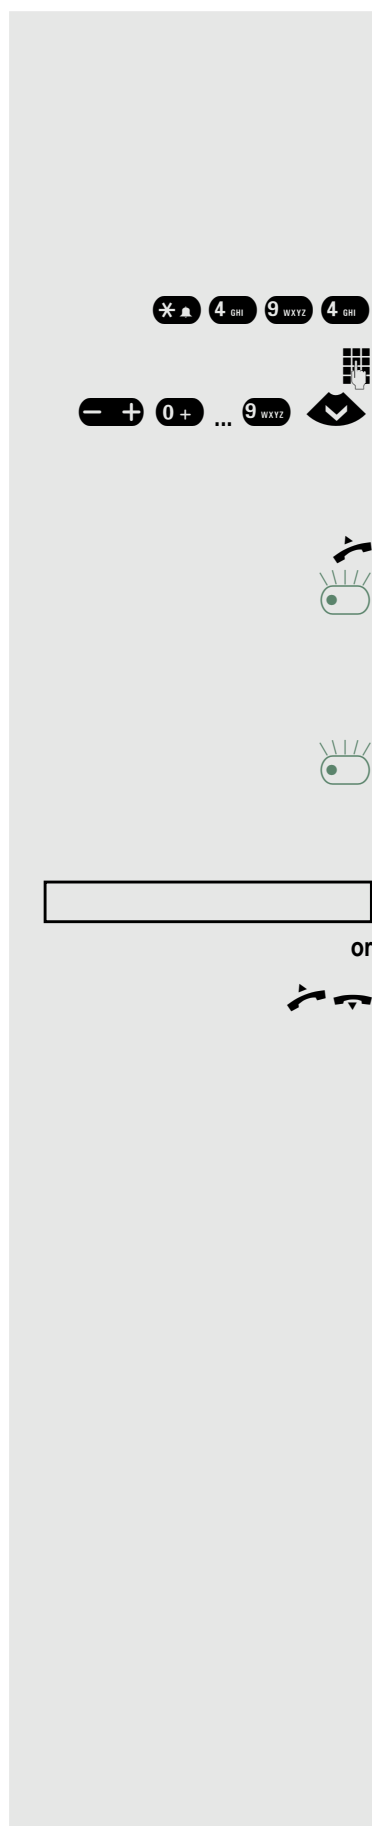

Controlling relays (OpenScape Business)

If this function has been configured (contact your service personnel), you can use up to four relays to enable/disable different devices (such as a door opener). Depending on how you program the relays, you can activate and deactivate them manually them or configure them to activate and deactivate automatically (after timeout).

Select and confirm the option shown.

select and confirm the option shown.

Enter the relay.

Sensors (OpenScape Business X3/XS only)

If configured (contact your service personnel), sensors are able to recognize signals, call your phone, and display an appropriate message on the screen.

Paging persons (not for U.S.)

If radio paging equipment (PSE) is connected to your system (contact your service personnel), you can locate people via their pocket receivers.

Pocket receivers signal a call request to the person you want to page. This person can then answer the page at the nearest phone.

Paging persons

 
To ensure that you can be found, you must have enabled a ringing group
 □ Page 92, call forwarding or call forwarding-no answer (service technician) to the internal station number of your PSE.
 A call request is signaled automatically.

Answering the page from the nearest telephone

Lift the handset.

Enter the code.

Enter own station number.

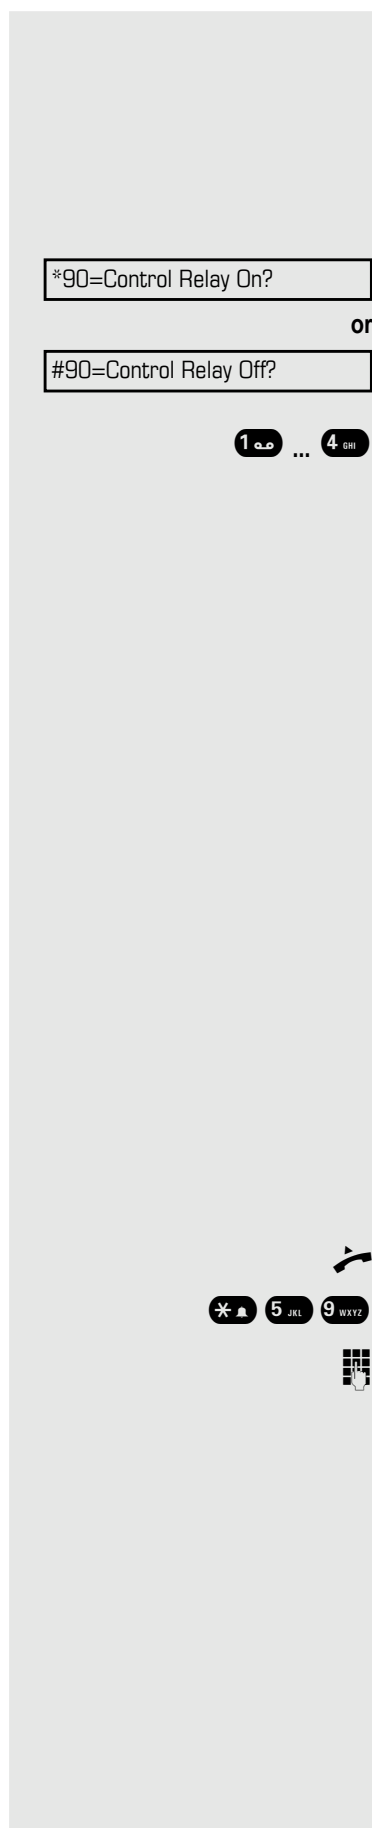

Making calls in the team/executive/secretary configuration

If configured (consult your service personnel), you belong to a team of subscribers with multiple lines. Your phone features trunk keys (MULAP keys) page 85.

Lines

A distinction is made between primary and secondary lines. Each of these line types can be used on a private or shared basis □ Page 84.

Primary line

All multi-line telephones have a primary line. This line can be reached in the usual manner via your public phone number. Incoming calls are signaled on this line.

Secondary line

The secondary line on your phone is used as a primary line by another subscriber. Your primary line, which is configured on another telephone, simultaneously functions as the secondary line on that telephone.

Line utilization

Private line

A line that is used by a single telephone. This line cannot be used as a secondary line by another telephone.

Shared line

A line that is configured on multiple telephones. The line status (if configured) is displayed for all telephones that share this line. If, for example, a shared line is being used by a telephone, a status message indicating that this line is busy is displayed on all other telephones.

Direct call line

A line with a direct connection to another telephone.
You can see the status of the line from the LED.

Line seizure

Line seizure must be configured (consult your service personnel). If automatic line seizure is configured, a trunk is automatically assigned when you lift the handset or press the trunk key.

Trunk keys

The programmable keys on multi-line phones function as line keys. Every sensor key programmed as a "Trunk key" (key label: Transfer Trk) corresponds to a trunk with the result that you can configure up to 8 trunks in OpenStage 30 T .

As a team member, you can independently program the following functions on keys :

- Direct station select
- Join/leave group
(not available on executive phone in an executive/secretary team)
- Ring Transfer: On/Off
(only in an executive/secretary team)

You can also program a sensor key with the function "Forward Line" (call forwarding) for each line.

LED displays on trunk keys

LED		Explanation
	Off	–The line is in idle mode.
	Flashing ¹	–Incoming call on the line. –Hold reminder is activated. –The line is on "Hold".
	On	–The line is busy.

¹ In this manual, flashing keys are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

Answering calls with the trunk keys

Prerequisite: Your telephone rings or the trunk key flashes quickly.

if nec. 

Press the trunk key that is flashing quickly.
(not necessary if "Prime Line" is active).



Lift the handset.

or

On-hook dialing: Speakerphone mode.

Dialing with trunk keys

if nec. 

Press the free trunk key you wish to use to establish the connection
(not necessary if "Prime Line" is active).



Dial the phone number.



If the party does not answer: Lift the handset.

or

On-hook dialing: Speakerphone mode.

Placing a call on hold on a trunk key and retrieving the held call

Prerequisite: You are conducting a call via one of your group's trunks. The "Hold" key has been programmed on your telephone.

Hold



Press the "Hold" key.

if nec.



Replace the handset.

Depending on the configuration (contact your service personnel), this may be necessary so other team members can also pick up the call on hold.

Retrieving the call



Press the trunk key flashing slowly.

Making calls on multiple lines alternately

Prerequisite: You are conducting a call via one of your group's trunks. Another trunk key is flashing.



Press the flashing trunk key. The first call party is on hold on the other trunk.

Press the trunk key flashing slowly. The second call party is on hold.

You can switch between lines as often as you wish. Press the trunk key flashing slowly each time.

MULAP conference release

If configured (consult your service personnel), you can program a sensor key on your phone with the function "MULAP Privacy Release". The default label is "Priv Release".

If you program this key, you do not have to use the menu to set up a conference. Your team partner only has to press the flashing trunk key associated with your trunk on his or her phone to immediately join the conference.



You are conducting a call.



Press the "Priv Release" key. The LED lights up.

Up to three team members can now join the conference.

Prerequisite: The trunk on which you are speaking is configured on the other phone as a trunk key.



Press the flashing trunk key.

Direct station selection key

Each team member has a direct station selection key for every other team member.

This means that each team member can be reached directly by other team members at the touch of a button.

Understanding LED messages from DSS keys



or



or



or

LED on the DSS key is off - the team member is not engaged in a phone call.

LED on the DSS key is lit - the team member is engaged in a phone call or has activated do not disturb.

LED on the DSS key is flashing **rapidly** - a call has arrived for you and needs to be answered.

LED on the DSS keys is flashing **slowly** - a caller is trying to reach another member of your team, who has not yet answered.

Using DSS keys to answer calls

Prerequisite: Your telephone rings or the DSS key flashes.

Press the flashing DSS key.

This is not necessary if you are called directly (DSS key flashes quickly).

if nec.



or

Lift the handset.

On-hook dialing: Speakerphone mode.

Calling a team member directly



or



or

Press the DSS key.

If the team member you wish to reach is engaged in another call, the DSS key on your telephone is lit. You can still make the call in this case.

If the party does not answer: Lift the handset.

On-hook dialing: Speakerphone mode.

Transferring a call in progress



Press the DSS key and announce the call if necessary.



Replace the handset.

Accepting a call for another team member



Press the flashing DSS key or trunk key.



Lift the handset.

or

On-hook dialing: Speakerphone mode.

Forwarding calls on trunks

You can immediately forward internal or external calls to different internal or external telephones (destinations). (External destinations require special configuration in the system).

Activating call forwarding for one trunk activates the function for all trunk keys assigned to this trunk in your group.



Open the Program/Service menu (page 24).

Forward MULAP on

Select and confirm the option shown.

or



If available, press the "CFW MULAP" key.

(You have programmed a key with the incomplete "CFW MULAP" function, excluding the call forwarding type and destination .)



Press the required line key.

or



Enter the required trunk number.

1=all calls

Select and confirm the option shown.

or

2=external calls only

select and confirm the option shown

or

3=internal calls only

select and confirm the option shown.



Enter the destination number.

Save

Confirm.

or



If available, press the "CFW MULAP" key. (You have stored the call forwarding type and destination on the "CFW MULAP" key,)

Deactivating call forwarding

Open the Program/Service menu (page 24).

Select and confirm the option shown.

Press the required line key.

or



Enter the required trunk number.

or



If available, press the "CFW MULAP" key.



If you have activated call forwarding for a trunk, a special dial tone sounds when the line is seized.

Understanding LED messages of the "CFW MULAP" key



The LED on the "CFW MULAP" key is off - call forwarding is not active for this trunk.

or



The LED on the "CFW MULAP" key lights up - call forwarding is active for this trunk.

or



The LED on the "CFW MULAP" key is flashing **slowly**, the trunk is the call forwarding destination.

Transferring calls directly to the executive phone

Normally, all calls for the executive are audibly signaled only by the secretary phone.

You can set audible signaling so calls are signaled only by the executive phone or by a second phone assigned to it.

Prerequisite: On your phone there is a sensor key programmed with the function "Ring Transfer". The default label is "Ring xfer".

Activating



or



Ring Transfer: On



or



Press the "Ring xfer" key. The LED lights up.

Open the Program/Service menu (page 24).

Select and confirm the option shown.

Press the required line key.

Enter the required trunk number.

Deactivating



or



Ring Transfer: Off



or



Press the "Ring xfer" key. The LED goes out.

Open the Program/Service menu (page 24).

Select and confirm the option shown.

Press the required line key.

Enter the required trunk number.

Using team functions

If configured (consult your service personnel), your telephone is part of a team. The team consists of internal phones that are able to use certain functions.

Activating/deactivating a group call

If configured (consult your service personnel), you belong to one or more groups of stations, which can be reached via hunt group or group call station numbers. Incoming calls are signaled one after the other (= hunt group) or simultaneously (= group call) on all phones in the group, until a group member answers the call.

Each station in the group can still be reached via their personal station number.

You can activate and deactivate the audible signal for a hunt group, group call or individual trunks in a group.

You are part of a hunt group or call group

Open the idle menu ▢ Page 21.

Select and confirm the option shown¹,

Select and confirm the option shown.

Press the "Hunt group" key.

You belong to multiple groups

Open the idle menu ▢ Page 21.

Select and confirm the option shown¹,

select and confirm the option shown.

Press the "Hunt group" key.

If an "X" appears between group/trunk number (such as 301) and group name, the audible tone is active for this group or trunk.

No "X" means that the audible tone is deactivated.

Confirm. The next group/trunk number is displayed with a group name.

Select and confirm the option shown².
The audible tone for the group/trunk displayed is deactivated.

Select and confirm the option shown¹.
The audible tone for the group/trunk displayed is activated.

[Speaker icon] or [OK]
 Leave group?
 or
 Join group?
 [Toggle switch] or [Toggle switch]
 [Speaker icon] or [OK]
 Leave group?
 or
 Join group?
 [Toggle switch] or [Toggle switch]
 301 X Group name
 or
 301 Group name
 Next?
 or
 Leave group?
 or
 Join group?

#=Leave all groups

Select and confirm the option shown.
The audible tone for all groups and trunks is deactivated.

*=Rejoin all groups

Select and confirm the option shown.
The audible tone for all groups and trunks is activated.



If you have activated the audible tone for another group/trunk or deactivated the audible tone for all groups/trunks you belong to, you will hear a special dial tone when you lift the handset.

Accepting a call for another member of your team

You can use your own telephone to accept calls for other telephones in your team, even while on a call (call pickup groups; contact your service personnel).

Prerequisite: Your telephone rings briefly. "Call for:" appears on the upper display line with the station number or name of the originator; the station number or name of the caller appears on the lower line.

Pickup - group?

Confirm.

Ringling group

You can have calls for your telephone signaled audibly at up to five other internal phones. The phone that answers the call first receives the call.

Saving, displaying, and deleting telephones for the ringing group

Press the key shown.

*81=Ringling group on?

Select and confirm the option shown.

Follow the display prompts (enter the internal station number).



If your phone belongs to a ringing group, your display will show the station number or the name of the originator on the upper line and that of the caller on the lower line.

Ringling group off?

Removing all telephones in a call ringing group

Select and confirm the option shown.

Uniform Call Distribution (UCD)

If configured (consult your service personnel), you may belong to a group of stations (agents), to which calls are distributed.

An incoming call is always assigned to the agent idle the longest.

Logging on and off at the beginning and end of your shift

Press the key shown.

Select and confirm the option shown.

Confirm

select and confirm the option shown.

To log on, enter your identification number ("Agent:"). Contact your service personnel to find out what it is.

Logging on and off during your shift

Press the key shown.

Select and confirm the option shown.

Confirm.

select and confirm the option shown.

The screenshot displays a telephone system interface with two main sections. Each section begins with a menu icon (three horizontal lines) and a numeric keypad icon. The first section shows a box with 'UCD?', followed by a box with '*401=Log on?'. Below this is the word 'or' and a box with '#401=Log off?'. The second section also starts with a menu icon and a box with 'UCD?', followed by a box with '#402=Not available?'. Below this is the word 'or' and a box with '*402=Available?'. The interface is set against a light gray background.

Requesting and activating a work time

You can request/activate work time to ensure you have enough time to wrap up the last call. Your phone is excluded from call distribution for a set period or until you log back on.

Press the key shown.

Select and confirm the option shown.

UCD?

*403=Work on?

or

#403=Work off?

Confirm.

select and confirm the option shown.

Turning the night service on and off for UCD

Press the key shown.

Select and confirm the option shown.

UCD?

*404=UCD night on?

or

#404=UCD night off?

Confirm.

select and confirm the option shown.

Display the number of waiting calls

Press the key shown.

Select and confirm the option shown.

UCD?

*405=Calls in queue?

Confirm.

Individual phone configuration

Setting contrast

Press one of the keys shown in idle mode .

Select and confirm the option shown.

Modify the setting. Keep pressing the key until the desired contrast is set.
Save.

Adjusting audio settings

Optimize the audio settings on your OpenScape Desk Phone CP200T for your environment and according to your personal requirements.

Adjusting the receiving volume during a call

You are conducting a call.

Raise or lower the volume. Keep pressing the key until the desired volume is set.
Save.

Adjusting the ring volume

Press one of the keys in idle mode or while a call is in progress.

Confirm.

 
Raise or lower the volume. Keep pressing the key until the desired volume is set.
Save.

Adjust ring tone

Press one of the keys shown in idle mode .

Select and confirm the option shown.

To adjust the ring tone: Keep pressing the keys until the desired tone is set.
Save.

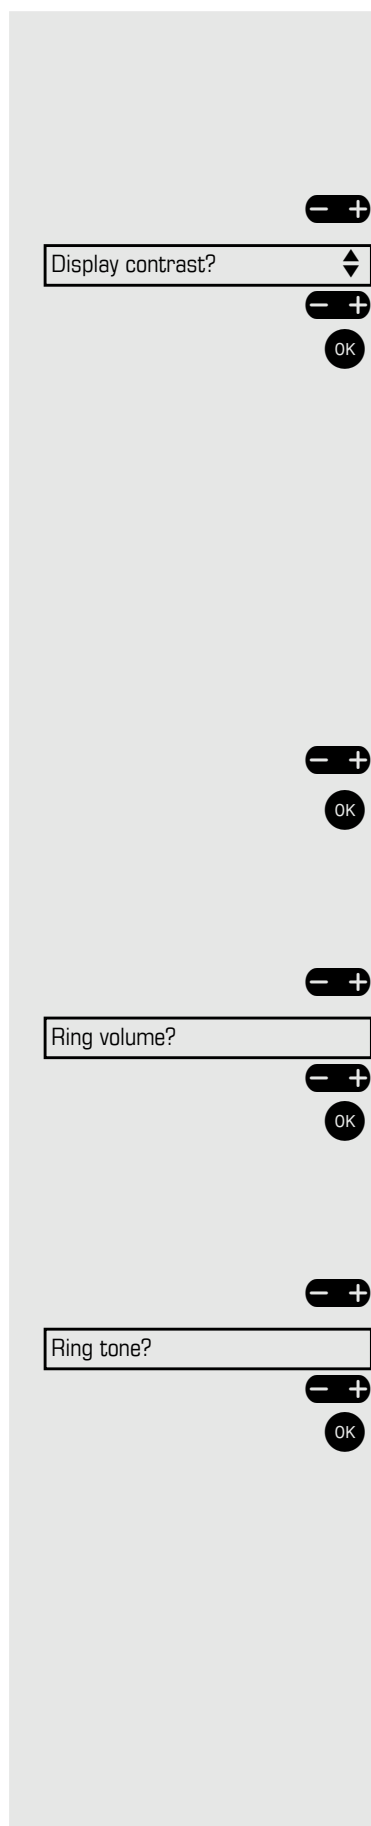

Adjusting the attention ring volume

If you are part of a team with line keys, other calls can be signaled acoustically in the team during a call. You will hear the attention ring.

Press one of the keys shown in idle mode .

Select and confirm the option shown.

Raise or lower the volume. Keep pressing the key until the desired volume is set.
Save.

Adjusting the speakerphone to the room acoustics

To help the other party understand you clearly while you are talking into the microphone, you can adjust the telephone to the acoustics in your environment: "Quiet room", "Normal room" and "Noisy room".

Press one of the keys shown in idle mode .

Select and confirm the option shown.

To set the room type: Keep pressing these keys until the setting you want appears on the screen.

Save.

Language for system functions

Press the key shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select the language you wish to use (e.g. "Spanish") and press the  key to confirm.



Testing the phone

Testing functionality

You can test your phone's functionality.

Prerequisite: The phone is in idle mode.

Press the key shown.

Select and confirm the option shown.

Select and confirm the option shown.

If everything is functioning correctly:

- all LEDs on the phone flash (only the menu key LED is continuously lit)
- your station number is displayed
- the ring tone is audible

Checking the key assignment

 
You can check key assignment on your phone to determine which functions are assigned to which keys.

Press the key shown.

Select and confirm the option shown.

Press any key. The key assignment is displayed.

Select and confirm the option shown.

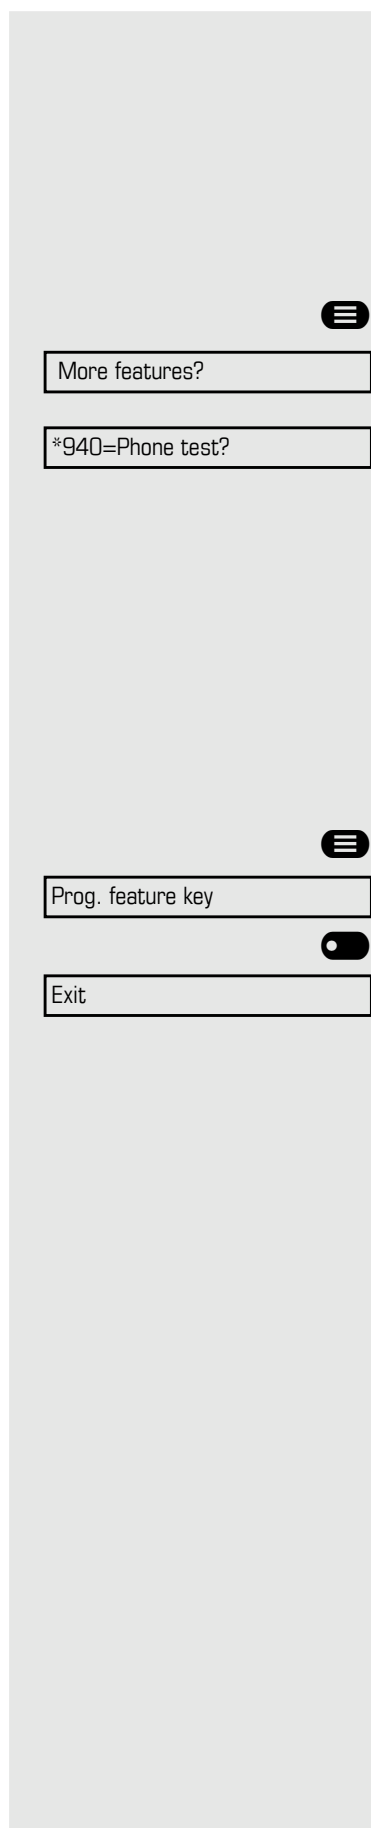

Fixing problems

Caring for your telephone

- Never allow the telephone to come into contact with coloring, oily or aggressive agents.
- Always use a damp or antistatic cloth to clean the telephone. Never use a dry cloth.
- If the telephone is very dirty, clean it with a diluted neutral cleaner containing surfactants, such as a dish detergent. Afterwards remove all traces of the cleaner with a damp cloth (using water only).
- Never use cleaners containing alcohol, cleaners that corrode plastic or abrasive powders!

Troubleshooting

Pressed key does not respond:

- Check if the key is stuck.
- If the phone is locked, selected dialing keys cannot be used. This also applies even if an emergency number is saved on this key.

Check whether your telephone is locked (The following message appears on the screen: "Phone locked. To unlock enter the PIN. "). If the phone is locked, enter your PIN to unlock it.

The phone does not ring on call:

Check whether the ringer is deactivated (see icon in the status bar on the display → page 68). If it is deactivated, activate the ringer.

You cannot dial a number:

Check whether your telephone is locked (The following message appears on the screen: "Phone locked. To unlock enter the PIN. "). If the phone is locked, enter your PIN to unlock it.

To correct any other problems:

First consult your administrator. Customer Service must clarify any problems that cannot be resolved.

Contact partner in case of problems

Contact your administrator if a fault persists for more than five minutes, for example.

Repair and recycling concept, extending performance capability

Recycling and disposal of equipment in the OpenScape Desk Phone family

Return of OpenScape Desk Phone waste equipment.

a) Legal and other foundations

The take-back of equipment and spare parts is based on

- EU Directive 2002/96/EC (WEEE),
- the German "Act Governing the Sale, Return and Environmentally Sound Disposal of Electrical and Electronic Equipment" (ElektroG).

b) Separate collection according to ElektroG

Users of electrical and electronic equipment are obliged to collect waste equipment separately and supply for proper disposal.

This waste equipment must not be disposed of together with unsorted municipal waste (normal household waste). Separate collection is a condition for reuse, recycling and efficient recovery of waste equipment and the basis for the recovery of materials.

c) Reuse, recycling and recovery

Attention is paid to ease of disassembly/recycling of the OpenScape Desk Phone waste equipment as early as the product development stage.

Reuse:

The waste equipment is repaired and refurbished and introduced into the spare parts cycle where it is then reused.

Recycling and recovery of OpenStage equipment that is no longer usable:

the equipment is roughly disassembled and introduced into various recovery operations prior to further treatment. The various metals are separated using special shredder equipment for electronic scrap. Copper and precious metals are processed by refining. Aluminum and iron are separated and supplied for melting.

 
Repair reliability and spare part supply

 
Unify Software and Solutions GmbH & Co. KG guarantees repair support and spare part supply for up to 5 years following product discontinuation of the OpenScape Desk Phone telephones.

Extending performance capability

The functionality of all OpenScape Desk Phone telephones can be extended fundamentally by means of software updates.

Please contact your administrator/system support if necessary in this respect or your sales partner at Unify Software and Solutions GmbH & Co. KG.





Index

A

Activating door opener	40
Advisory message	76
deleting	76
Agents	93
Alternating	33
Announcement	48
Answer timed reminder	74
Answering machine	77
Assigning a DID number	49
Associated dialing/dialing aid	50
Associated service	79
Attention ring volume	96
Automatic call waiting	52
Automatic connection setup	49
Automatic line seizure	30

B

Busy override	58, 69
---------------------	--------

C

Call	
accepting	26
accepting in a team	88
accepting, group	92
distributing	93
ending	29
entrance phone	40
forwarding	34
forwarding in a team	88
holding	54
in a team with trunk keys	85
incoming	26
parking	53
pickup, directed	39
rejecting	32
retrieving from park	53, 54
transfer after announcement	57
transferring	33, 88
using DSS keys in a team	87
Call forwarding	34
MSN in CO	36
Call log	24
Call request	24
Call signal	26
Call type	64
Call volume	95

Call waiting	58
accepting	51
Call waiting (camp-on)	
tone off	52
Call waiting on/off	52
Call waiting tone on/off	52
Callback	37
Caller ID suppression	69
Caller list, using	43
Calling a second party	33
Calls	
recording	56
Calls in queue	77, 93
CE marking	3
Central telephone lock	72
CFNR	35
Change number	78
Changed phone	78
Checking the key assignment	97
Code dialing in ISDN	81
Conference	33
Connection setup	
automatic	49
Connection setup, automatic	49
Consultation	33
Control relays	83
CSTA	82

D

Details, fax	77
Dialing	
en-bloc	42
from the caller list	43
with speed dialing	47
with the dialing aid	50
Dialing aid	
S0 bus	50
Dialing numbers	
from the internal directory	44
from the LDAP database	45
using redial	31
Direct inward system access (DISA)	80
Direct station select	87
Directory, internal	44
DISA	80
Discreet calling	48
Distributing calls	93
Do not disturb	68
Door release	41

- E**
- Editing a dial number 42
 - Editing dial inputs 42
 - Editing the station number 42
 - En-bloc dialing 42
 - Entrance telephone 40
- F**
- Fax details 77
 - Forwarding
 - MSN in CO 36
 - multiple subscriber number (MSN) 36
 - Forwarding MSN in CO 36
 - Function key
 - Programmable 18
 - Functions
 - activating/deactivating for another telephone 79
 - resetting 78
 - using from the outside 80
- G**
- General information 10
 - Group call 91
- H**
- Handsfree answerback 39
 - off 39
 - on 39
 - Hold 54
 - Hotline 49
 - Hotline delayed 49
 - Hunt group 91
- I**
- Idle mode 21
 - Important information 3
 - Incoming calls 24
 - Internal directory 44
- K**
- Key
 - Immediate ring 66
 - Keypad dialing 81
- L**
- LDAP telephone database 45
 - Leaving an advisory message 76
 - LED
 - trunk keys 85
 - LED displays
 - Direct station selection keys (DSS) 18
 - Function keys 18
 - LED messages, understanding 87, 89
 - Line seizure, automatic 30
 - Line utilization 84
 - Locking all phones 72
 - Locking/unlocking 71
- M**
- Making calls 30
 - MultiLine 91
 - Making mobile calls 77
 - Message
 - answering 75
 - deleting/displaying 75
 - receiving 75
 - sending 75
 - Microphone 29
 - Move function 78
 - Move with phone 78
 - MULAP conference release 86
 - MULAP keys, trunk keys 84
 - Multiple subscriber number (MSN)
 - forwarding 36
- N**
- Night answer 59
- O**
- Open listening 29
 - Opening a door 40
 - with a code 40
 - OpenStage 30T
 - speakerphone mode function
 - notes 27
 - setting the room character 96
 - Operating instructions 3
 - Outgoing calls 24
 - Overload 77

P

Parking a call	53
Personal identification number	72
Phone	
locking another	72
locking/unlocking centrally	72
using another like your own	77
Phone settings	95
Pickup (call)	39, 92
PIN	72
for a telephone	71
Placing a call on hold	
in the team	86
Primary line	84
Private line	84
Program/Service menu	24
Programmable function key	18
Programmable keys	61

R

Radio paging equipment (PSE)	83
Recall	57
Receiving volume	95
Recording	56
Redialing a number	31
from the caller list	43
Relays	83
Relocate	78
Redial keys	31

Reserve trunk	49
Resetting functions	78
Resetting services	78
Ring transfer	
in an executive/secretary team	90
Ringer cutoff	68
Ringing group,	92
Room monitor	70

S

Save PIN	72
Second call	52
accepting	51
Second layer	31
Secondary line	84
Secret busy override	69
Sensors	83
Shared line	84
Shift	31
Shift key	31
Silent monitor	
no tone	69
Speaker call	48
Speakerphone	
notes	27
Speakerphone mode	27, 28
function	27, 28
information	27
setting the room character	96
setting the volume	96
Special dial tone	68
Speed-dialing	
dialing	47
saving station speed-dialing	47
suffix-dialing	47
system	47
Station number	
assigning	49
correcting	42
deactivating display	69
suppressing	69
Station speed-dialing	47
Suffix-dialing	
automatic	47
DTMF tone dialing	56
System speed-dialing	47
System-wide cancellation	78

T

Tel. data service	81
Telephone	
locking	71
locking/unlocking	71

Telephone database LDAP	45
Telephone maintenance	98
Temporary phone	77
Text	
answering	75
receiving	75
Text message	
deleting/displaying	75
sending	75
Three-party conference	33
Timed reminder	74
Toggle/connect	
in the team	86
Tone dialing	56
Tone dialing (DTMF dialing)	56
Trace call	70
Transfer (call)	33, 88
after announcement	57
Troubleshooting	98
Trunk flash	57
Trunk keys	85
Trunk, reserving	49

U

UCD	93
Unanswered calls	24
User interface	
OpenScape Desk Phone IP	14

V

Variable call forwarding	34
Volume	
set	31

W

Waiting calls	77
Work time	94