

Quick reference guide – basic functions

Call Log, Phone Book, Call Forwarding, redial (Programmable keys)



Hold and retrieve, Transfer, conference, Settings, Messages




- 1. Handset
- 2. Intuitive display
- 3. LED (incoming/missed call/voicemail)
- 4. Programmable keys
- 5. Dialpad
- 6. Navigation keys

Adjust volume, ringtone, brightness or contrast, mute key, activate/deactivate Loudspeaker / Headset

How to adjust the volume?

Display	What to do?
	Press 
Ringer Volume?	Press  and adjust volume with 

How to adjust the ringtone?

Display	What to do?
	Press 
Ringer Volume?	Press 
Ringer Tone ?	Press  and adjust the tone 

Transferring a call or return to the held party

Display	What to do?
Enquiry?	Press 
Please dial	Dial the number (intern or extern(with the outside line "0"))
Return to held call?	Replace the handset to transfer the call
Quit and return?	Press  to return to the first party

Forwarding your calls

Display	What to do?
	Press 
1=all calls 2= external calls only 3= internal calls only	Select diversion type Press 
To:	Enter the destination number (intern or extern (with "0"))
Save?	Press  to confirm

Deactivating call forwarding

Display	What to do?
To: xxxx ↳ xxxx	Press 

Programming the function keys (4 keys)

Display	What to do?
	* 91
Press Feature key	Press 1 of the 4 keys you want to program
Change feature?	
Rep. Dial key?	
Tel.no:	Dial the number (intern or extern(with the outside line "0"))
Save entry?	
End?	

Conference call (Party A is on the phone with you)

Display	What to do?
Enquiry?	
Start conference?	
Please dial	Dial the number (intern or extern(with the outside line "0"))
Conference?	 or press  when connected to party B

Extend the conference (8 parties max)

Display	What to do?
Add Party?	
Please Dial	Dial the number (intern or extern(with the outside line "0"))
Quit and return?	Press 2 x 
Conference?	 or press 

Other functions

Activate function	* [+code]
Deactivate function	# [+code]
Use Speed dialing	* 7
Caller list	#82
Activate Call forwarding	*1
Do not disturb	*97
Silent ringing on	*98
Suppress call ID	*86
Camp on tone off	*87
View callbacks/delete	#58
Speaker Call	*80
Directed Call Pick-up	*59
Configure function keys	*91
Select language	*48
Reset services	#0