



How to adjust the volume?

Display	What to do ?
	Press 
Ringer volume	Adjust the volume with 

How to adjust the ringtone?

Display	What to do?
	Press 
Ringer Volume?	Press 
Ringer Tone ?	Press  and adjust the tone 

Transferring a call or return to the held party

Display	What to do ?
Enquiry ?	Press the softkey Dial the number (intern or extern (with outside line 0))
Return to held call?	Replace the handset to transfer the call
Quit and return?	Press the respective softkey to return to the waiting call

Forwarding your calls

Display	What to do ?
Forwarding on	Press softkey
Select diversion type (All, external or internal)	Enter the destination number (intern or extern (with 0))
Save Entry?	Press softkey

Deactivating call forwarding

Display	What to do ?
Forwarding off 	Press softkey : Forwarding off

Key programming (16 keys)

Display	What to do ?
	Long press on the free key
Assign telephony function	Press softkey
Not programmed	
Change feature?	Press softkey
Destinations?	Press softkey
Redial key?	Press softkey
Tel.no:	Dial the number (intern or extern (with outside line 0))
Save Entry?	Press softkey
End?	Press softkey

Conference (Party A is on the phone with you)

Display	What to do ?
Enquiry?	 or use softkey
Start conference ?	Press softkey
	Dial the number (intern or extern (with outside line 0))
Conference?	Press softkey

Extend the conference (8 parties max)

Display	What to do ?
Add party?	Press softkey
	Dial the number (intern or extern (with outside line 0))
Conference?	Press softkey

Other functions

Activate function	* [+code]
Deactivate function	# [+code]
Use Speed dialing	* 7
Activate call forwarding	*1
Do Not Disturb	*97
Silent ringing on	*98
Suppress call ID	*86
Camp on tone OFF	*87
View callbacks/delete	#58
Speaker call	*80
Directed call pick-up	*59
Configure function keys	*91
Select language	*48
Reset services	#0
Park a call	*56