



A MITEL
PRODUCT
GUIDE

Unify OpenScape Desk Phone CP210

OpenScape Voice

OpenScape Business

User Guide HFA

12/2024

Important information



For safety reasons, the telephone should only be supplied with power:

- using the original power supply unit.
- over a LAN with PoE (Power over Ethernet), which complies with the IEEE 802.3af standard.



Never open the telephone. Should you encounter any problems, consult your administrator.



Use only original accessories.

The use of other accessories is hazardous and will render the warranty, extended manufacturer's liability and the CE and other markings invalid.

Trademarks

The trademarks, service marks, logos, and graphics (collectively "Trademarks") appearing on Mitel's internet sites or in its publications are registered and unregistered trademarks of Mitel Networks Corporation (MNC) or its subsidiaries (collectively "Mitel"), Unify Software and Solutions GmbH & Co. KG or its affiliates (collectively "Unify") or others. Use of the trademarks is prohibited without the express consent from Mitel and/or Unify. Contact our legal department at iplegal@mitel.com for additional information.

For a list of the worldwide Mitel and Unify registered trademarks, refer to the website: <http://www.mitel.com/trademarks>.

Software update

During a software update, the phone must not be disconnected from the power supply unit or the LAN. An update action is indicated by messages on the display and by flashing LEDs.

Care and cleaning instructions

- Never spray the phone with liquids as the penetrating fluids can lead to malfunctions or may damage the device.
- Do not use substances such as alcohol, chemicals, solvents or scouring agents, as these substances can lead to surface damage.
- Clean the phone with a soft and slightly damp cloth.

Online documentation

This document along with additional information is available online at:
<https://www.unify.com/> → Support.

Technical notes, current information about firmware updates, frequently asked questions and lots more can be found on the Internet at: <https://wiki.unify.com/>.

Location of the telephone

- The telephone may only be operated using the LAN cabling internally in the building. The device should be connected to the IP infrastructure using a shielded LAN cable: Cat-5 for 100 Mbps or Cat-6 for 1000 Mbps. Make sure in the building installation that this cable shielding is earthed.
- When using the additional Wi-Fi dongle CP10 when connecting the phone to the network, make sure that the network security standards (e.g. encryption) and availability are met
- The telephone is designed for operation in a protected environment within a temperature range of 5 °C to 40 °C.
- Do not install the telephone in a room where large quantities of dust accumulate; this can considerably reduce the service life of the telephone.
- Do not expose the telephone to direct sunlight or any other source of heat, as this is liable to damage the electronic components and the casing.
- Do not install the telephone in bathrooms or shower rooms.

Product-oriented environmental protection

Unify is committed in terms of its product strategy to bringing environmentally friendly products to market, taking account of the entire product life cycle. Unify strives to acquire the relevant environmental labels for its products in the event that the environmental label programs permit qualification for individual Unify products.

Energy Star



ENERGY STAR is a US Environmental Protection Agency voluntary program that helps businesses and individuals Save money and protect our climate through superior energy efficiency.

Products that earn the ENERGY STAR prevent greenhouse gas emissions by meeting strict energy efficiency criteria or requirements set by the US Environmental Protection Agency.

Unify is an ENERGY STAR partner participating in the ENERGY STAR program for Enterprise Servers and Telephony.

The Unify products OpenScape Desk Phones have earned the ENERGY STAR. Learn more at energystar.gov

License information

For further information about EULA (End User License Agreement) and Open Source licenses, consult your administrator or the web-based management (WBM).

Contents

Important information.....	2
Trademarks.....	2
Software update.....	2
Care and cleaning instructions.....	3
Online documentation.....	3
Location of the telephone.....	3
Product-oriented environmental protection.....	3
License information.....	4
General information.....	11
Displays for describing operation.....	11
Selecting and confirming actions.....	11
Setting the required option.....	11
About this manual.....	12
Service.....	12
Intended use.....	12
Telephone type.....	13
Speakerphone quality and display legibility.....	13
Repair and recycling concept, extending performance capability.....	13
Recycling and disposal of equipment in the Desk Phone family.....	13
Repair reliability and spare part supply.....	14
Expandability of the performance.....	15
Getting to know the Desk Phone CP210.....	16
The user interface of the phone.....	16
Navigation keys.....	17
Programmable function keys on the phone.....	18
Dialpad.....	19
Display.....	21
Idle mode.....	22
Mailbox.....	22
Messages.....	23
Voicemail.....	23
Mute key.....	23

Call lists.....	23
Settings menu.....	24
Ports on the underside of the phone.....	25
Threading the connection cables.....	26
How to use network connections.....	26
Using the USB port.....	27
Updating the phone.....	27

Telephone settings..... 28

Display.....	28
Setting the display contrast.....	28
Setting the display language.....	28
Audio.....	29
Adjusting the volume during a call.....	29
Adjusting the ringer tone.....	29
Adjusting the attention ring volume.....	29
Adjusting the speakerphone to the room acoustics.....	30
Call settings.....	30
Preventing and allowing call waiting (automatic camp-on).....	30
Muting the call waiting tone.....	31
Door opener.....	31
Configuring a speed-dial key.....	32
Activating or deactivating the night answer service.....	32
Settings that impact energy efficiency.....	33

Programming the function keys..... 34

Configuring function keys.....	34
Programming a procedure key.....	35
Configuring the pickup key.....	36
Configuring selected dialling keys.....	36
Deleting function key programming.....	37

Making calls..... 38

Receiving calls.....	38
Answering a call via the handset.....	38
Answering a call via the loudspeaker.....	38

Answering a call via the headset	38
Rejecting calls	39
Picking up a specific call for a colleague	39
Using the speakerphone	39
Accepting calls from the entrance phone and opening the door	40
Turning the microphone on and off	41
Ending a call	41
Dialling	41
Off-hook dialling	41
On-hook dialling	41
Dialling or correcting phone numbers	42
Dialling with the headset connected	42
Dialling with selected dialling keys	43
Making calls with a DSS key	43
Redialling a number	43
Using the caller list	44
Calling a contact from the internal system directory	44
Calling a contact from the directory	45
Dialling contacts from the call lists	46
Making calls using system speed-dial numbers	47
Dialling with speed-dial keys	48
Talking to an internal party with a speaker call	48
Automatic connection set-up (hotline)	48
Sending a message	49
Leaving an absence text	50
Deleting an absence text	50
Assigning a phone number (not for US)	50
Forwarding calls	51
Using variable call forwarding	51
Using call forwarding no reply	52
Using callback	52
Saving a callback	53
Accepting a callback	53
Viewing and deleting a saved callback	53
During a call	54
Switching to speakerphone mode	54
Switching to handset	54

Open listening in the room during a call.....	54
Using call waiting (second call).....	55
Saving a phone number.....	55
Calling a second party (consultation).....	56
Transferring a call.....	56
Parking a call.....	57
Holding a call.....	58
Conducting a conference call.....	58
Saving phone numbers for redial.....	59
Redialling a saved number.....	60
Using the second call feature.....	60
Activating tone dialling / DTMF suffix dialling.....	61
Making calls in an executive / secretary team.....	62
Lines.....	62
Line or trunk keys.....	62
Accepting calls with the line keys.....	63
Dialling with line keys.....	63
Placing a call on hold on a line key and retrieving the held call.....	63
Making calls on multiple lines alternately.....	64
MULAP privacy release.....	64
Direct destination selection keys.....	65
Calling a team member directly.....	66
Transferring a call in progress.....	66
Picking up a call for another team member.....	67
Forwarding calls on trunks.....	67
Transferring calls directly to the executive phone.....	68
Group call / hunt group.....	70
Activating or deactivating a group call.....	70
Picking up a call for another member of your team.....	71
Ringling group.....	71
Uniform Call Distribution (UCD).....	72
Privacy and security.....	74
Turning silent ringing on and off.....	74

Turning do not disturb on and off.....	74
Caller ID suppression.....	75
Locking the telephone to prevent unauthorized use.....	75
Locking another telephone to prevent unauthorized use.....	76
Saving your PIN code.....	76
User password.....	77
Changing the password.....	77

Other settings and functions..... 79

Call charges.....	79
Displaying call charges (not for US).....	79
Displaying call charges for another telephone (not for US).....	79
Dialling with call charge assignment.....	80
Appointment reminder function.....	80
Saving a timed reminder.....	80
Using timed reminders.....	81
Using another telephone like your own for a call.....	81
Logging on to the "guest telephone".....	82
Logging off from the "guest telephone".....	82
Fax details and message on answering machine.....	83
Resetting services and functions (system-wide cancellation for a telephone).....	83
Activating functions for another phone.....	84
Using system functions from outside DISA (Direct Inward System Access).....	84
Controlling connected computers / programs / telephone data service.....	86
Paging persons (not for US).....	86
Diagnostic data.....	87

Special networking functions..... 88

Leaving or joining a hunt group or group call.....	88
Setting up "Follow me" call forwarding.....	88
Using night answer.....	89
Ringling group.....	90
Opening a door.....	90

Testing the phone..... 92

Testing functionality.....	92
----------------------------	----

Checking the key assignment.....	92
Web interface (WBM).....	94
Launching the web interface.....	94
Administrator settings.....	94
Logging into the user settings.....	94
User menu.....	95
Licenses.....	95
Fixing problems.....	96
Responding to error messages.....	96
Troubleshooting.....	96
Overview of functions and codes (alphabetical).....	98
Index.....	105

General information

Displays for describing operation

Keys required to perform an action, such as  or  and the associated display text, are shown in the highlighted column on the left. The action is described in the main column on the right.

To improve the legibility of the user guide, the operating steps are not always shown in full.

The option "Contrast" is configured in the following example.

SELECTING AND CONFIRMING ACTIONS

Required operating steps with display text



Press the key on the left or right side.



Select an option in the menu or in lists using the navigator keys.

Volume

The required option is selected.



Confirm the selected option.

Shortened illustration in the user guide



Press the key on the left or right side.

Volume

Select and confirm the option shown (e.g. for settings the ringer volume).

SETTING THE REQUIRED OPTION

Required operating steps with display text

XXXX = x

The current value of the option is shown with more or fewer graduation marks following confirmation.



- Press the key on the left side to reduce the value of the setting.
- Press the key on the right side to increase the value of the setting.

Shortened instruction in the user guide



Keep pressing the keys until the desired result is achieved.

ABOUT THIS MANUAL

Icons used in the manual

Operations and settings that can be made both at the phone and over the web interface are indicated by an icon and page reference.



This icon refers to an operation or setting performed via the web interface.



This icon refers to an operation or setting performed directly on the phone.

Indicates important additional information in relation to handling.

Indicates required intervention by the Administrator.

Service

The service department can only help you if you experience problems or defects with the phone itself.

Should you have any questions regarding operation, your specialist retailer or Network administrator will be glad to assist you.

For queries regarding connection of the telephone, contact your Network provider.

If you experience problems or defects with the phone, dial the service number for your country.

Intended use

The Desk Phone CP210 is a desktop or wall-mounted unit designed for voice transmission and for connection to the LAN. It can also be used as a workstation device. The Desk Phone CP210 can also be connected to Wi-Fi with the additional Wi-Fi dongle CP10.

Any other use is regarded as unintended.

Telephone type

The identification details (exact product designation and serial number) of the telephone can be found on the nameplate on the underside of the base unit. Specific details concerning your communication platform can be obtained from your administrator.

Have this information ready when you contact our service department regarding faults or problems with the product.

Speakerphone quality and display legibility

- To ensure good speakerphone quality, the area in front of the microphone (bottom right of the telephone front panel) should be kept clear. The optimum distance is approx. 50 cm.
- Proceed as follows to optimize display legibility:
 - Turn the phone to tilt the display to ensure you have a frontal view of the display and avoid light reflections.

Repair and recycling concept, extending performance capability

This section contains additional information in accordance with the basic award criteria for the "Blue Angel" eco-label as specified in RAL-UZ 220. The CPx10 telephones comply with all legal requirements of the country in which they are marketed.

RECYCLING AND DISPOSAL OF EQUIPMENT IN THE DESK PHONE FAMILY

Return of Desk Phone waste equipment.

a) Legal and other foundations

The take-back of equipment and spare parts is based on

- EU Directive 2012/19/EU (WEEE),
- The German "Act Governing the Sale, Return and Environmentally Sound Disposal of Electrical and Electronic Equipment" (ElektroG),

- The criteria of the Blue Angel RAL UZ 220 for "Telephone systems and Corded Voice-Over IP Telephones".

b) Separate collection according to ElektroG

Users of electrical and electronic equipment are obliged to collect waste equipment separately and supply for proper disposal.

This waste equipment must not be disposed of together with unsorted municipal waste (normal household waste). Separate collection is a condition for reuse, recycling and efficient recovery of waste equipment and the basis for the recovery of materials.

c) Take-back according to the criteria of the Blue Angel

In addition to the legal requirements governing take-back of electrical and electronic equipment, Mitel Networks Corporation takes back the Desk Phone CPx10 telephones introduced on the market in Germany and manufactured after March 2014. Insofar as no direct collection of this waste equipment has been agreed, the Desk Phone end-of-life phones can be returned free of charge to the following address:

eds-r gmbh // rücknahmesysteme
Maybachstr. 18
90441 Nuremberg, Germany

d) Reuse, recycling and recovery

Attention is paid to ease of disassembly / recycling of the Desk Phone waste equipment as early as the product development stage.

- Reuse: The old appliances are repaired and refurbished and put into the spare parts cycle, where they are then reused.
- Recycling and recovery of Desk Phone CPx10 telephones that are no longer usable: Before further treatment, the end devices are roughly dismantled and fed into various recycling processes. The various metals are separated in special shredding plants for electronic waste. Copper and precious metals are further processed in refining. Aluminium and iron are separated and sent to the smelter.

REPAIR RELIABILITY AND SPARE PART SUPPLY

Mitel Networks Corporation guarantees repair support and spare part supply for up to 6 years following product discontinuation of the Desk Phone phones.

EXPANDABILITY OF THE PERFORMANCE


The functionality of all Desk Phone CPx10 phones can generally be extended by software updates.

If necessary, contact your administrator or system administrator or your sales partner of Mitel Networks Corporation.

Getting to know the Desk Phone CP210

The following sections describe the most frequently used controls and displays.

The user interface of the phone

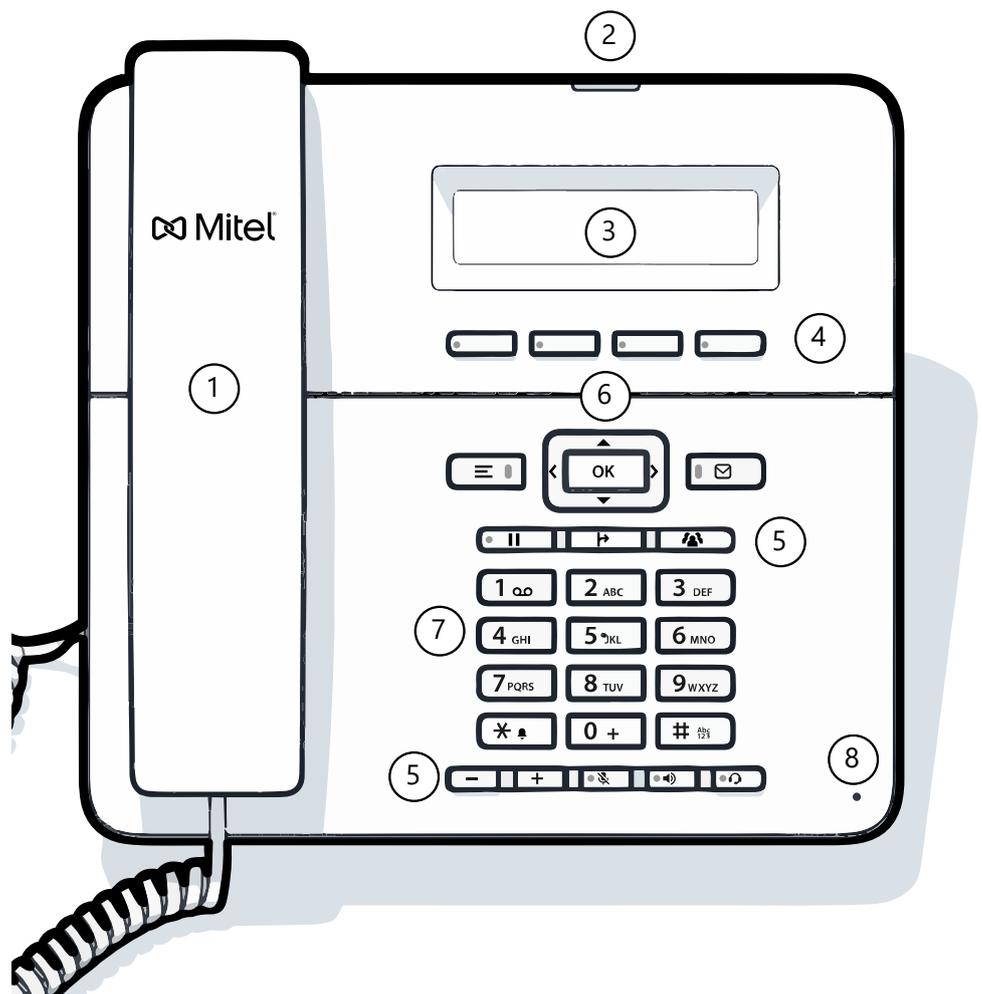


- 1 You can make and receive calls as normal using the **handset**.
- 2 The **status LED** displays the phone connection status. Incoming calls and new voice mails are visually signalled via the notification LED.

3	The display shows information during telephone operation (three lines with up to 32 characters each).
4	The programmable function keys can be set to various functions.
5	<p>The function keys (non-programmable) are assigned to the following functions:</p> <ul style="list-style-type: none"> : Provides access to the user menu for locally controlling the phone settings. : Allows voice mails to be managed. : Hold or retrieve the active call. : Transfer a call to another contact. : Enable access to the conference functions. : Activate or deactivates the speakerphone during an active call. : Activates or deactivates the headset. : Increases or decreases the speaker or headset volume. : Activates or deactivates the microphone. This prevents the other party from listening in, e.g. when consulting with someone else in the room or in case of background noise.
6	The navigation keys help you navigating through the various phone functions, applications and configuration menus.
7	The dialpad can be used to enter phone numbers and write text.
8	You can interact with calls with the microphone even when the handset is hung up.

NAVIGATION KEYS

This control allows you to move between input fields and navigate in lists and menus.

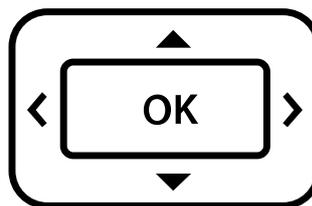

The pictograms for the navigation keys in this manual do not look identical to the navigation keys on the hardware.

Key / pictogram	Functions when key is pressed
	<ul style="list-style-type: none"> • In lists and menus: One level up • Entry selected: Cancel action • In input fields: Delete character to the left of the cursor
	<ul style="list-style-type: none"> • In lists and menus: One level down
	<ul style="list-style-type: none"> • In lists and menus: Scroll up • Press and hold: Skip to the start of the list or menu
	<ul style="list-style-type: none"> • In lists and menus: Scroll down • Press and hold: Skip to the end of the list or menu
	<p>With entry selected:</p> <ul style="list-style-type: none"> • Perform action • Confirm your selection

PROGRAMMABLE FUNCTION KEYS ON THE PHONE


Your Desk Phone has four fixed function keys (with LED) below the display, which you can program with different functions or phone numbers. A function can be programmed for each key as well as a phone number at the second level.

The status of a function is shown by the LED display for the corresponding function key. Depending on how they are programmed, you can use the keys as follows:


- Function keys, see "Programming the function keys" → page 34

Line and direct station selection (DSS) keys can only be programmed by the administrator via the program or service menu.

Meaning of LEDs on function keys

LED		Meaning of function key
	Off	The function is deactivated.
	Lights up green	The function is activated.
	Lights up red	The line is busy (line or DSS key).
	Blinking green	A Group pickup call is available. A call is incoming (line or DSS key).
	Blinking amber	A recall is active (only line key). A call is on hold (only line key).

DIALPAD

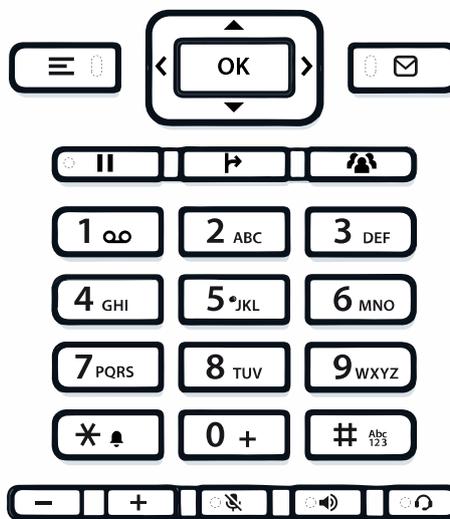

You can only use the digits 1 to 9 and 0 as well as the * and # characters when dialing a number.

In situations where text input is possible, for example when entering the user password, you can also use the dial keys to enter text in addition to the digits and special characters mentioned.



For this, press the key repeatedly until text input is displayed (see "Input editor" → page 21).

When entering text, all characters available for the key pressed and the character selected are briefly displayed.

Character overview

The character overview depends on the current language setting.

Key	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x	16x	17x
 ^(a)	1	(b)	:	=	\$	\	&	[]	{	}	%					
	a	b	c	2	ä												
	d	e	f	3													
	g	h	i	4													
	j	k	l	5													
	m	n	o	6	ö												
	p	q	r	s	7	ß											
	t	u	v	8	ü												
	w	x	y	9													
 ^(c)	.	+	1	#	,	?	'	*	+	-	()	@	/	:	_	
	0	+															
 ^(d)																	

(a) Special characters (not in 123 mode)

(b) Space

(c) Extended character

(d) Toggle between uppercase and lowercase and number entry

Multi-function keys

Key	Function during text input	Function when held down
	Types special characters	<ul style="list-style-type: none"> • 2 seconds: Ringer off • 3 seconds: Beep rather than ringer

Key	Function during text input	Function when held down
	Switches between uppercase and lowercase text and number entry: <ul style="list-style-type: none"> • "Abc" mode • "ABC" mode • "123" mode 	Activates the telephone lock
	Types special characters (not in 123 mode).	Calls the answering machine.

Input editor

Additional options are available in the text editor. This is used when programming a forwarding destination, for example. In this way, you can, for example, move the cursor freely and copy or insert text.

OK

Use the key to select further editor functions via the navigation keys and confirm each one of the following items:


- OK: Applies changes and closes the editor
- Delete: Deletes characters from right to left
- Cancel: Discards changes and exits the editor
- Mode (# can also be used here to switch):
 - 123: Digits only
 - ABC: Uppercase letters only
 - Abc: First letter in uppercase, subsequent letters in lowercase
 - abc: Lowercase letters only
- Move cursor left: Moves the cursor to the left
- Move cursor right: Moves the cursor to the right
- Copy: Copies the entire content to the clipboard
- Paste: Inserts the entire content from the clipboard at the cursor position

Display

The various screens displayed in the following sections depend on the configuration by the administrator. Some items may not be displayed if not configured.

IDLE MODE

If no calls are taking place or settings being made, the phone is in idle mode.

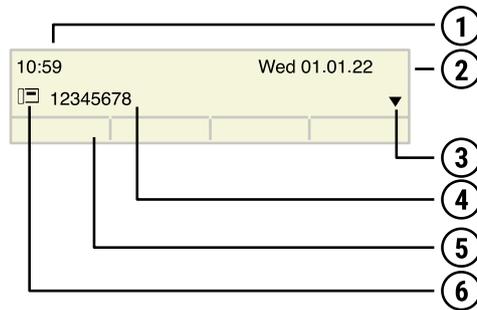

1	Time screen
2	Date and time
3	Idle menu navigation
4	Phone number
5	The function key labels display the assigned key settings. For each label, a maximum of eight characters can be displayed.
6	Status icon



Press this key to return to the idle mode display from a call list.



Press this key to return to the idle mode display from the **Program** or **Service** menu.

You can also configure a "Show phone display" key for both of these instances to access the idle mode screen.

Mailbox



Use the key to access messages from services. The following messages are saved:

- Callback requests
- Voicemail

MESSAGES

You can send short text messages to individual internal stations or groups. In idle mode, the following signals alert you to the presence of new messages:

- The key LED  lights up.
- A message such as "Messages received" is displayed.



Press the key shown. The most recent entry is displayed.

For a description of how to edit the entries, see "Sending a message" → page 49.

VOICEMAIL



Press the key shown.

If your telephone is connected to a voicemail system (such as Smart Voicemail), the  key lights up on incoming messages in addition to the notification LED.

An corresponding message is displayed.

MUTE KEY

The mute key switches the microphone on or off during an active call.



Press the key to enable muting. A notification "Mute on" is displayed for a few seconds and muting is enabled.



To disable muting, press the key again.



Press the key when the "Mute off?" is displayed. A notification "Mute off" is displayed for a few seconds and muting is disabled.

Call lists

Calls to the phone, unanswered calls, and dialled phone numbers are saved in "call lists".

Answered calls can also be saved (for more information, contact the administrator).

Your telephone stores up to ten calls in chronological order. Each call is assigned a time stamp. The oldest entry not yet deleted in the list is displayed first. Multiple calls from the same caller do not automatically generate new entries in the caller

list. Instead, only the most recent time stamp for this caller is updated and its number incremented.

Callers with suppressed numbers cannot be saved in the call list.

To call subscribers from the call lists, press the function key with the icon  or search a call list in the idle menu (see "Dialling contacts from the call lists" → page 46).

Information is displayed regarding the caller and the time at which the call was placed.

For a description of how to edit the call lists, see "Using the caller list" → page 44.

Settings menu

Menu title



Further entries are indicated by ▲ for the last entry or ▼ for the first entry.

The menu structure consists of several levels. The first line in this structure shows the menu currently selected while the remaining lines show the options for this menu. The arrow next to an entry indicates the availability of additional options for this entry.


The bottom line consists of "labels" that can be assigned to the function keys below the display.

Open the Settings menu by pressing the settings key.

- **User:** The options allow you to adapt the telephone to your individual requirements.
- **Admin:** Once the admin password is entered, this menu is available to the administrator.


Use the navigator keys to navigate through the menus as described in the section "Navigation keys" → page 17.

Ports on the underside of the phone

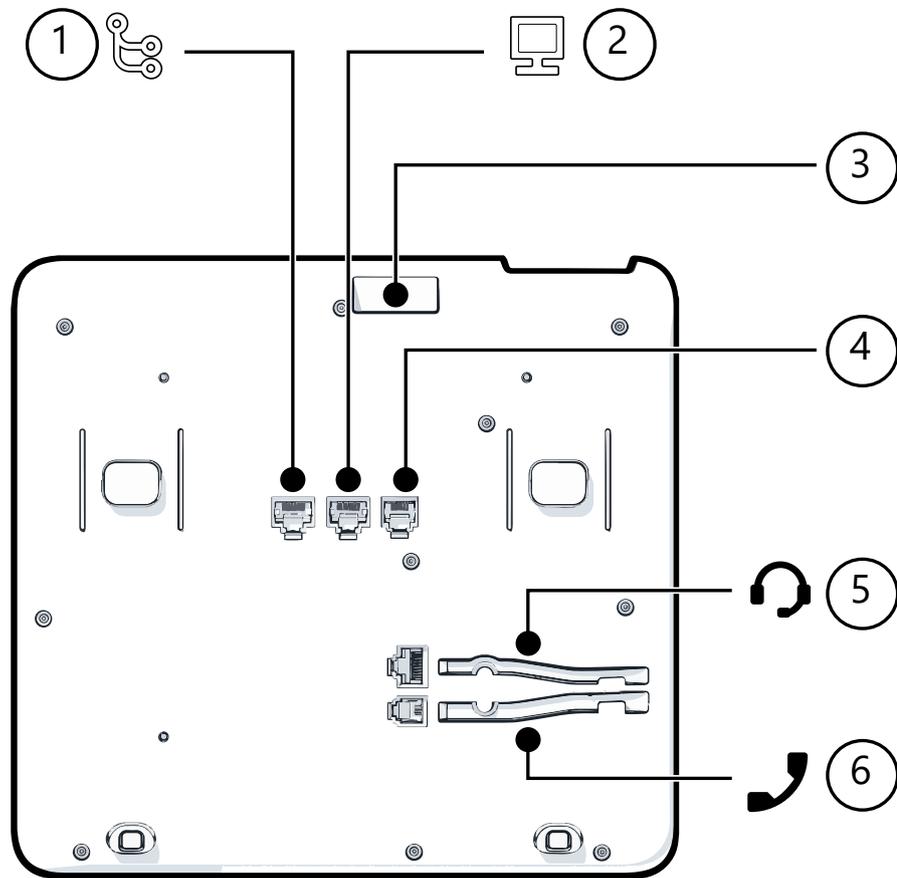

1	Network LAN port	2	PC LAN port
3	USB-A port	4	Optional power supply
5	Headset port	6	Handset port

THREADING THE CONNECTION CABLES

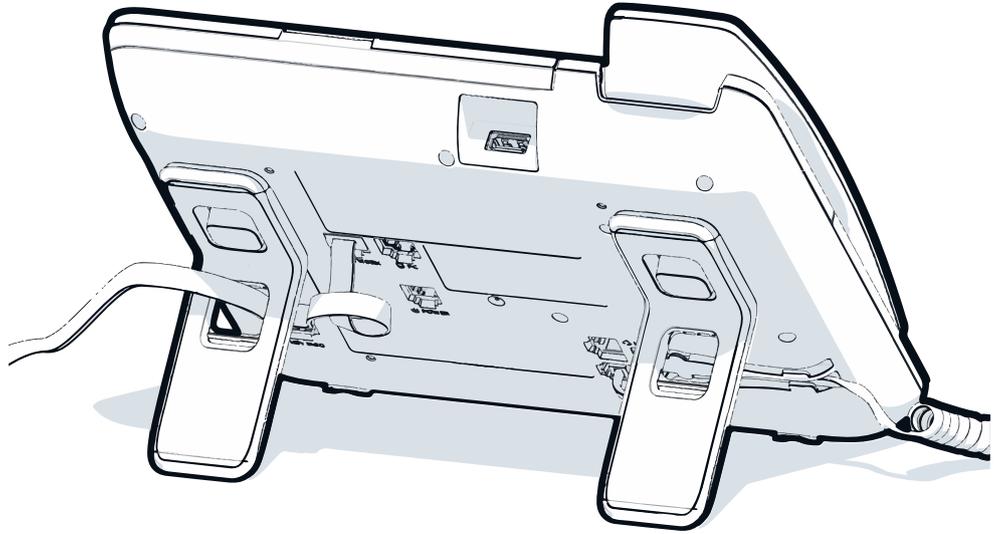

The picture shows an example of the Desk Phone series. Your actual phone may look different.


Thread the connection cables on the back of the phone through the holes in the stand. Arranged in this way, the device always has a secure stand.

HOW TO USE NETWORK CONNECTIONS

The OpenScape Desk Phone provides a 1 Gb/s Ethernet switch and a USB port. An internal Ethernet switch connects the PC LAN port of the phone with the network LAN port to the PC.

This option for connecting the telephone and PC must be activated on the telephone by the administrator.

Using this connection option saves one network port for each switch used and allows shorter network cables to be used when arranged correctly.

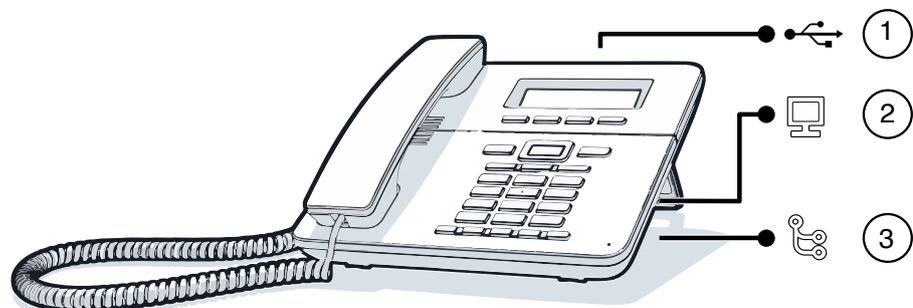

1	USB port	2	PC LAN port
3	Network LAN port		

USING THE USB PORT

The USB type A port above the display can be used for connecting the following items:

- A USB headset, not included.
- A mobile ION handset (DECT), not included.
- The Wi-Fi USB dongle CP10 as a replacement for the LAN connection cable, not included.

A Wi-Fi network is required (see the Admin Guide for more information on how to set up the Wi-Fi connection).

Do not unplug the USB dongle during calls, as this disrupts the network connection.

Updating the phone

The phone application (“software” or “firmware”) is regularly updated by the administrator to keep the safety and function of the software at the current level.

During a software update, the phone must not be disconnected from the power supply unit, the LAN line or the phone line.

An update process is indicated by messages on the display and by flashing LEDs.

Telephone settings

Any settings you are currently making on the phone will be interrupted by an incoming call. You can use the Settings key at any time to return to the point in the menu where you were interrupted, unless the time for the password has expired.

Display

SETTING THE DISPLAY CONTRAST

The display has multiple contrast levels that you can set according to your light conditions.



You can also configure this setting via the WEBM interface (see "Web interface (WBM)" → page 94).



User



Phone?

Display?

Contrast: =



Save & exit?

Press the key shown.

Select and confirm the option shown.

Enter and confirm the user password, if required.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Set and confirm the contrast.

Select and confirm the option shown.



More features?

*48 = Select language?

15 = Spanish?

Open the menu.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the language you wish to use (e.g. "Spanish").

Audio

Adjusting audio settings

You can optimize the audio settings on your phone for your work environment and according to your personal requirements.

ADJUSTING THE VOLUME DURING A CALL

You are conducting a call.

Raise or lower the volume. Keep pressing the key until the desired volume is set.

Save.

If you do not save, the original value is reset for the next call.

Press the key in idle mode.

Select and confirm the option shown.

ADJUSTING THE RINGER TONE

Press the key in idle mode.

Select and confirm the option shown.

Keep pressing the keys until the desired tone is set.

Save.

If you do not Save, the original value is reset for the next call.

ADJUSTING THE ATTENTION RING VOLUME

You receive an attention ring, for example, when a second call is imminent (see "Using call waiting (second call)" → page 55).

Press the key in idle mode.

Select and confirm the option shown.

Keep pressing the key until the desired volume is set.

Save.



Ringer volume?



Ringer tone?



Attention Ring Volume?



If you do not save, the original value is reset for the next call.

ADJUSTING THE SPEAKERPHONE TO THE ROOM ACOUSTICS

To help the other party understand you clearly while you are talking into the microphone, you can set the telephone to "Normal", "Room echoing" and "Room muffled" to suit the acoustics in your environment.

Press the button in idle mode.

Select and confirm the option shown.

Modify the room type. Keep pressing the button until the desired room type is set.

Save.

Setting the volume of the alert tone

The alert tone is output for example when you receive a second call while a call is in progress.

Press the rocker button in idle mode.

Select and confirm the option shown.

Modify the volume. Keep pressing the rocker button until the desired volume is set.

Save.

Call settings

PREVENTING AND ALLOWING CALL WAITING (AUTOMATIC CAMP-ON)

If this function has been configured, you can prevent or allow a second call from being signalled by automatic camp-on during an ongoing call (see "Using call waiting (second call)" → page 55).

Open the menu.

- Select and confirm the option shown.



Loudspeaker?



OK



Alert ring?



OK



#490 = Call wait.term.off?

*490 = Call wait.term.on?

- Optionally, select and confirm the option shown.

MUTING THE CALL WAITING TONE

You can suppress the advisory tone (approx. every six seconds) for second calls. A single special dial tone then alerts you to the waiting call.

Activating

Open the idle menu.

Select and confirm the option shown.

Deactivating

Open the idle menu.

Select and confirm the option shown.

DOOR OPENER

Activating the door opener

Open the menu.

Select and confirm the option shown.

Dial the entrance phone number.

- Enter the five-digit code. Default code = "00000".
- Optionally, select the displayed function and press "OK" to change the code.
- Select and confirm the option shown.
- To open the door without a doorbell ring, select and confirm the option shown.

Deactivating the door opener

Open the menu.

Select and confirm the option shown.

Waiting tone on?

Waiting tone off?

*89 = Door opener on?

3 = Change password?

1=enable with ring?

2=enable w/o ring?

*89 = Door opener off?

CONFIGURING A SPEED-DIAL KEY

You can program the keys **0 +** to **9 wxyz** with ten frequently used phone numbers. How to use the speed-dial keys is described in section "Dialling with speed-dial keys" → page 48.



Open the menu.

*92 = Change Speed Dial?

Select and confirm the option shown.



Press the key shown.



Press the required speed-dial key. If the key is already in use, the programmed phone number or name appears on the screen.

Change entry?

Confirm the option shown.



First enter the external code and then the external phone number.

Save & exit?

Confirm the option shown.

If you make a mistake

Previous?

Select and confirm the option shown. This deletes all numbers entered. The following options are available:

Next entry?

- Confirm the option shown.

Change entry?

- Select and confirm the option shown.

Delete?

- Select and confirm the option shown.

End?

- Select and confirm the option shown.

Activating or deactivating the night answer service

When night answer mode is active, for example during a lunch break or after office hours, all external calls are immediately forwarded to a specific internal telephone (night station). The night station can be defined by the Admin (= standard night answer service) or by you (= temporary night answer service).

Activating



Open the idle menu.

Night answer on?

Select and confirm the option shown.

=-default?



Save & exit?

Night answer off?

- Confirm the option shown (= standard night answer service).
- Optionally, enter the code (= standard night answer service).
- Enter the destination number (= temporary night answer service).

Confirm the option shown.

Deactivating

Select and confirm the option shown.

The Admin can also configure an "automatic night answer service" for your phone. The automatic night answer service activates at specific times depending on how it is programmed.

You can deactivate the automatic night answer service or replace it with a night answer service you configured (see above).

Settings that impact energy efficiency

You can actively reduce energy consumption by making the following settings on your telephone and therefore contribute in a way to protect the environment.

- You can reduce the ringer volume, display brightness and contrast – the default settings on delivery is 50 %.

Programming the function keys

The phone features a range of functions that can be attributed to the programmable function keys. The phone comes with programmable keys that can be programmed on two separate levels.

After programming a function key, a "label" must be assigned to each corresponding function. This label is displayed on the third line of the display (see "Idle mode" → page 22).

This feature must be activated using the administrator access via the local phone or the WBM.

The other possibility to access the second level function is by long pressing the assigned key for 5 seconds.

- The keys are preassigned in the as-delivered state (see).
- The keys can also be programmed via the WBM interface (see "Web interface (WBM)" → page 94).

Configuring function keys

The available functions depend on your configuration. If a function is missing, consult your administrator.

Example: Configuring a "conference key"

Open the menu.

Select and confirm the option shown.

Press a function key.

Confirm the option shown.

Select and confirm the option shown.


Confirm the option shown.

Confirm the option shown.

Pressing the key briefly activates the programmed function. For functions that can be switched on or off, such as second call, press once to switch the function on and press again to switch the function off.



Key function?



Change?

More features?

Conference?

Save & exit?

The LED display indicates the status of the function (see "Meaning of LEDs on function keys" → page 19).

Programming a procedure key

Phone numbers and functions that require further input, i.e. which contain several operating steps, can be saved on a key on your telephone. The admin must have granted the appropriate authorization.

Example

The function "Associated serv." together with the required input (phone number of the phone for which the call is to be made + phone number to be dialled) can be saved on a key (see "Activating functions for another phone" → page 84).

Phone numbers that require further input can also be saved (also refer to "Programming the function keys" → page 34).

Open the menu.

Select and confirm the option shown.

Press one of the keys you want to program with a procedure.

Confirm the option shown.

Select and confirm the option shown.

Enter procedure.

Example

***67 231 1234**

*** 6 MNO 7 PQRS**

- Dial code for the phone number to be dialled.

2 ABC 3 DEF 1

- Number of the phone for which the call should be made.


1 2 ABC 3 DEF 4 GHI

- The phone number to be dialled.

Confirm the option shown.



*91 = Prog. feature key



Change feature

Procedure key



Save & exit?

Previous?

End?

Program another key?

If you make a mistake

Select and confirm the option shown. This deletes all numbers entered.

Confirm the option shown.

Select and confirm the option shown.

Select the saved procedure by pressing the key.

Procedures with functions are activated by pressing the button and deactivated by pressing it again.

- You can also press the procedure key during a call to automatically send the saved digits as DTMF signals (see "Accepting calls from the entrance phone and opening the door" → page 40).
- For display messages when saving procedures, see "Responding to error messages" → page 96.

Configuring the pickup key


You can configure a pickup key for picking up calls (Pickup) in the call pickup group or for second calls.



Key function?

Open the menu.

Select and confirm the option shown.



Press the function key.

Change?

Confirm the option shown.

More features?

Select and confirm the option shown.

Call Pickup?

Select and confirm the option shown.

Save & exit?

Select and confirm the option shown.


Configuring selected dialling keys



*91 = Prog. feature key?

Open the menu.

Select and confirm the option shown.



Press one of the keys you want to program.

Change feature?

Confirm the option shown.

Redial key?



Confirm the option shown.

Enter the phone number.

If you make a mistake

Select and confirm the option shown. This deletes all numbers entered.

- Confirm the option shown.
- Optionally, select and confirm the option shown.

You dial the saved phone number by pressing the key (see "Dialling with selected dialling keys" → page 43). You can also Save a phone number during a call.

Previous?

End?


Program another key?



Destinations?

Redial key?

Direct station select?



Delete?

Deleting the phone number

Open the menu.

Confirm the option shown.

- Select and confirm the option shown.
- Select and confirm the option shown.

Press the required selected dialling or direct station selection key.

Select and confirm the option shown.

Deleting function key programming

Making calls

Receiving calls

The telephone rings if the ring tone is active. The status LED also flashes green. If transmitted, the calling party information (name, phone number) is displayed.

ANSWERING A CALL VIA THE HANDSET

The phone rings. The caller is displayed.

If the phone number is stored in the local telephone, the associated name is shown on the display (must be activated by the administrator).



Lift the handset.



Adjust the call volume, if necessary.

ANSWERING A CALL VIA THE LOUDSPEAKER

The phone rings. The caller is displayed.

The  key flashes green.

Confirm the option shown.

The  key lights up green.

- Optionally, press the key. The speakerphone function is activated.



Adjust the call volume, if necessary.

ANSWERING A CALL VIA THE HEADSET

The phone rings. The caller is displayed.

The  and  flash green.

Confirm the option shown.

- Optionally, press the key. The key lights up. The headset is activated.



Accept?

Accept?



Adjust the call volume, if necessary.

REJECTING CALLS

You can reject calls you do not wish to take. The call is then signaled on another definable telephone.

The phone rings. The caller is displayed.

- Confirm the option shown.
- Optionally, press the key (for configuration, consult your administrator).

If a call cannot be rejected, your telephone will continue to ring. The message "currently not possible" is displayed (e.g. in the case of recalls).

PICKING UP A SPECIFIC CALL FOR A COLLEAGUE

You hear another telephone ring.

Open the menu.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm until the required station is displayed.

- Confirm the option shown.
- If you know the number of the telephone that is ringing, enter it directly.


USING THE SPEAKERPHONE

A colleague addresses you directly over the speaker with a speaker call. You hear an advisory tone before the announcement. The other party's name or phone number appears on the screen. You can conduct the call with the handset or in speakerphone mode.

- Lift the handset and answer the call.
- Optionally, press "OK" to confirm your selection and answer the call.
- Optionally, press the microphone key.

Reject call?

Release



More features?

*59 = Pickup - directed?

Next?

Accept call?



Mute off?



- If hands-free answerback is **enabled** (see below), you do not need to switch on the microphone - you can answer directly. You can answer immediately in speakerphone mode.
- If hands-free answerback is **disabled** (default setting), follow the procedure described above. Placing a speaker call to a colleague (see "Telephone settings" → page 28).

Enabling and disabling hands-free answerback

Open the idle menu.

- Select and confirm the option shown.
- Optionally, select and confirm the option shown.

ACCEPTING CALLS FROM THE ENTRANCE PHONE AND OPENING THE DOOR

If an entrance phone has been programmed, you can use your phone to speak to someone at the entrance phone and to activate a door opener.

If you have the proper authorization, you can activate the **door opener**, enabling visitors to open the door themselves by entering a 5-digit code (using a DTMF transmitter or the keypad installed).

Speaking to visitors via the entrance phone

Prerequisite: The phone is called from an entrance phone.

- Lift the handset within thirty seconds. You are connected to the entrance telephone immediately.
- Optionally, lift the handset after more than thirty seconds.

Dial the entrance phone number.

Opening the door from your telephone during a call from the entrance telephone

Confirm the option shown.

Opening the door from your telephone without calling the entrance telephone

Open the menu.

Select and confirm the option shown.

Dial the entrance phone number.

For more information on setting up the phone with system networking, see "Opening a door" → page 90.



HF answerback on?

HF answerback off?



Open door?



*61 = Open door?



TURNING THE MICROPHONE ON AND OFF



To prevent the other party from listening in while you consult with someone in your office, you can temporarily switch off the handset microphone or the hands-free microphone.

ENDING A CALL

To end a call, you have the following options:



- Press the key. The key is no longer illuminated.
- Press the key. The key is no longer illuminated.
- Hang up the handset.
- Confirm if configured.

Disconnect?

After the call has ended (either by you or the remote party), end of call notification with information about the duration of the call is displayed.

Dialling

OFF-HOOK DIALLING



Lift the handset.



- Internal calls: Enter the phone number.
- External calls: Enter the external code and the phone number.

ON-HOOK DIALLING



- External calls: Enter the external code and the phone number.
- Internal calls: Enter the phone number.

Your system may also be programmed so that you have to press a configured "internal" key before you dial the internal phone number. You then do not have to enter an external code to call the external party.

The party you are calling answers via loudspeaker. The speaker key  lights up.

The other party answers with speaker

On-hook dialling activates the speakerphone mode.



- Optionally, lift the handset.

The called party does not answer or is busy



Press the key. The LED goes out.

DIALLING OR CORRECTING PHONE NUMBERS

You can enter the number without the number being dialled straight away. This means that you can correct the number if necessary.

It is only dialled when requested by you or after a set time has expired.



Enter the phone number and correct if necessary.

Dialling entered or displayed numbers



- Lift the handset.
- Optionally, confirm the option shown.

Please dial.



Dial the number.

Correcting phone numbers entered

A phone number can only be corrected as it is being entered. Phone numbers stored for number redial, for example, cannot be corrected.

Delete number?



Select and confirm the option shown. The last digit entered in each case is deleted.

Enter the required digit(s).

Cancelling en-bloc sending

- Select and confirm the option shown.

Cancel?



Optionally, press the key shown. The LED goes out.

DIALLING WITH THE HEADSET CONNECTED

Prerequisite: The headset is connected.



- Internal calls: Enter the phone number.
- External calls: Enter the external code and the phone number.

The key  illuminates.

DIALLING WITH SELECTED DIALLING KEYS

Prerequisite: You have saved a phone number on a selected dialling key (see "Configuring function keys" → page 34).

Press the key with the saved phone number.

If the phone number is saved on the second level, press the shift key first.

You can press the selected dialling key during a call and automatically initiate a callback (see "Calling a second party (consultation)" → page 56).

MAKING CALLS WITH A DSS KEY

Prerequisite: You have configured direct station selection (DSS) keys on the phone (see "Programming the function keys" → page 34 and "Configuring selected dialling / direct station selection keys" → page 1).

Press the corresponding function key.

If the party answers, activate speakerphone mode.

- Optionally, lift the handset.

REDIALLING A NUMBER

The last ten external phone numbers dialled are stored automatically.

If this feature is configured, the account codes entered are also saved (see "Dialling with call charge assignment" → page 80).

You can redial them by pressing a key.

Displaying and dialling saved phone numbers

Press the redial key.

Keep confirming until the phone number you want appears.

Select and confirm the option shown.

Party B

Direct station select

C

Next?

Call?

USING THE CALLER LIST

Retrieving the caller list

The administrator has set up a caller list for your telephone.

- Press the key to open the call list.

Optionally, open the idle menu.

Confirm the option shown.

To view calls, confirm each subsequent call displayed.

Dialling a phone number from the caller list

Select and confirm the option shown.

The caller is automatically deleted from the caller list when a connection is finally set up.

Displaying the call time

Select and confirm the option shown.

Displaying caller details

Select and confirm the option shown.

Removing an entry from the caller list

Confirm the option shown.

Ending retrieval

To end retrieval, the following options are available:

- Select and confirm the option shown.
- Press the settings key. The LED goes out.
- Press the speaker key. The LED goes out.

CALLING A CONTACT FROM THE INTERNAL SYSTEM DIRECTORY

The internal system directory of your communication system contains all phone numbers and system speed-dial numbers assigned to a name.



Caller list?

Next?

Call?

Time/date sent?

From: ^?

Delete?

End?



Consult the administrator to find out if one was configured for your system.

Prerequisite: Names have been assigned to the phone numbers stored in the system.

- Press the key.
- Optionally, lift the handset.

Confirm the option shown. A list with at most the first 50 entries is displayed.

- Scroll to next or previous entry.
- Optionally, enter the name you want to find, or just the first few letters, using the dialpad and confirm to search for the name.

Delete final letters, if necessary.

Show details such as different phone numbers.

Use the navigation key to reset the search.

Dialling the required entry

Confirm the option.

CALLING A CONTACT FROM THE DIRECTORY

Contacts can be selected from the corporate directory or personal directory.

Two options are provided for entering the characters via the dialpad. Either using a quick search, or by using a mobile phone, or via SMS.


This setting can be made in the main menu of the directory under "Setup menu"

Press the function key to open the directory.

- Mobile / SMS: Press the number key on which the required letter is located until the letter appears on the display.
 - After a brief pause select the next letter, etc. Example: For "b" press the number 2 key twice, for "z" press the number 9 key four times.
- To select a letter with a quick search, use the number key to select the corresponding character group from the table below, which contains this letter.
 - For example, to start with the initial uppercase letter E, select the number key 3.
 - If the second letter is n, select the number key 6.
 - If the next sequence is g, e and l, then select the number keys 4, 3 and 5.



Phonebook?



Character	Number key
aAbBcC2	2
dDeEfF3	3
gGhHiI4	4
jJkKlL5	5
mMnNoO6	6
pPqQrRsS7	7
tTuUvV8	8
wWxXyYzZ9	9
,;L_+ - / * { } [] () AND # ! ? \$ % 1	1
"Blank space" 0	0
Move forward	#
Delete character	*

DIALLING CONTACTS FROM THE CALL LISTS

Calling back missed calls

The LED on the function key for the call log lights up green to signal missed calls.

Press the key for the call list. The call list opens. You are immediately in the "Calls in queue" list.

Optionally, open the menu in idle status.

Select and confirm the list of missed calls.

If there are missed calls, the first missed call is displayed with date and time. You are informed if the subscriber is currently free or busy.

Select and confirm, as appropriate, until the required subscriber is displayed.


Select and confirm to dial the subscriber displayed.



Calls in queue?

Display next?

Call Sender?

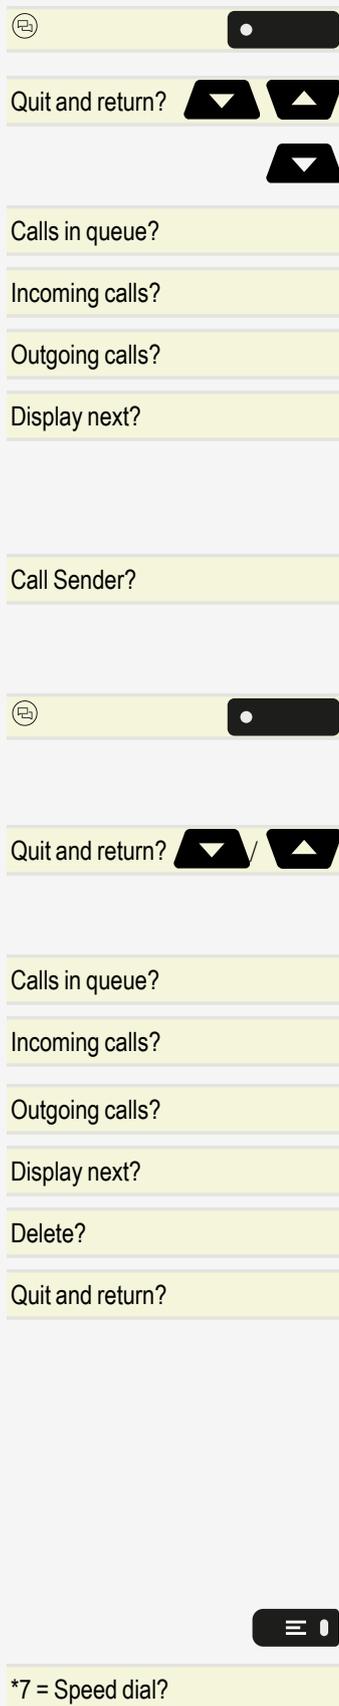

Calling dialled or answered subscribers

The call log is opened. You are immediately in the "Calls in queue" list.

- Select and confirm to select a different list.
- Optionally, open the idle menu.
- Select and confirm the list of unanswered calls.
- Optionally, select and confirm the list of answered calls.
- Optionally, select and confirm the list of dialed calls.

Select and confirm until the required entry is displayed.

If calls are available, the first call is displayed with date and time. You are informed if the subscriber is currently free or busy.

Select and confirm to dial the subscriber displayed.

Deleting an entry in the call lists

Press the function key for the call log.

The call log is opened. You are immediately in the "Calls in queue" list.

Select and confirm to select a different list if necessary.

- Optionally, open the idle menu in idle status.

Select and confirm the list of unanswered calls.

- Optionally, select and confirm the list of answered calls.
- Optionally, select and confirm the list of dialled calls.

Select and confirm until the required entry is displayed.

Select and confirm if you no longer require the entry.

Exit the call log by selecting and confirming twice.

MAKING CALLS USING SYSTEM SPEED-DIAL NUMBERS

Prerequisite: You know the system speed-dial numbers.

Open the menu.

Select and confirm the option shown.



Enter a three-digit speed-dial number.



If necessary, you can suffix-dial additional digits (e.g. the user's extension) at the end of the saved phone number.

If configured, a suffix is automatically dialed (e.g. "0" for the exchange) if no entries are made within 4 or 5 seconds.

DIALLING WITH SPEED-DIAL KEYS

Prerequisite: You have configured speed-dial keys (see "Configuring a speed-dial key" → page 32).



Open the menu.

*7 = Speed dial?

Confirm the option shown.



Press the key shown.



Press the required speed-dial key.

TALKING TO AN INTERNAL PARTY WITH A SPEAKER CALL

You can place a speaker call to an internal party using the loudspeaker on their telephone.



Open the idle menu.

*80 = Speaker call?

Select and confirm the option shown.



Enter the phone number.

For responding to a speaker call, see "Using the speakerphone" → page 39.

AUTOMATIC CONNECTION SET-UP (HOTLINE)

If this function is configured, the system automatically sets up a connection to a pre-set internal or external destination.



Lift the handset.

Depending on the setting, the connection is either set up **immediately** or only **after** a pre-set **period of time**.

SENDING A MESSAGE

You can send short text messages to individual stations or groups of stations with system telephones.

Creating and sending a message

Open the idle menu.



Send Message?

Select and confirm the option shown.



0 = Please callback?

Enter the internal phone number of the recipient or group.

- Select predefined text (can be changed by the admin) and confirm.
- Optionally, enter the code directly. The code is shown on your display with the corresponding message.

0 + ... 9 wxyz

Enter message text?

Select and confirm the option shown.



Enter the message text entry (up to 24 characters).

Send?

Confirm the option shown. The message is sent.

Transmitted text messages are saved as callback requests on system telephones with no display and on pulse or tone dialling telephones.

Displaying and deleting messages you have sent

Prerequisite: The recipient has not yet accepted a sent message.

Open the idle menu.



View sent message?

Select and confirm the option shown.

Display text?

Confirm the option shown. The text message is displayed.

Delete?

Select and confirm the option shown. The message is deleted.

Viewing and editing incoming messages

- The LED lights up. Press the key shown.
- Optionally, confirm the option shown. The sender's caller ID is displayed.



Display Messages?

Confirm the option shown. The text message is displayed.

Display text?

Viewing the transmission time

Confirm the option shown.

Time/date sent?

Calling the sender

Call Sender?

Select and confirm the option shown.

Delete?

Select and confirm the option shown.



Absence text on?

Select and confirm the option shown.

0 = Will return at:

- Select the predefined text and confirm.

The text can be adapted by the administrator.

- Optionally, enter the code directly. The code is shown on your display with the corresponding message.

Predefined messages with a colon can be completed by entering a digit.

0 + ... 9 wxyz

Enter message text?



Enter the message text (up to 24 characters).

Save & exit?

Confirm the option shown.



Absence text off?

Select and confirm the option shown.

LEAVING AN ABSENCE TEXT

You can leave messages or absence notices on your phone's display for internal callers who wish to contact you in your absence.

When you receive a call, the message appears on the caller's display.

Open the idle menu.

DELETING AN ABSENCE TEXT

Open the idle menu.

ASSIGNING A PHONE NUMBER (NOT FOR US)

If this function has been configured, you can selectively assign a specific number (DID number) to your telephone before making an external call. The assigned number then appears on the called party's display.



Open the menu.

Settings:

*41 = Temporary MSN?



Select and confirm the option shown.

Select and confirm the option shown.

Enter the DID number you wish to use.

Dial the external phone number.

Forwarding calls

USING VARIABLE CALL FORWARDING

You can immediately forward internal or external calls to different internal or external telephones ("destinations").

External destinations require special configuration in the system.

- When call forwarding is active, a special dial tone sounds when you lift the handset.
- If DID DTMF is active (consult your Admin), you can also forward calls to this destination. Destinations: Fax = 870, DID = 871, Fax DID = 872.
- If you are a call forwarding destination, your display will show the phone number or the name of the forwarding party on the upper line and that of the caller on the lower line.

For more information on special features if your telephone operates with system networking, see "Special networking functions" → page 88.

Activating call forwarding

- Press the key shown.
- Optionally, open the idle menu.



Forwarding on?

1=All calls?

2=external calls only?

3=internal calls only?



Save & exit?

Select and confirm the option shown. The following options are available:

- Confirm the option shown.
- Select and confirm the option shown.
- Select and confirm the option shown.

Enter the destination phone number.

Confirm the option shown. The phone number or the name of the forwarding destination is displayed. The LED of the call forwarding key flashes on the destination

phone.

Deactivating call forwarding

- Press the key shown.
- Optionally, open the idle menu.

Select and confirm the option shown.

USING CALL FORWARDING NO REPLY

Calls that are not answered after three rings (default setting) or received while another call is ongoing can be automatically forwarded to a specified telephone.

Open the menu.

Select and confirm the option shown.

Enter the destination phone number.

- Enter the internal phone number for internal destinations.
- Enter the external code and the external phone number for external destinations.

Confirm the option shown.

Deactivating call forwarding no reply

Open the menu.

Select and confirm the option shown.

- Confirm the option shown.
- Optionally, select and confirm to return to idle mode and not deactivate call forwarding.

If CFNR is activated, "CFNR on" appears briefly on the display after you hang up.

Using callback

You can request a callback if the internal station called is busy or if nobody answers. This also applies for external calls via exchanges. This feature saves you from having to make repeated attempts to reach the user.

You receive a callback with the following options:

Forwarding off?

*495 = CFNR on?

Save?

#495 = CFNR off?

Delete?

End

- When the other party is no longer busy
- When the user who did not answer has conducted another call

When configured, all callback requests are automatically deleted overnight.

SAVING A CALLBACK

Prerequisite: The internal station called is busy or nobody answers.

Confirm the option shown.

Callback?

ACCEPTING A CALLBACK

A user for whom a callback was saved is now no longer busy or has meanwhile made a call. Your telephone now rings and the following message appears on the display "Callback: ...".

The following options are available:

- Lift the handset.
- Optionally, press the key shown. The LED lights up.
- Optionally, select and confirm to accept the callback.

Answer?

VIEWING AND DELETING A SAVED CALLBACK

Open the idle menu.

Select and confirm the option shown.

View callbacks?

Select and confirm to display additional entries.

Display next?

Deleting a displayed entry

Confirm the option shown.

Delete?

Ending retrieval

The following options are available:

- Select and confirm the option shown.
- Press the key shown. The LED goes out.
- Press the key shown. The LED goes out.

End?

During a call

SWITCHING TO SPEAKERPHONE MODE

People present in the room can participate in your call.

Prerequisite: You are conducting a call via the handset.



Hold down the key and hang up the handset on the receiver. Then release the key and proceed with your call.

US mode

If the country setting is set to US, you do not have to hold down the loudspeaker key when replacing the handset to switch to speakerphone mode.



Press the key shown.



Hang up the handset. Proceed with your call.

SWITCHING TO HANDSET

Prerequisite: You are conducting a call in speakerphone mode.



Lift the handset. Proceed with your call. The hands-free microphone is switched off.

OPEN LISTENING IN THE ROOM DURING A CALL

You can let other people in the room join in on the call. Let the other party know that you have turned on the speaker.

Prerequisite: You are conducting a call via the handset.

Activating



Press the key shown. The LED lights up. The hands-free microphone remains switched off.

Deactivating



Press the key shown. The LED goes out.

USING CALL WAITING (SECOND CALL)

You can still be reached by a caller even if you are already conducting a call. An advisory tone and the message "From: ^" on the display alert you to the second call.

You can ignore or accept the second call. Before you accept the second call, you can end the first call or place it on hold for subsequent retrieval.

You can block the second call or the advisory tone (see "Muting the call waiting tone" → page 31).

Prerequisite: You are engaged in a phone call and hear an advisory tone (every six seconds).

Ending the first call and answering the waiting call



Hang up the handset. Your phone rings.



Lift the handset. Answer the second call.

Placing the first call on hold and answering the second call

Call waiting?

Select and confirm the option shown. You are connected to the second caller. The first party is placed on hold.

Ending the second call and resuming the first one

Quit and return?

- Confirm the option shown.
- Optionally, hang up the handset.



Call the first party again.



Lift the handset.

SAVING A PHONE NUMBER

You can Save your call partner's phone number for subsequent redialling from the caller list (see "Using the caller list" → page 44).

Prerequisite: You are conducting a call.

Save number?

Select and confirm the option shown.

CALLING A SECOND PARTY (CONSULTATION)

You can call a second party while a call is in progress. The connection to the first party is placed on hold.

Prerequisite: You are conducting a call.

Confirm the option shown.

- Enter and confirm the second party's phone number.
- Optionally, select the number from the caller list (see "Using the caller list" → page 44).
- Optionally, select the number from the directory (see "Calling a contact from the directory" → page 45).

Ending a consultation call

Confirm the option shown. The consultation call is disconnected. The call with the first party is resumed.

Switching to the held party (alternating)

Prerequisite: You are on a consultation call.

Select and confirm the option shown. You switch to the held party.

Ending an alternate operation

Select and confirm the option shown. The active call is disconnected and the held call is restored.

Combining the call partners in a three-party conference

Select and confirm the option shown.

- Optionally, press the key shown.

An alerting tone advises you that a conference call is now in progress between all three parties.

If voice encryption is not activated or not available on a conference party's phone, the entire conference is not secure. It may be indicated that the call is not secure.

Consult?



Release?

Toggle?

Release?

Conference?



TRANSFERRING A CALL

If your call partner wishes to speak to one of your colleagues, you can transfer the call.

Consult?



Transferring with announcement

Select and confirm the option shown.

Enter and confirm the required party's phone number. Announce the call partner.

Press the key shown. The person you were speaking to is now connected to the desired party.

Hang up the handset.

Transferring without announcement

Select and confirm the option shown.

Enter and confirm the required party's phone number.

Hang up the handset.

If a connection is not set up between the other two parties within a configurable time, e.g. 40 seconds, you will be called again. You are reconnected with the first party.

Start transfer?



PARKING A CALL

You can park up to ten internal or external calls. Parked calls can be displayed and picked up on another telephone. This feature is useful if you want to continue a call at another phone for example.

Prerequisite: You are conducting a call.

Open the menu.

Select and confirm the option shown.

Enter the number of the park position (0 – 9) and make a note of it. If the park position number you entered is not displayed, it is already in use. In this case, enter another one.

Retrieving a parked call

Prerequisite: One or more calls have been parked. The phone is idle.

Open the menu.

Select and confirm the option shown.

Enter the park position number you noted earlier.

If the park slot number you enter is not in use, you cannot retrieve the call.

*56 = Park a call?



#56 = Retrieve call?



If a parked call is not picked up, the call is returned to the telephone from where it was parked (recall) after a specific period of time.

HOLDING A CALL

You can place a call partner on hold. The call partner hears music on hold.

Press the key, if configured.

The key "Hold" must be configured as a programmable key.

- Optionally, press the key shown.

Press the key again to resume the call.

CONDUCTING A CONFERENCE CALL

In a conference call, you can talk to as many as four other parties at the same time. These may be internal or external users.

You can only add parties to or remove them from a conference if you initiated the conference.

Call the first party.

Select and confirm the option shown.

Call the second party. Announce the conference.

Select and confirm the option shown.

- Optionally, press the key shown.

An advisory tone sounds every 30 seconds to indicate that a conference is in progress (can be disabled, consult the administrator).

If the second party does not answer

Confirm the option shown.

Adding up to five parties to a conference

Confirm the option shown.

Call the new party. Announce the conference.

Select and confirm the option shown.

Hold



Start conference?



Conference?



Return to held call?

Add party?



Conference?



- Optionally, press the key shown.

Forming a conference

Prerequisite: You are conducting a consultation call (see "Calling a second party (consultation)" → page 56).

Select and confirm the option shown.



- Optionally, press the key shown.

Removing parties from the conference

Select and confirm the option shown. The first party is displayed.

Confirm as often as required until the desired party is displayed.

Select and confirm the option shown.

Leaving a conference

- Select and confirm the option shown.
- Optionally, hang up the handset if this feature is configured.

End conference

- Select and confirm the option shown.
- Optionally, hang up the handset if this feature is configured.

Conference?

View conf parties?

Next?

Remove party?

Withdraw?



End conference?



Save number?



SAVING PHONE NUMBERS FOR REDIAL

This phone number is saved under the idle menu entry "Redial" and overwrites previously saved phone numbers. Dial the saved number from the idle menu(see "Redialling a number " → page 43).

Saving the current phone number

Prerequisite: You are conducting a call. Your call partner's number is shown on the display.

Select and confirm the option shown.

Saving any phone number

Prerequisite: Your phone is in idle mode.

Open the menu.

Destinations?

Confirm the option shown.

Redial?

Select and confirm the option shown.

New contact?

Confirm the option shown.



Enter the phone number.

Save & exit?

Confirm the option shown.



Redial?

Select and confirm the option shown. The saved phone number is dialed.

REDIALLING A SAVED NUMBER

Prerequisite: You have saved a phone number (see "Saving phone numbers for redial" → page 59).

- Lift the handset.
- Optionally, press the key shown.

USING THE SECOND CALL FEATURE

Answering a second call via the menu

Prerequisite: You are conducting a call and the "DND Override" function is activated (see "Call settings" → page 30).

A second call is signalled via the call waiting tone. The caller hears the ring tone as if you were available.

Answer?

Select and confirm the option shown. You can talk to the second party. The connection to the first party is on hold.

Answering a second call with a function key

Prerequisite: "Call pickup" is activated (see "Call settings" → page 30). The "Pickup" function key is programmed (see "Configuring the pickup key" → page 36).



You are conducting a call. You hear an alerting tone.

Pickup



Press the "Pickup" function key. You are connected to the second caller. The first party is placed on hold.

Ending the second call and resuming the first one

Release?

Confirm to disconnect.

- Optionally, hang up the handset and lift it again.

ACTIVATING TONE DIALLING / DTMF SUFFIX DIALLING

You can transmit dual-tone multi-frequency (DTMF) signals to control devices such as an answering machine or automatic information system.

Open the menu.

Select and confirm the option shown.

You can use the keys **0 +** through **9 wxyz**, *** #** and **# 000** to transmit DTMF signals.

Ending the call also deactivates DTMF suffix dialling.

Your system may be configured so that you can start DTMF suffix-dialling immediately after setting up a connection.



*53=DTMF dialing?



Making calls in an executive / secretary team

Lines

A distinction is made between primary and secondary lines. Each of these line types can be used on a private or shared basis.

- **Primary line:** All multi-line telephones have a primary line. This line can be reached in the usual manner via your public phone number. Incoming calls to your phone number are signalled on this line.
- **Secondary line:** A secondary line on your phone is used as a primary line by another subscriber. Your primary line, which is configured on another telephone, simultaneously functions as the secondary line on that telephone.
- **Private line:** A line that is used by a single telephone. This line cannot be used as a secondary line by another telephone.
- **Shared line:** A line that is configured on multiple telephones. The line status is displayed for all telephones that share this line (if configured). If, for example, a shared line is being used by a telephone, a status message indicating that this line is busy is displayed on all other telephones.
- **Direct call line:** A line with a direct connection to another telephone. You can see the status of the line from the LED display.

Line or trunk keys

The programmable keys on multi-line phones function as line or trunk keys. Every key programmed as a line key corresponds to one trunk with the result that you can configure up to four trunks in an Desk Phone CP210.

As a team member, you can independently program the following functions on keys (see "Programming the function keys" → page 34):

- Direct destination selection
- Group call on or off
(not available on executive phone in an executive or secretary team)
- Ring transfer on or off
(only in an executive or secretary team)

Notification on display

The display of the status label will be controlled by the state of the key. Line or function key can be pulsing or inverted similar to a LED.

Status	Meaning
Standard	The line is in idle mode.
Pulsing ^(a)	<ul style="list-style-type: none"> • Incoming call on the line. • The line is on "Hold".
Inverted	The line is busy.

Accepting calls with the line keys

Prerequisite: Your phone rings and / or a text key label flashes quickly.

Press the line key above which the text label flashes quickly or is shown inverse.

Lift the handset.

- Optionally, use speakerphone mode.

Dialling with line keys

Press the free line key you wish to use to establish the connection.

Dial the phone number.

- If the party answers: Lift the handset.
- Optionally, use the speakerphone mode.

Placing a call on hold on a line key and retrieving the held call

Prerequisite: You are conducting a call via one of your group's trunks.


Holding

Press the key shown.

Line




Line





Release



- Optionally, hang up the handset.
- Optionally, press the "Release" key.

Depending on the configuration, this may be necessary so other team members can also pick up the call on hold.


Retrieving the call

Press the line key that is flashing slowly.

Line



Line 1



Press the line key. The first call party is on hold on the other trunk.

Line 2



Press the line key that is flashing slowly or is shown inverse. The second call party is on hold.

You can switch between lines as often as you wish. Press the line key each time.


MULAP privacy release

If configured, you can program a key on your phone with the function "Privacy Release" (see "Configuring function keys" → page 34).

If you program this key, you do not have to use the menu to set up a conference. Your team partner only has to press the flashing line key associated with your trunk on his or her phone to immediately join the conference.

You are conducting a call.

Priv Release




Press the key shown. The LED lights up.

Up to three team members can now join the conference.

Prerequisite: The trunk on which you are speaking is configured on the other phone as a line key.

Line



Press the flashing line key.



Direct destination selection keys

Each team member has a direct destination selection key (DDS key) for every other team member. This means that each team member can be reached directly by other team members at the touch of a button.

In contrast to a name key, a DDS key indicates the status of the other extension via the LED.

LED displays for DSS keys

There are two styles of DSS key status indication via LED:

- The OpenStage style (default)
- The CP style.



The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

OpenStage style (default)

LED		Meaning
	Off	<ul style="list-style-type: none"> • The team member's phone is idle • The team member's phone is logged off.
	Green, steady	<ul style="list-style-type: none"> • The team member is phoning
	Green, flash- ing quickly	<ul style="list-style-type: none"> • The team member is being called, please accept. • The team member has activated DND. • Another team member is being called and has not yet answered.
	Green, flash- ing slowly	<ul style="list-style-type: none"> • You are on call with the team member and you have placed the call on hold.


CP style

LED		Meaning
	Off	<ul style="list-style-type: none"> • The team member's phone is idle • The team member's phone is logged off.


LED		Meaning
	Red, steady	<ul style="list-style-type: none"> The team member's phone is busy The team member's phone is on hold by another station You are calling the team member's phone.
	Red, flashing	<ul style="list-style-type: none"> The team member has activated DND
	Green, blinking	<ul style="list-style-type: none"> The team member is calling you
	Green, flashing	<ul style="list-style-type: none"> The team member's phone is being called by another station A waiting call is signaled on the team member's phone and the call is from another station
	Amber, steady	<ul style="list-style-type: none"> You are on call with the team member and you have placed the call on hold.

If you want your phone to use the CP style, ask your administrator to change the DSS/Keyset indication setting accordingly.

CALLING A TEAM MEMBER DIRECTLY

Party B 

Press the DDS key.

Party B 

If the team member you want to reach is conducting another call, the DDS key on your telephone lights up. You can also make calls in this case if the call waiting function is permitted for the other member of the team (automatic camp-on).



If the party answers: Lift the handset.



- Optionally, use speakerphone mode.

TRANSFERRING A CALL IN PROGRESS

Party B 

Press the DDS key and announce the call if necessary.



Hang up the handset.

Release 

- Optionally, press the key shown.

PICKING UP A CALL FOR ANOTHER TEAM MEMBER

Party B



Press the flashing DDS key or line key.

Lift the handset.

- Optionally, use speakerphone mode.

Forwarding calls on trunks

You can immediately forward internal and / or external calls to your lines to different internal or external telephones (destinations).

If you activate call forwarding for a line, this will apply to all line keys of your group for this line.


Open the menu.

- Select and confirm the option shown.
- If available, press the key shown.


If no forwarding type and destination is configured, see "Programming the function keys" → page 34).

*501 = Forward Line: On?

Fwd Line



Line



12345:

Confirm the trunk number.

You have the following options:

- Select and confirm the option shown.
- Select and confirm the option shown.
- Select and confirm the option shown.

Enter the destination phone number.

- Confirm the option shown.

If available, press the key shown.

If no forwarding type and destination is configured, see "Programming the function keys" → page 34).

1 = All calls


2=external calls only

3=internal calls only



Save & exit?

Fwd Line




Deactivating call forwarding

Open the menu.




#501 = Forward Line: Off


Line 



Fwd Line 

Fwd Line 

Fwd Line 

Fwd Line P. 

Select and confirm the option shown.

You have the following options:

- Press the required line key.
- Enter the required trunk number.
- If available, press the key shown.

If you have activated call forwarding for a trunk, a special dial tone sounds when the line is seized.

Understanding LED messages on the "CFW MULAP"

- The LED for the "Fwd Line" key is off – call forwarding is not active for this trunk.
- The LED for the "Fwd Line" key is on – call forwarding is active for this trunk.
- The LED for the "Fwd Line" key flashes **slowly** - the trunk is the destination of call forwarding.

Transferring calls directly to the executive phone

Normally, all calls for the executive are audibly signalled only by the secretary phone.

You can set audible signalling so calls are only signalled acoustically by the executive phone or by a second phone assigned to it.

Prerequisite: There is a key programmed with the function "Ring Transfer" on your phone.

Activating

- Press the key shown. The LED lights up.
- Optionally, open the menu.

Ring Transfer 



*502 = Ring Transfer: On?

Line 




Select and confirm the option shown.

- Press the required line key.
- Optionally, enter the required trunk number.


Deactivating

Ring Transfer



#502 = Ring Transfer: Off?

Line



- Press the key shown. The LED goes out.
- Optionally, open the menu.

Select and confirm the option shown.

- Press the required line key.
- Optionally, enter the required trunk number.

(a) In this manual, flashing text labels are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

Group call / hunt group

If configured, your telephone is part of a team. The team consists of internal phones that are able to use certain functions.

For configuration of the hunt group, consult the administrator.

Activating or deactivating a group call

For more information on leaving a hunt group if your telephone operates with system networking via LAN, see "Ringing group" → page 90

If configured, you belong to one or more groups of stations, which can be reached via hunt group or group call phone numbers. Incoming calls are signalled one after the other (hunt group) or simultaneously (group call) on all phones in the group, until a group member answers the call.

Each station in the group can still be reached via its own phone number.

You can activate and deactivate the audible signal for a hunt group, group call or individual trunks in a group.

You are part of a hunt group or call group

Open the idle menu.




Leave hunt group?

- Select and confirm the option shown.

Join hunt group?


- Optionally, select and confirm the option shown.

Hunt group IN/OUT



- Press the key shown.

Hunt group IN/OUT



- Optionally, press the key shown.

You belong to multiple groups

Open the idle menu.




Leave hunt group?

Select and confirm the option shown.

Join hunt group?


- Optionally, select and confirm the option shown.

Hunt group IN/OUT



Press the key shown.

Hunt group IN/OUT



- Optionally, press the key shown.

301 X = Group name

If an "X" appears between group or trunk number (such as 301) and the group name, the audible tone is active for this group or trunk. No "X" means that the audible tone is deactivated.

You have the following options:

Next?

- Confirm the option shown. The next group or trunk number is displayed with a group name.

Leave hunt group?

- Select and confirm the option shown. The audible tone for the group or trunk displayed is deactivated.

Join hunt group?

- Select and confirm the option shown. The audible tone for the group or trunk displayed is activated.

#=Leave all groups?

- Select and confirm the option shown.
The audible tone for all groups and trunks is deactivated.

***=Rejoin all groups?**

- Select and confirm the option shown.
The audible tone for all groups and trunks is activated.

If you have activated the audible tone for another group or trunk, or deactivated the audible tone for all groups or trunks you belong to, you will hear a special dial tone when you lift the handset.

Picking up a call for another member of your team

You can use your own telephone to pick up calls for other telephones in your team, even while on a call (call pickup groups).

In contrast to the DDS function, you do not need to have programmed a DDS key (see "Direct destination selection keys" → page 65).

Prerequisite: Your telephone rings briefly. "Call for:" is displayed with the phone number or name of the originator. The phone number or name of the caller appears on the lower line.

Confirm the option shown.

Pickup - group?

Ringling group

You can have calls for your telephone signalled audibly at up to five other internal phones. The phone that answers the call first receives the call.

For more information on setting up a ringing group if your telephone operates with system networking via LAN, see "Ringing group" → page 90).

Saving, displaying and deleting telephones for the ringing group

Open the menu.

Select and confirm the option shown.

Follow the display prompts and enter the internal phone number.

If your phone belongs to a ringing group, your display will show the phone number or the name of the initiator on the upper line and that of the caller on the lower line.

Removing all telephones in a call ringing group

Select and confirm the option shown.

*81 = Ringing group on?



Ringing group off?

Uniform Call Distribution (UCD)

If configured, you may belong to a group of users (agents), to which calls are distributed.

An incoming call is always assigned to the agent idle the longest.

Logging on and off at the beginning and end of your shift

Open the menu.

Select and confirm the option shown.

- Confirm the option shown.
- Optionally, select and confirm the option shown.

To log on, enter your identification number ("Agent:"). Contact your Admin to find out what it is.

Logging on and off during your shift

Open the menu.

Select and confirm the option shown.

- Confirm the option shown.
- Optionally, select and confirm the option shown.

UCD?

*401=Log on?

#401=Log off?



UCD?

#402=Not available?

*402=Available?

Requesting and activating wrap-up time

You can request or activate wrap-up time to ensure you have enough time to wrap up the last call. Your phone is excluded from call distribution for a set period or until you log back on.



UCD?

*403=Wrap up on?

#403=Wrap up off?

Open the menu.

Select and confirm the option shown.

- Confirm the option shown.
- Optionally, select and confirm the option shown.

Turning the night service on and off for UCD



UCD?

*404=UCD night on?

#404=UCD night off?

Open the menu.

Select and confirm the option shown.

- Confirm the option shown.
- Optionally, select and confirm the option shown.

Displaying the number of waiting calls



UCD?

*405=Calls in queue?

Open the menu.

Select and confirm the option shown.

Confirm the option shown.

Privacy and security

Turning silent ringing on and off

If you do not wish to take calls, you can activate the ringer cut-off or silent ringing function. Calls are only identified by **one** ring signal and they are shown on the display.

Activating

Open the idle menu.

Silent ringing on?

Select and confirm the option shown.



- Optionally, hold down the key until the icon "Ringer off"  goes out.

Deactivating

Open the idle menu.

Silent ring. off?

Select and confirm the option shown.



- Optionally, hold down the key until the icon "Ringer off"  is displayed.

Turning do not disturb on and off

If you do not wish to take calls, you can activate do not disturb. Internal callers hear the ring tone and see the "Do not disturb" message. External callers are redirected to the attendant console. Your administrator can also set up call forwarding destinations for the "Do not disturb" function, to which you can forward your internal and external calls.

If your phone belongs to an ONS group (One Number Service / parallel call), do not disturb can be activated or deactivated on any phone in the ONS group and then be applied for all phones in the ONS group.

Prerequisite: Your administrator has activated the "Do not disturb" function for all Desk Phone stations in your system.

Open the menu.

Feature settings?

Select and confirm the option shown.



Do not disturb?

Select and confirm the option shown. The display indicates if "Do not disturb" is activated.

Activate?

Confirm the option shown.

Deactivate?

- Optionally, confirm the option shown.

A tone reminds you that "Do not disturb" is activated when you lift the handset.

Authorized internal callers automatically override the DND function after 5 seconds.

If the administrator has blocked the "Do not disturb" function in general for the Desk Phone, the "Do not disturb" menu option will not appear in the Program or Service menu.

Caller ID suppression

The caller ID display can only be suppressed for a subsequent call and the setting is not saved if the number is redialled.

Open the menu.

Select and confirm the option shown.

Confirm the option shown. You hear the dial tone.

Enter the phone number of the user. If the called party answers the call, your phone number will not be displayed.

Locking the telephone to prevent unauthorized use

You can prevent unauthorized parties from accessing certain functions on your phone during your absence, for example you can prevent external phone numbers being dialled or your mailbox being accessed. Consult your Admin to determine which functions are locked.

Locking the phone

Open the idle menu.

Select and confirm the option shown.

More features?**Call ID suppressed?****Lock telephone?**

When the phone is locked, a special dial tone sounds when the handset is lifted. Internally, users can make calls as normal.

Your phone can also be locked or unlocked by an authorized party (see "Locking another telephone to prevent unauthorized use" → page 76).

Unlocking the phone

Open the idle menu.

Select and confirm the option shown.

Enter the lock code (see "Saving your PIN code " → page 76).



Unlock telephone?



Locking another telephone to prevent unauthorized use

If configured, you can lock and unlock other telephones to prevent unauthorized access.

If a phone user locks his or her phone and forgets the PIN code, you can use this function to unlock the phone again.

Open the menu.

Select and confirm the option shown.

Enter the internal phone number of the phone you wish to lock or unlock.

Confirm the option shown.

- Optionally, select and confirm the option shown.



*943=Telephone Lock?



*=Lock telephone?

#=Unlock telephone?

Saving your PIN code

Enter a PIN code to select the following functions:

- For locking the telephone to prevent unauthorized use (see "Locking the telephone to prevent unauthorized use" → page 75).
- For using another telephone like your own (see "Using another telephone like your own for a call" → page 81).

You can save this code.

Open the menu.



***93=Change PIN?**

Confirm the option shown.

Enter the current five-digit PIN.

If you have not yet set a PIN, use "00000" as the initial PIN.



Enter the new PIN.



Re-enter the new PIN.

If you forget your code, consult the administrator, who can reset your code.

User password

Your password protects your individual configurations. The administrator may have configured the following settings:

- The password is deactivated: You do not have the option of configuring user settings. The message "Password is disabled" is displayed.
- The password is temporarily locked: You do not have the option of configuring user settings at this time. The message "Password is suspended" is displayed.
- After initially logging on to a user area, you may have to replace the default password with a new password.
- A password can have a predefined period of validity: You will have to create a new password when the period ends. The message "Password warning" will alert you to this at the appropriate time. The message "Password has expired" appears when the validity period is over. Confirm "Password must be changed" and change the password as described in this section.
- If you repeatedly enter the wrong password (2 to 5 times), additional attempts are blocked. You can make another attempt after a predefined time.
- It is possible that you will not be able to re-use a previously used password for a period of time, which means you have to create another "new password".

The administrator can tell you about the rules for what and how many characters can or must be used in the password.

CHANGING THE PASSWORD

The preset password "000000" corresponds to a blank password. In other words, the phone cannot be locked and the user menu is **not** password protected.



You must configure this setting via the WBM interface (see "Web interface (WBM)" → page 94).

Other settings and functions

Call charges

DISPLAYING CALL CHARGES (NOT FOR US)

For the current call

If you want to display call charges as they occur during a chargeable call, the admin must request this option from the network operator.

Call charge display must be requested from the network operator and configured by the admin.

Depending on the setting, call charges are displayed during or after a call.

Depending on the network operator, free external calls are also displayed. The message "Free of Charge" appears on the screen either before or during the call.

If the cost indication facility has not been installed, the display will show the dialed phone number and / or the duration of the telephone call.

If a call is forwarded, call charges are assigned to the destination of the call transfer operation.

For all calls and for the last call

Connection charges for the last chargeable call made are displayed first. After five seconds, the accumulated connection charge (total) is displayed.

Open the menu.

Select and confirm the option shown.


DISPLAYING CALL CHARGES FOR ANOTHER TELEPHONE (NOT FOR US)

If configured, you can also display and print information on chargeable calls for other phones.

Prerequisite: You have programmed the function "View call charges" on a key (see "Configuring function keys" → page 34).



*65=Show call charges?

View call charges 

Next

Print

Delete

Add'l information

End



*60=Account code?



#=Save & exit?



The LED lights up to indicate that you have conducted a chargeable call since the last time you viewed the charges.

Press the key shown. Chargeable calls are displayed.

Press to display further chargeable calls.

Select and confirm the option shown.

- Optionally, select and confirm the option shown.
- Optionally, select and confirm the option shown.
- Optionally, select and confirm the option shown.

DIALLING WITH CALL CHARGE ASSIGNMENT

You can assign external calls to certain projects.

Prerequisite: The administrator has defined the account codes.

Open the menu.

Select and confirm the option shown.

Enter the account code.

Press this key, if required.

- Optionally, confirm the option shown.

Enter the external phone number.

You can also enter the account code in the same way during an external call.

Appointment reminder function

You can configure your phone to call you to remind you about appointments. You must save the required call times to do this.

You can enter a single appointment that will take place in the next 24 hours or you can enter a daily recurring appointment.

SAVING A TIMED REMINDER

Open the menu.

*46=Alarm call on?



2 ABC

or

7 PQRS

One time only?

Daily?

Save & exit?



#46 = Alarm call off?

Delete?

End?

Reminder:



*508=Temporary Phone?

Confirm the option shown.

Enter a 4-digit time such as "0905" for "9:05" (= 9.05 am) or 1430 for 14:30 (= 2.30 pm).

If the selected language is "US English" you can enter the code 2 for "am" or 7 for "pm" (also refer to "Setting the display language" → page 28).

Confirm the option shown.

- Optionally, select and confirm the option shown.

Confirm the option shown.

Deleting and checking a saved appointment

Open the menu.

Confirm the option shown.

Confirm the option shown.

- Optionally, select and confirm the option shown.

USING TIMED REMINDERS

Prerequisite: You have saved a reminder. The saved time is approaching.

The phone rings. The appointment time is displayed.

Lift the handset.

Hang up the handset.

- Optionally, press the speakerphone key twice.

If you do not lift the handset, the phone rings several more times and "Reminder" is displayed before the reminder is deleted.

Using another telephone like your own for a call

Other parties can temporarily use your phone like their own for an outgoing call.

Open the menu.

Select and confirm the option shown.



Enter the phone number of the other user.



Enter the other user's code (see "Saving your PIN code" → page 76).

Change PIN?

If the other user has not set a PIN, he or she is prompted to do so on his or her phone.




Dial the external phone number. This state is cancelled as soon as the call is ended.

LOGGING ON TO THE "GUEST TELEPHONE"

Log on to the "guest telephone" with a mobile phone number. The telephone behaves like your own in terms of cost allocation, key programming, call forwarding, etc.

Prerequisite: A mobile connection with a dedicated phone number and password has been configured for you. The key "Mobile Login" is configured on the phone, if appropriate.

Mobile Login



Press the key.

If a key is not configured:



Enter the code (e.g. *9419) for "Mobile Login Log on" (see "Overview of functions and codes (alphabetical)" → page 98). You see the prompt "New number".



Enter the mobile phone number.

You are prompted to enter the "Code for nnn" (e.g. 834).



- Enter the code and confirm, if required.



Optionally, press the key shown.

Entry complete

Confirm the option shown. The log-on procedure begins. Your mobile phone number will appear on the left of the display when you are correctly logged on (see "Display" → page 21).


If you want to move your connection from the first "guest telephone" to a second "guest telephone", log on to the second "guest telephone" in the usual fashion.

If you now log on to a different telephone with your PIN, without having logged off from the other telephone, you will be logged off automatically.

LOGGING OFF FROM THE "GUEST TELEPHONE"

If you no longer need your connection on the "guest telephone" or if you want to switch to another telephone, log off from the "guest telephone".

Mobile Login



Press the key shown.

If a key is not configured:

Enter the code (e.g. #9419) for "Mobile Login Log off", (see "Overview of functions and codes (alphabetical)" → page 98). The log-off procedure begins.

The "guest telephone" is now available again with its original phone number, features and functions. Any call forwarding instruction set can now be deleted.


Fax details and message on answering machine

If a fax or answering machine is connected to your system and you have assigned the "Fax details" function to a programmable key, the key lights up when a fax or a message has been received (see "Configuring function keys" → page 34).

Deactivating signalling

Press the "Fax details" key. The LED goes out.

Fax details



Resetting services and functions (system-wide cancellation for a telephone)

A general reset procedure is available for initiated functions. The following functions are deleted, if enabled:

- Forwarding on
- Absence text on
- Ringing group on
- Suppress call ID
- Waiting tone off
- DND on
- Silent ringing on
- Display Messages
- View callbacks



Open the menu.

#0=Reset services?

Select and confirm the option shown.

Activating functions for another phone

If configured, you can activate and deactivate the following functions for other phones (Associated serv.):

- DND on/DND off, code *97/#97, see "Turning do not disturb on and off" → page 74
- Forwarding on, code *11, *12, *13/#1, see "Using variable call forwarding" → page 51
- Lock telephone/Unlock telephone, code *66/#66, see "Locking the telephone to prevent unauthorized use" → page 75
- Ringing group on, code *81/#81, see "Activating or deactivating a group call" → page 70
- Absence text on/Absence text off, code *69/#69, see "Leaving an absence text" → page 50
- Join hunt group/Leave hunt group, code *85/#85, see "Activating or deactivating a group call" → page 70
- Reset services, code #0, see "Resetting services and functions (system-wide cancellation for a telephone)" → page 83
- Night answer on/Night answer off, code *44/#44, see "Activating or deactivating the night answer service" → page 32
- Alarm call on/Alarm call off, code *46/#46, see "Saving a timed reminder" → page 80



Open the menu.

*83=Associated serv.?

Confirm the option shown.



Enter the internal phone number of the phone for which you wish to activate the function.



Enter the code (for example, *97 for DND on).

For any additional input, follow the instructions on your display.

Using system functions from outside DISA (Direct Inward System Access)

If configured, you can use an external phone like an internal station to set up an outgoing external connection via your OpenScape Business. You can also activate or deactivate the following system functions:

- Reset services, code #0, see "Resetting services and functions (system-wide cancellation for a telephone)" → page 83
- Forwarding on/Forwarding off, code *1/#1, see "Using variable call forwarding" → page 51

- Lock telephone/Unlock telephone, code *66/#66, see "Locking the telephone to prevent unauthorized use" → page 75
- Change PIN, code *93, see "Saving your PIN code" → page 76
- Send Message/Display Messages, code *68/#68, see "Sending a message" → page 49
- Absence text on/Absence text off, code *69/#69, see "Leaving an absence text" → page 50
- Ringing group on/Ringing group off, code *81/#81, see "Activating or deactivating a group call" → page 70
- Join hunt group/Leave hunt group, code *85/#85, see "Activating or deactivating a group call" → page 70
- Suppress call ID/Restore caller ID, code *86/#86, see "Caller ID suppression" → page 75
- Waiting tone off/Waiting tone on, code *87/#87, see "Muting the call waiting tone" → page 31
- Open door, code *61, see "Accepting calls from the entrance phone and opening the door" → page 40
- Door opener on/Door opener off, code *89/#89, see "Accepting calls from the entrance phone and opening the door" → page 40
- DND on/DND off, code *97/#97, see "Turning do not disturb on and off" → page 74
- Silent ringing on/Silent ring. off, code *98/#98 "Turning silent ringing on and off" → page 74
- Speed dial, code *7, see "Making calls using system speed-dial numbers" → page 47
- Associated serv., code *83, see "Activating functions for another phone" → page 84

Prerequisite: Your phone supports tone dialling (DTMF) or you can switch your phone to tone dialling. The phone is not connected to OpenScape Business.



Establish a connection to OpenScape Business. Enter the phone number.



Wait for the continuous tone (if necessary, switch phone to tone dialling) and enter the internal phone number assigned to you and the corresponding PIN code.



Enter the code (only required if programmed in the system).



Wait for the dial tone and enter the code, for example *97 for DND on. If necessary, make further entries; refer also to the user guide for dial pulse or DTMF phones.



- Optionally, dial the external phone number.

You can only perform one function or establish one outgoing connection at a time. The connection is cleared as soon as the function is successfully activated. In case of an external call, the connection is cleared as soon as one of the call partners hangs up.

Controlling connected computers / programs / telephone data service

If this function has been configured, you can control connected computers or programs running on them, such as hotel services or information systems, from your telephone.

Prerequisite: You have set up a connection.



Open the menu.

Confirm the option shown. For entering data, you are guided by the connected computer. However, depending on the configuration, you have to enter your data in one of the following ways:

- Input in en-bloc mode
- Input in online mode

Input in en-bloc mode

Enter data.

Complete entry.

- Optionally, confirm the option shown.

Input in online mode

The connected computer processes your entries directly.

Enter the code.

Enter data.



Entry complete?



Paging persons (not for US)

If radio paging equipment (PSE) is connected to your system, you can locate people via their pocket receivers. Pocket receivers signal a call request to the person you want to page. This person can then answer the page at the nearest phone.

Paging persons

To ensure that you can be found, you must have enabled one of the following options:

- A ringing group (see "Ringing group" → page 71)
- Call forwarding

- Call forwarding-no answer (service technician) to the internal phone number of your PSE (see "Using variable call forwarding" → page 51)

A call request is signalled automatically.

Responding to a page request

Lift the handset.

Enter the code.

Enter your own phone number.

Diagnostic data

This information overview in the user area of the service menu provides you with information on the current configuration of the telephone.

Press the key shown.

Select and confirm the option shown.

Enter and confirm the user password, if required.

Select and confirm the option shown. You see a numbered list of telephone parameters with the current settings.

Use the top and down arrows to scroll down and view all of the diagnostic information for entries that are displayed in two lines (i.e. DMS Client Status).

 You can see a more structured view of the list via the WEBM interface (see "Web interface (WBM)" → page 94).



User



Diagnostic information



Special networking functions

If your telephone is operating in an environment in which multiple Desk Phone telephones are interconnected, you are conducting a call via the network.

Leaving or joining a hunt group or group call

Prerequisite: You are part of a hunt group or group call in another Desk Phone (see "Activating or deactivating a group call" → page 70).



DISA internal?

Open the idle menu.

Select and confirm the option shown.



Enter the (DISA) phone number of the other Desk Phone.

OK

- Optionally, confirm your entry.



Enter the (DISA) phone number of your phone.

OK

Confirm your entry.

Leave hunt group?

To leave, select and confirm the option shown.

Join hunt group?

To join, select and confirm the option shown.

You belong to multiple groups associated with another Desk Phone



Enter the group number for "directed joining/leaving".

Setting up "Follow me" call forwarding

You can activate or deactivate call forwarding for your phone from other phones in the network.



DISA internal?

Select and confirm the option shown.



- Enter the (DISA) phone number of your Desk Phone.

OK

- Optionally, confirm your entry.



- Enter the (DISA) phone number of your phone.

OK

- Optionally, confirm your entry.

Activating

Open the idle menu.



Forwarding on?

Select and confirm the option shown.

1=All calls?

- Confirm the option shown.
- Optionally, select and confirm the option shown.
- Optionally, select and confirm the option shown.

2=external calls only?

3=internal calls only?



Enter the destination phone number.

Save & exit?

Confirm the option shown.

Deactivating

Open the idle menu.



Forwarding off?

Select and confirm the option shown.

Using night answer

If authorized, you can also define telephones in other Desk Phone systems as the night answer destination (see "Activating or deactivating the night answer service" → page 32).

Open the idle menu.



DISA internal?

Select and confirm the option shown.



Enter the (DISA) phone number of the Desk Phone to which the night answer phone is connected.

OK

Confirm your entry.



Enter the (DISA) phone number of the phone you wish to use to activate or deactivate night answer.

OK

Confirm your entry.

Activating

Open the idle menu.



Night answer on?

Select and confirm the option shown.



Enter the destination phone number (aka temporary night answer service).

Save & exit?

Confirm the option shown.



Night answer off?

Select and confirm the option shown.

Ringling group

You can have calls for your telephone signalled audibly at external telephones or at telephones in other Desk Phone systems (see "Ringling group" → page 71).

Saving, displaying and deleting telephones for the ringling group

Open the menu.



*81 = Ringling group on?

Select and confirm the option shown.

Add ext to group?

Select and confirm the option shown.

Add another ext?

- Optionally, select and confirm the option shown.
- Optionally, select and confirm, then follow the operating instructions.

Clear Display?



Enter the phone number.

= Entry complete?

Confirm the option shown.

Save & exit?

Confirm the option shown.

End?

Select and confirm the option shown.

Removing all telephones in a call ringling group

Open the idle menu.



Ringling group off?

Select and confirm the option shown.

Opening a door

If this feature is configured, you can also activate the door opener from other Desk Phone systems (see "Accepting calls from the entrance phone and opening the door" → page 40).

Open the idle menu.



DISA internal?



Select and confirm the option shown.

Enter the (DISA) phone number of the Desk Phone where the relay is to be activated.

OK

- Optionally, confirm your entry.



Enter the (DISA) phone number of the phone you wish to use to control the door opener.

OK

- Optionally, confirm your entry.

Open door?



Select and confirm the option shown.

Dial the entrance phone number.

Testing the phone

Testing functionality

You can test and determine your phone's functionality.

- Are all key LEDs working?
- Is the display working?
- Do all keys work?
- Are the loudspeaker, handset, ring volume, ring tone, alert tone and speakerphone mode functioning correctly?

The following may also be checked by the administrator:

- Device ID of the phone
- Software version
- Line power level

Prerequisite: The phone is in idle mode.

Open the menu.



More features?

Select and confirm the option shown.

*940=Phone test?

Select and confirm the option shown.

If everything is functioning correctly:

- All notifications on the phone are flashing.
- The phone number is displayed.
- All pixels are active on the display.
- The ring tone is audible.

Checking the key assignment


You can check the key assignment on your phone to determine which functions are assigned to which keys.

Open the menu.



*91=Prog. feature key

Select and confirm the option shown.



Press any key. The key assignment is displayed.

End

Select and confirm the option shown.

Web interface (WBM)

You can configure a number of settings for your phone via the “Web Based Management” (WBM). The information is transferred via a secure HTTPS connection.

Access to the web based management must be activated by the administrator.

Launching the web interface

1. To launch the interface, open a web browser and enter one of the following addresses:
 - **https://[IP address of the phone]**
[IP address of the phone] is the IP address of your phone.
 - **https://[Name of the phone]**
[Name of the phone] that was assigned by the administrator.
2. You might receive a certificate notification from the browser. Follow the instructions to download the certificate.
3. You will be prompted to configure a user password the first time you call up the WEBM interface (see). You must log in with this password the next time you want to open the “User settings”.

Administrator settings

This area lets you configure settings for administering your phone and the network environment. Access to the “Administrator settings” is protected by the administrator password.

For further information, consult the administrator or refer to the administration manual.

Logging into the user settings

The web interface homepage opens once you have entered and confirmed the phone’s IP address.

1. Enter the user password, if required.
2. Click a menu heading to display the individual menu entries.
3. Click the menu heading again to close the menu.
4. Click a menu entry to open the corresponding form.

5. Make the desired changes.
6. Click the corresponding button to save or discard your changes.

Button functions

- **Login:** Log in to the phone after you have entered the user password
- **Save & exit:** Apply changes
- **Reset:** Reset original values
- **Refresh:** Update the values.
- **Logout:** Log out from the phone

User menu

All settings in the user menu of the WBM interface can also be made via the user menu on the telephone.

Licenses

This area provides you with the information about EULA (End User License Agreement) and Open Source licenses. For further information, consult your administrator or refer to the administration manual.

Fixing problems

Responding to error messages

Incorrect entry.

- Possible causes: Station number is incorrect.
- Reactions: Enter correct station number.

Access denied.

- Possible causes: Locked function selected.
- Reactions: Apply to the administrator for authorization for relevant function.

Feature not available.

- Possible causes: Dialed a non-existent station number. Called phone is unplugged.
- Reactions: Enter correct station number. Call this station again later.

Number cannot be dialed.

- Possible causes: Dialed your own station number.
- Reactions: Enter correct station number.

Troubleshooting

Pressed key does not respond

Check if the key is stuck.

- If the phone is locked, selected dialling keys cannot be used. This also applies even if an emergency number is saved on this key.

Check if your telephone is locked when the following message is displayed:

"Phone locked. To unlock enter the PIN."

- If the phone is locked, enter your PIN to unlock it.

Keys with modified functions

The following keys may have been reprogrammed by your administrator:

- Start conference  , see "Conference" → page 1
- Transfer call  , see "Transferring a call" → page 1
- Hold active call  , see "Placing a call on hold" → page 1

Ask your administrator about the modified functions.

The phone does not ring

Check if the ringer is deactivated (see icon in the status bar on the display). If it is deactivated, activate the ringer.

You cannot dial a number

Check if the telephone is locked when the following message is displayed:

"Phone locked. To unlock enter the PIN. "

- If the phone is locked, enter your PIN to unlock it.

Other problems

- Consult your administrator. Customer service must clarify any problems that cannot be resolved.
- Contact partner in case of problems.
- Contact the administrator if a fault persists for more than five minutes.

Overview of functions and codes (alphabetical)

The following table lists all available functions, as shown on the display. Any programmed functions can be activated interactively (select and confirm) or via the Program / Service menu (select and confirm or enter a code).

Functions (Display)	Interactively	Via Settings 		Using key
			Code	
Call waiting	✓	✓	*55	X
Waiting tone off	✓	✓	*87	X
Waiting tone on	✓	✓	#87	X
Call wait.term.on		✓	*490	X
Call wait.term.off		✓	#490	X
Headset (Headset Working)				X
Release				X
Caller list	✓	✓	#82	X
Save number	✓	✓	*82	X
DND on	✓	✓	*97	X
DND off	✓	✓	#97	X

Functions (Display)	Interactively	Via Settings 		Using key
			Code	
UCD				
Log on		✓	*401	X
Log off		✓	#401	X
Available		✓	*402	X
Not available		✓	#402	X
Wrap up on		✓	*403	X
Wrap up off		✓	#403	X
UCD night on		✓	*404	X
UCD night off		✓	#404	X
Calls in queue		✓	*405	X
Absence text on	✓	✓	*69	X
Absence text off	✓	✓	#69	X
Associated serv.		✓	*83	X
Associated dial		✓	*67	X
Intrude	✓	✓	*62	X
Room monitor		✓	*88	X
En-bloc dialling				
Dial	✓			
Data I/O Service			*494	X
Reset services		✓	#0	X
Speaker call		✓	*80	X

Functions (Display)	Interactively	Via Settings 		Using key
			Code	
HF answerback on	✓	✓	*96	X
HF answerback off	✓	✓	#96	X
DISA				
DISA internal	✓	✓	*47	X
Discreet Call			*945	X
Shift Key (Layer)				X
Phone test		✓	*940	
Trace call		✓	*84	X
Temporary Phone		✓	*508	X
Join hunt group	✓	✓	*85	X
Leave hunt group	✓	✓	#85	X
IN hunt group	✓	✓	*85*	X
OUT of hunt group	✓	✓	#85#	X
Hotline				
Send Message	✓	✓	*68	X
View sent message	✓	✓	#68	X
Display Messages	✓	✓	#68	X
Mailbox				X
Keypad dialing		✓	*503	

Functions (Display)	Interactively	Via Settings 		Using key
			Code	
Conference	✓	✓	*3	X
Start conference	✓			
Add party	✓			
End conference	✓	✓	#3	
View conf parties	✓	✓		
Remove party	✓	✓		
Drop last conf. party			*491	
Show call charges (own tele- phone)		✓	*65	X
View call charges (third-party telephone)				X
Speed dial		✓	*7	X
Speed dial (station speed dial)		✓	*7*	X
Change Speed Dial (station)		✓	*92	X
Reserve trunk	✓			X
Toggle/Connect	✓	✓	*2	X
DTMF dialing		✓	*53	X
Mute on		✓	*52	X
Mute off		✓	#52	X
Mobile Login Log off			#9419	X
Mobile Login Log on			*9419	X
Night answer on	✓	✓	*44	X
Night answer off	✓	✓	#44	X

Functions (Display)	Interactively	Via Settings 		Using key
			Code	
Park a call		✓	*56	X
Retrieve call		✓	#56	
Page				
Answer page (not for U.S.)		✓	*59	
Account code		✓	*60	X
Enquiry	✓			X
Return to held call	✓	✓	*0	
Quit and return	✓	✓	*0	
Transfer/Accept	✓			
Set Callback	✓	✓	*58	X
View callbacks/Delete	✓	✓	#58	
Suppress call ID	✓	✓	*86	X
Restore caller ID	✓	✓	#86	X
Temporary MSN (not for U.S.)	✓	✓	*41	X
Ring Transfer: On		✓	*502	X
Ring Transfer: Off		✓	#502	X
Ringling group on		✓	*81	X
Ringling group off		✓	#81	X
Silent ringing on	✓	✓	*98	X
Silent ring. off	✓	✓	#98	X
Trunk flash (flash)		✓	*51	X
Select language		✓	*48	

Functions (Display)	Interactively	Via Settings 		Using key
			Code	
Lock telephone	✓	✓	*66	X
Unlock telephone	✓	✓	#66	X
Change PIN		✓	*93	
Phonebook	✓	✓	*54	X
Tel. data service			*42	
Alarm call on		✓	*46	X
Alarm call off		✓	#46	X
Door opener on		✓	*89	X
Door opener off		✓	#89	X
Open door		✓	*61	X
Transfer	✓			
Pickup - directed		✓	*59	X
Pickup - group	✓	✓	*57	X
Accept call	✓			
Forwarding on	✓	✓	*1	X
1=all calls	✓	✓	*11	X
2=external calls only	✓	✓	*12	X
3=internal calls only	✓	✓	*13	X
Forwarding off	✓	✓	#1	X
CFNR on		✓	*495	X
CFNR off		✓	#495	X
Redial				X

Functions (Display)	Interactively	Via Settings 		Using key
			Code	
Retrieve line		✓	*63	X
Telephone Lock		✓	*943	X

Index

A

Absence text	50
deleting.....	50
Activating door opener.....	40
Agents.....	72
Alternating	
in a team.....	64
Announcement.....	48
Answering machine.....	83
Appointment.....	80
Assigning a DID number.....	50
Associated service.....	84
Attention ring volume.....	29
Automatic call waiting	
preventing and allowing.....	30
Automatic connection setup.....	48

C

Call

accepting, group.....	71
Answering.....	38
distributing.....	72
entrance telephone.....	40
forwarding in a team.....	67
holding.....	58

Incoming.....	38
parking.....	57
picking up in a team.....	67
picking up, directed.....	39
rejecting.....	39
retrieving from park.....	57
Call charge assignment.....	80
Call charges	
for another telephone.....	79
for your telephone.....	79
Call duration.....	79
Call waiting	
allowing.....	30
preventing.....	30
Call waiting (camp-on)	
answering.....	55
Call waiting tone on/off.....	31
Callback.....	52
Caller list, using.....	44
Calling a second party.....	56
Calls in queue.....	72
CE marking.....	2
Central telephone lock.....	76
Charges	
for another telephone.....	79
for your telephone.....	79
Checking the key assignment.....	92
Conference.....	59

Connection setup

- automatic..... 48

Consultation..... 56

Contrast..... 28

D

Details, fax..... 83

Dialing

- from caller list..... 44
- from the internal phonebook..... 44
- using speed dial..... 47
- with last number redial..... 43
- with selected dialing keys..... 43

Direct destination selection..... 65

Direct Inward System Access..... 84

Direct station selection keys

- Dialing..... 43

Directory..... 45

DISA..... 84

Display contrast..... 28

Distributing calls..... 72

Do not disturb..... 74

Door opener..... 31

DTMF suffix dialing (tone dialing)..... 61

E

Entrance telephone..... 40

F

Fax details.....	83
Function key	
Programmable.....	18
Programming.....	34
Functions	
for another phone on/off.....	84
resetting.....	83
using from the outside.....	84

G

General information.....	11
Group call.....	70

H

Handsfree answerback.....	39
disabling.....	40
enabling.....	40
HiPath 5000	
night answer.....	89
opening a door.....	90
ringing group.....	90
Holding.....	58
Hot line.....	48
Hunt group.....	70

|

Idle mode.....	22
Internal phonebook.....	44
IP telephony.....	88

L

LAN telephony.....	88
Last number redial	
Redialing a Saved number.....	60
Leaving	
absence text.....	50
LED displays	
Direct station selection keys (DSS).....	19
Function keys.....	19
LED messages, understanding.....	65, 68
Line key.....	62
Locking/unlocking.....	75

M

Making mobile calls.....	81
Message(text)	
accepting.....	49
deleting/viewing.....	49
receiving.....	49
sending.....	49
Microphone.....	41
MULAP privacy release.....	64

N

Night answer..... 32

O

Open listening..... 54

Opening a door..... 40

Operating instructions..... 2

Operating steps

 programming a key..... 35

P

Parking a call..... 57

Personal identification number..... 76

Phone number

 assigning..... 50

Phone settings..... 79

Picking up (call)..... 39, 71

PIN..... 76

PIN, saving..... 76

Placing on hold

 in a team..... 63

Primary line..... 62

Privacy..... 74

Private line..... 62

Procedure

 programming a key..... 35

Programmable function key..... 18

Project calls..... 80
Project code, account code..... 80

R

Radio paging equipment (PSE)..... 86
Redialing
 from caller list..... 44
Redialing a number..... 43
Reset services..... 83
Resetting functions..... 83
Ring transfer
 in an executive/secretary team..... 68
Ringer tone..... 29
Ringing group..... 71

S

Safety notes..... 2
Saving appointments..... 80
Second call..... 60
 answering..... 55
Second level..... 43
Secondary line..... 62
Security..... 74
Settings..... 79
Shared line..... 62
Shift..... 43
Shift key..... 43
Silent ringing..... 74

Speaker call.....	48
Speakerphone mode.....	38, 54
Adjusting the room acoustics.....	30
Function.....	54
Speed dial	
dialing.....	47
saving station speed dialing.....	32
system.....	47
Station speed dialing.....	32
Suffix dialing	
DTMF tone dialing.....	61
System speed dialing.....	47
System-wide cancellation.....	83

T

Telephone	
locking.....	75-76
locking another phone.....	76
locking/unlocking.....	75-76
locking/unlocking centrally.....	76
using another phone like your own.....	81
Telephone data service.....	86
Telephone lock	
central.....	76
for a telephone.....	75-76
Temporary phone.....	81
Tone dialing.....	61
Troubleshooting.....	96

U

Uniform call distribution.....	72
User interface.....	16
User password.....	77

W

Web interface.....	94
Wrap-up time.....	73

mitel.com



© 12/2024 Mitel Networks Corporation. All Rights Reserved. Mitel and the Mitel logo are trademark(s) of Mitel Networks Corporation. Unify and associated marks are trademarks of Unify Software and Solutions GmbH & Co. KG. All other trademarks herein are the property of their respective owners.