Desk Phone - Factory reset
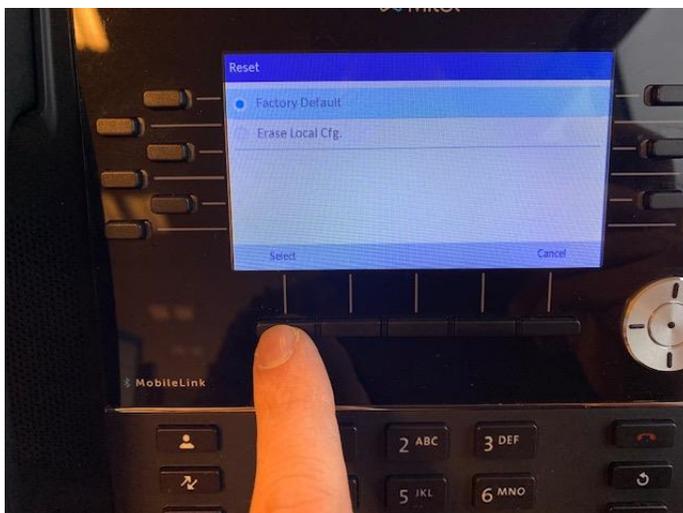
1. Press the "Settings" button

2. Select "Advanced"

3. Input the code "2580" on the keypad

4. Scroll to the last icon on the right "Reset"

5. Select "Factory Default"

6. Confirm with "Yes"

7. The phone will reboot 2 times. Do not disconnect the phone during reboots. After the second reboot the phone is ready to use.